MODELS AM-48 and AM-48E
PERSONAL TRANSMISSION TEST SET

INSTRUCTION MANUAL

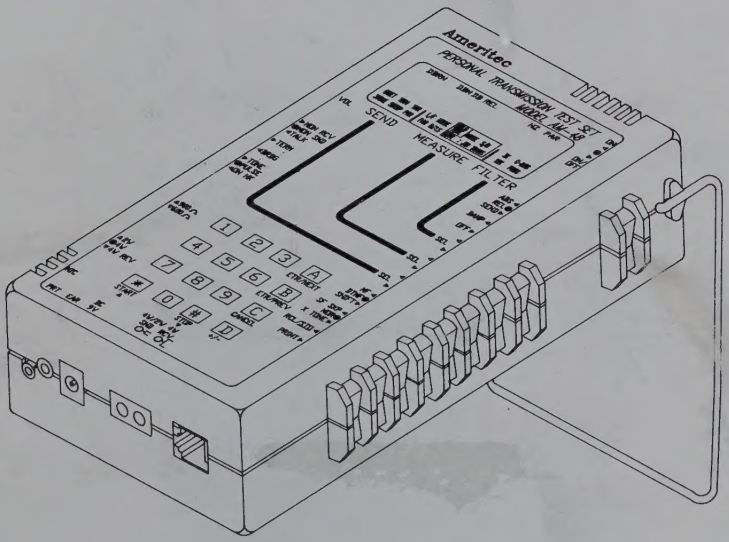

Ameritec
CORPORATION

9V 300mA DA

center −

outside +

red
green
} send

Blk
yellow
} Rcv

whi/Blue
Blue/white
} Send
standard

MODELS AM-48 and AM-48E
PERSONAL TRANSMISSION TEST SET

INSTRUCTION MANUAL

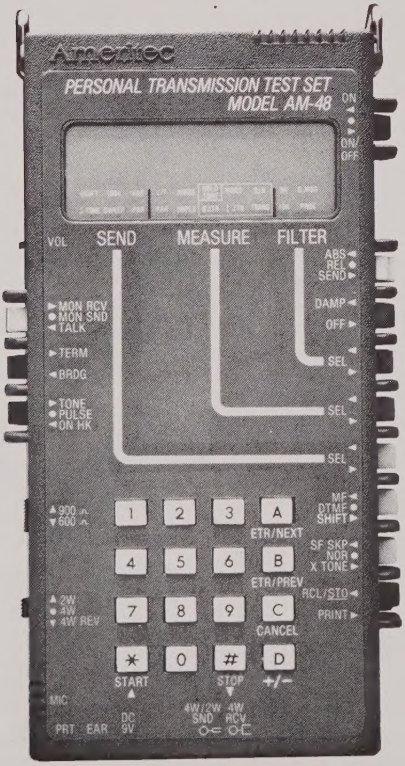

February 1992
Technical Data Subject to
Change without Notice.

For extra copies of this manual, order Part No. 18-0015.

AMERITEC CORPORATION
760 Arrow Grand Circle
Covina, California 91722
USA

Telephone (818) 915-5441
FAX (818) 915-7181

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_05248

CONTENTS

PARAGRAPH		PAGE
1.	INTRODUCTION	1-1
1.01	MANUAL OVERVIEW	1-1
1.02	GENERAL DESCRIPTION	1-1
1.03	TECHNICAL SPECIFICATIONS	1-3
2.	RECEIVING AND UNPACKING	2-1
2.01	INTRODUCTION	2-1
2.02	INSPECTION WHEN RECEIVED	2-1
2.03	VERIFICATION OF CONTENTS	2-1
3.	PHYSICAL AND FUNCTIONAL DESCRIPTION	3-1
3.01	INTRODUCTION	3-1
3.02	GENERAL	3-1
3.03	COMPONENT LOCATION	3-1
3.04	CONNECTORS AND CABLES	3-3
3.05	SWITCHES	3-5
3.06	KEYBOARD	3-10
3.07	DISPLAY	3-12
3.08	MICROPHONE/SPEAKER	3-14
3.09	HAND-HELD PRINTER	3-14
3.10	IMPEDANCE ADAPTOR	3-18
4.	POWER CONSIDERATIONS	4-1
4.01	GENERAL	4-1
4.02	BATTERY COMPARTMENT	4-1
4.03	BATTERY SELECTOR SWITCH	4-1
4.04	BATTERY INSTALLATION	4-3
4.05	BATTERY INFORMATION	4-3
4.06	AC POWER	4-3
4.07	POWER ON/OFF SWITCH	4-4
5.	SELF-TEST INSTRUCTIONS	5-1
5.01	INTRODUCTION	5-1
5.02	SELF-TEST SETUP	5-1
5.03	QUIET SEND MODE	5-3
5.04	SEND 1004 HZ	5-4
5.05	SEND PAR, Peak-to-Average Ratio	5-6
5.06	DIALING	5-6
5.07	PARAMETER VALUES FOR SEND SWEEP	5-8
6.	CONNECTION AND CONFIGURATION INSTRUCTIONS	6-1
6.01	INTRODUCTION	6-1
6.02	GENERAL	6-1
6.03	CONNECTORS AND CABLES	6-1
6.04	600 OHM/900 OHM LINE TERMINATION IMPEDANCES	6-6
6.05	IMPEDANCE ADAPTOR	6-7
6.06	CONFIGURATIONS	6-7

CONTENTS (Cont'd)

PARAGRAPH		PAGE
7.	OPERATING INSTRUCTIONS	7-1
7.01	INTRODUCTION	7-1
7.02	GENERAL INSTRUCTIONS AND NOTES	7-2
7.03	GENERAL OPERATING NOTES	7-2
7.04	FIGURE FORMAT	7-3
7.05	GENERAL SWITCH SETUP	7-4
7.06	MULTIPLE USE OF KEYS	7-5
7.07	MEMORY	7-6
7.08	GENERAL PROCEDURE TO SET NEW PARAMETER VALUES	7-8
7.09	SEND (GENERATOR) MODES AND PARAMETER SETTINGS	7-9
7.10	TYPES OF SEND SIGNALS	7-9
7.11	SEND QUIET	7-9
7.12	SET PARAMETERS FROM QUIET DISPLAY	7-9
7.13	SEND MOMENTARY VARIABLE TONES	7-11
7.14	SEND 1004 HZ	7-12
7.15	SEND CONTINUOUS VARIABLE TONE	7-12
7.16	SEND SET OF SLOPE TONES	7-12
7.17	SEND VARIABLE SWEEP	7-12
7.18	SEND PAR WAVEFORM	7-12
7.19	SEND MOMENTARY 2713 HZ TONE	7-12
7.20	GENERAL MEASURE MODE NOTES	7-16
7.21	ACCURACY OF MEASUREMENTS	7-16
7.22	ABSOLUTE AND RELATIVE MEASUREMENTS	7-16
7.23	SPECIAL MEASUREMENT REQUIREMENTS	7-17
7.24	TIMED TESTS	7-18
7.25	MEASURE MODES AND PARAMETER SETTINGS	7-19
7.26	MEASURE LEVEL AND FREQUENCY	7-19
7.27	MEASURE NOISE	7-19
7.28	MEASURE PAR	7-19
7.29	MEASURE IMPULSE NOISE	7-21
7.30	MEASURE NOTCHED NOISE	7-23
7.31	MEASURE S/N RATIO	7-23
7.32	MEASURE PHASE JITTER	7-23
7.33	MEASURE AMPLITUDE JITTER	7-26
7.34	MEASURE TRANSIENTS (including Impulse, Notched Noise, Phase Hits, Gain Hits and Dropouts)	7-26
7.35	MISCELLANEOUS OPERATIONS	7-30
7.36	STORE AND RECALL	7-30
7.37	DIALING	7-30
7.38	TALKING	7-32
7.39	PRINTING	7-33
7.40	AUTO STUDY RESULT SAVE	7-40
7.41	IMPEDANCE ADAPTOR MEASUREMENT CORRECTIONS	7-40
7.42	AUTO CALIBRATE	7-42

CONTENTS (Cont'd)

PARAGRAPH		PAGE
8.	EXPLANATION AND APPLICATION OF MEASUREMENTS	8-1
8.01	INTRODUCTION	8-1
8.02	UNITS OF MEASUREMENT	8-1
8.03	LEVEL (GAIN OR LOSS) AND FREQUENCY	8-3
8.04	IDLE CHANNEL NOISE	8-3
8.05	NOTCHED NOISE (NOISE WITH TONE)	8-3
8.06	SIGNAL-TO-NOISE (S/N) RATIO	8-4
8.07	P/AR MEASUREMENTS	8-4
8.08	GAIN SLOPE	8-6
8.09	IDLE CHANNEL IMPULSE NOISE	8-7
8.10	PHASE JITTER	8-7
8.11	AMPLITUDE JITTER	8-8
8.12	NOTCHED IMPULSE NOISE	8-9
8.13	PHASE HITS	8-9
8.14	GAIN HITS	8-9
8.15	DROPOUTS	8-9
9.	CIRCUIT DIAGRAMS	9-1
9.01	INTRODUCTION	9-1
9.02	AM-48 SIMPLIFIED BLOCK DIAGRAM	9-1
9.03	IMPEDANCE ADAPTOR SCHEMATIC	9-3
10.	WARRANTY AND SERVICE POLICY	10-1
GLOSSARY		11-1
INDEX		12-1
FOLDOUT (AM-48 Switch Identification Numbers)		13-1

ILLUSTRATIONS

FIGURE		PAGE
3-1	AM-48 Location of Components, Front View	3-2
3-2	AM-48 Connectors	3-3
3-3	AM-48 Cables	3-4
3-4	AM-48 Switch Identification Numbers	3-6
3-5	AM-48 Keyboard Identification Numbers	3-10
3-6	AM-48 Liquid Crystal Display	3-12
3-7	AM-48 SEND, MEASURE and FILTER Menus	3-13
3-8	Hand-held Printer (24-0014), Component Location	3-16
3-9	Impedance Adaptor	3-18
4-1	Battery Installation	4-2
4-2	Battery-Selector Switch	4-2
5-1	AM-48 Setup for Self Test (Looped Back)	5-1
5-2	General Switch Setup for Self Test	5-2
5-3	Quiet Send Mode Self Test	5-3
5-4A	Send 1004 Hz Self Test, Switch Settings	5-4
5-4B	Send 1004 Hz Self Test, Displays	5-5
5-5	Send PAR, Peak-to-Average Ratio	5-6
5-6	Dialing	5-7
5-7	Default Parameter Settings for SWEEP Send Mode	5-9
6-1	2-Wire AM-48 Line Connections	6-2
6-2	4-Wire AM-48 Line Connections	6-3
6-3	AM-48 Hand-held Printer Connection with AC Power	6-4
6-4	4-Wire End-to-End Testing	6-8
6-5	4-Wire Testing with Responder	6-10
6-6	2-Wire Network Testing with Responders	6-10
7-1	Parameter Settings from QUIET SEND Display	7-10
7-2	Parameter Settings from 1004 Hz and VARiable Tone SEND Displays	7-13
7-3	Parameter Settings from 3-TONE Slope and PAR SEND Displays	7-14
7-4	Parameter Settings from SWEEP SEND Display	7-15
7-5	L/F, NOISE and PAR MEASURE Displays	7-20
7-6	IMPLS MEASURE Displays	7-22
7-7	Notched NOISE and S/N Ratio MEASURE Displays	7-24
7-8	Ø JTR and ǂJTR MEASURE Displays	7-25
7-9	TRANS MEASURE Displays (2 Pages)	7-27
7-10	Recall and Store Operations	7-31
7-11	SEND Printouts	7-36
7-12	MEASURE Printouts, Absolute Measure Mode (2 Pages)	7-37
7-13	MEASURE Printouts, Relative Measure Mode	7-39
7-14	Impedance Adaptor Correction Value Memory Aid	7-41
7-15	AM-48 Auto Calibrate Prompts	7-43

ILLUSTRATIONS (Cont'd)

FIGURE		PAGE
8-1	Level and Noise Units of Measurement	8-2
8-2	Impulse Noise Thresholds and Blanking Intervals	8-8
9-1	Simplified Block Diagram of AM-48	9-2
9-2	Schematic Diagram of Impedance Adaptor	9-4
FOLDOUT	AM-48 Switch Identification Numbers	13-1

TABLES

TABLE		PAGE
1-1	AM-48 Technical Specifications	1-3
3-1	AM-47 Hand-held Printer, Technical Specifications	3-15
7-1	Setup Requirements for Different Keyboard Applications	7-5
7-2	Steps for [△] and [▽] Keys	7-5
7-3	User-Programmable Parameter Values Stored in Memory	7-7
7-4	Acceptable Holding Tone Ranges	7-17
7-5	Special Measurement Requirements	7-18
7-6	Setup Requirements for Dialing	7-32
7-7	MF and DTMF Tone Pairs	7-32
7-8	Impedance Adaptor Correction Values	7-38
8-1	P/AR Requirements of Telephone Lines	8-4

1. INTRODUCTION

1.01 MANUAL OVERVIEW

This instruction manual describes the Ameritec Corporation AM-48 and AM-48E Personal Transmission Test Sets.

NOTE

Throughout this manual, all references to the "AM-48" also apply to the "AM-48E", unless otherwise noted. See Para. 1.04 for a summary of the differences between the AM-48 and the AM-48E.

The other paragraphs in this Introduction section are:

1.02 General Description
1.03 AM-48 Technical Specifications
1.04 AM-48E Technical Specifications

The balance of the manual is divided into the following sections:

2. Receiving and Unpacking
3. Physical and Functional Description
4. Power Considerations
5. Self-Test Instructions
6. Connection and Configuration Instructions
7. Operating Instructions
8. Explanation and Application of Measurements
9. Circuit Diagrams
10. Warranty and Service Policy
11. Glossary
12. Index
13. FOLDOUT (AM-48 Switch Identification Numbers)

FOLDOUT

It is suggested that the foldout at the back of the manual be extended when using this manual. The FOLDOUT, a front view of the AM-48, defines the numbers of the switches which are used to identify the switches throughout this manual.

Glossary. Refer to the Glossary to become familiar with the terminology used in this manual.

Power. Be sure to read Section 4 and observe the WARNING in Para. 4.03 before powering up the AM-48.

Self Test. Perform the Self Test in Section 5 to

1. confirm that all AM-48 circuits and basic functions are working properly and
2. obtain "hands-on" experience with the AM-48 to learn how the controls operate.

Transmission Measurements. Note that Section 7, Operating Instructions, gives procedures to perform transmission measurements. For explanations and applications of the measurements, see Section 8.

1.02 GENERAL DESCRIPTION

Definition and Purpose. In one (1) hand-held unit, the AM-48 provides the field engineer with two (2) instruments:

1. a transmission test set and
2. a telephone "butt-set".

The transmission test set tests the integrity and quality of 2-wire or 4-wire voice and data transmission lines by sending selected analog signals and measuring standard parameters of the received signals. The telephone "butt set" enables the field engineer to dial up and speak back-and-forth with a field engineer at the far end of the system. The compact and light-weight AM-48 eliminates the need to carry multiple, bulky test sets.

Physical Features. The AM-48 is one of a family of Ameritec hand-held transmission test sets. Miniature components and Surface Mount Technology (SMT) are used to make the AM-48 extremely compact. About the size of a hand-held calculator, the AM-48 is the smallest full function voice and data transmission test set in the world. It weighs 23 ounces, including batteries.

Electronic parts on three (3) interlocking printed circuit boards, housed in high-impact injection-molded ABS plastic case.

The AM-48 is equipped with color-coded rocker and slide switch controls, keyboard, liquid crystal display, bantam and RJ11 line connections, printer port, AC adaptor jack, battery compartment, earphone connection, microphone, speaker, and a wire bail (to stand or hang the unit).

Functional Overview

AM-48 can send:

- any frequency from 200 Hz to 20 KHz @ -50 to +10 dBm
- continuous 3-tone slope (404, 1004, 2804 Hz)
- continuous, user-defined, sweep tones
- fixed 1004 Hz
- P/AR waveform
- momentary 2713 Hz for WECO 829 loopback

AM-48 can measure:

- level, -65 to +10.9 dBm (absolute or relative)
- frequency, 0 to 19,999 Hz
- idle channel noise
- noise with tone
- three-level impulse noise
- phase jitter
- gain jitter
- transients (dropouts, phase and gain hits, impulse noise)
- signal-to-noise (S/N) ratio
- peak-to-average ratio (P/AR)

Noise filters provided (each with optional 1010 Hz notch):

- C-Message (Psophometric for AM-48E)
- 3 KHz
- 15 KHz
- Program (Sound-weighted for AM-48E)

1.02 GENERAL DESCRIPTION, continued

Functional Overview, continued

Other features:

- High impedance bridge, 600 or 900 Ohm termination
- Display prompts help in set-up and testing sequences
- On-board memory can store and recall up to ten (10) user-defined test set-ups
- Dials: pulse, DTMF and MF
- Talk/Listen capability
- Printer interface for hard copy of set-up and test results
- Battery life: alkaline, 6 to 7 hours; NiCad, 3 to 4 hours
- NiCad batteries can be recharged without removing them from the unit

Testing Configurations. There are three (3) basic AM-48 configurations to test 2-wire/4-wire telephone/data communication lines:

1. End-to-end -- requiring two (2) AM-48s
2. Loopback
3. Testing with responders

For details, see Para. 6.06.

1.03 AM-48 TECHNICAL SPECIFICATIONS

AM-48 technical specifications (Table 1-1) are in four (4) parts:

1. General
2. Generator (Send)
3. Receiver (Measure)
4. Power/Physical

Table 1-1
AM-48 Technical Specifications

GENERAL

CHARACTERISTICS	SPECIFICATIONS
Measurements:	Level (-65 to +10.9 dBm)
	Frequency (0 to 19,999 Hz)
	Noise (10 to 99 dBrn) with 3 kHz flat, 15 kHz flat, CMSG, or Program noise-weighting filter.
	Notched Noise (10 to 99 dBrn) with 1010 Hz notch and any of above noise-weighting filters.
	Signal to Noise ratio (0 to 60 dB)
	P/AR (0 to 120)
	Amplitude jitter (0.0 to 25.0%)
	Phase jitter (0.0 to 25.0 degrees)
	3-level Impulse Noise (counts from 0 to 9999)
	Transient measurements (with holding tone):
	Dropouts (0 to 9999)
	Gain hits (0 to 9999)
	Phase hits (0 to 9999)
	3-level impulse noise (counts from 0 to 9999)

Table 1-1, continued
AM-48 Technical Specifications

GENERAL, continued

CHARACTERISTICS	SPECIFICATIONS
Dial:	Built-in 16 button keypad for dial pulse, DTMF (Touch Tone), or MF dialing.
Talk:	Built-in microphone and speaker with push-to-talk operation on both 2-wire and 4-wire lines. Earphone jack for optional earphone.
Holding:	A single line holding circuit is provided for 2-wire operation, or the send pair of 4-wire circuits. It electronically simulates a holding coil with a DC resistance of approximately 200 Ohms. The AC impedance is high enough to give no more than 0.2 dB loss at 600 Ohm impedance.
Impedances:	600 and 900 Ohm. Balance > 60 dB below 4 kHz, decreasing 6 dB/octave above 5 kHz. Return loss >30 dB 200-5000 Hz, >15 dB 5-20 kHz. DC blocking 150 Volts. Bridging impedance >25 k Ohms.
Printer:	Current loop interface to optional printer for hard copy of unit setup and measurement results.
Store/Recall:	10 complete unit setups may be stored by user in internal nonvolatile memory, and recalled for ease of repeating frequently-used tests. In addition, the results of the last impulse or transient study (along with the associated setups) are stored to nonvolatile memory at the completion of the study. They are recalled automatically whenever the unit is turned on. Also stored in nonvolatile memory are four (4) user-set parameters (each set from the QUIET mode): (1) Touch Tone/MF dial Level, (2) Power Down Time with momentary power switch, (3) Blanking Interval for impulse and transient tests and (4) 10 user-programmable momentary frequencies.

Table 1-1, continued
AM-48 Technical Specifications

GENERATOR (SEND)

CHARACTERISTICS	SPECIFICATIONS
Variable:	Frequency: 200 Hz to 19,999 Hz in 1 Hz steps. Frequency may be entered directly via the keypad or stepped up or down in 10 Hz steps with auto-repeat steps of 100 Hz (4 steps/second) for fast frequency slewing. Frequencies are crystal-controlled and accurate to ±.72 Hz ±.01%. Level: -50.0 dBm to +10.0 dBm in .1 dB steps. Level may be entered directly via the keypad or stepped up or down in .1 dB steps with auto-repeat steps of 1.0 dB (4 steps/second) for fast level slewing. Level accuracy is as follows:

	200 Hz	15 kHz	20 kHz
+10dBm	±0.2	±0.3	
-40dBm	±0.3	±0.5	
-50dBm			

1004 Hz:	A fixed 1004 Hz holding tone is provided. The frequency is accurate to ± .025%. Level is same as variable.
3-Tone:	A three-tone slope frequency mode is provided which cycles continuously between 404 Hz, 1004 Hz, and 2804 Hz, giving 5 seconds of each tone. Frequency accuracy is same as variable. Level is same as variable.
Sweep:	A programmable frequency sweep generator is provided. It generates tones continuously from a user-specified START frequency (200 Hz to 19,999 Hz) to a user-specified STOP frequency (200 Hz to 19,999 Hz) at a user-specified frequency STEP interval (1 Hz to 19,999 Hz) and at a user specified step RATE (0.1 second to 1,999.9 seconds/frequency). Frequency accuracy is same as variable. Level is same as variable.
PAR:	A PAR waveform generator is provided which generates the 16 simultaneous frequency PAR waveform per Bell 41009 specifications. The level may be set from -40.0 dBm to 0.0 dBm with 0.1 dBm resolution. Level accuracy is ±0.5 dBm.

Table 1-1, continued
AM-48 Technical Specifications

GENERATOR (SEND), continued

CHARACTERISTICS	SPECIFICATIONS
Quiet:	In quiet mode the line is terminated with a passive resistance equal to the line impedance. Also, when in quiet, one of 10 user-programmable tones may be momentarily applied to the line by depressing the [0] thru [9] keys. Programmable from this mode are (1) Touch Tone dial Level (-50.0 to 7 dBm), (2) Power down Time Off (1 to 255 minutes), (3) impulse and transient test Blanking Interval (1 to 255 ms) and (4) 10 user-programmable tones for later instant recall.
Aux tone:	A momentary push button is provided for the generation of an auxiliary tone (2713 Hz), used to activate remote 829-type loopback devices.
SF Skip:	A Signaling Frequency (SF) Skip mode prevents the generation of tones between 2450 Hz and 2750 Hz in variable or sweep modes.
Distortion:	Total distortion is < -50 dB from 200 Hz to 3000 Hz and < -40 dB above 3000 Hz.

RECEIVER (MEASURE)

CHARACTERISTICS	SPECIFICATIONS
Level/Freq:	Level is measured with an average responding detector. Range is -65.0 to +10.9 dBm with 0.1 dBm resolution. Accuracy is as follows:

	200 Hz	15 kHz	20 kHz
+10dBm	±0.2	±0.5	
-40dBm	±0.4	±0.8	
-65dBm			

Note: Accuracy is ± 0.1 dBm at 1004 Hz from -20.0 dBm to 0.0 dBm.

Frequency is measured from 200 Hz to 19,999 Hz with an accuracy of ± .01% ± 1 Hz, and a resolution of 1 Hz. Input level -40 to +10 dBm.

Table 1-1, continued
AM-48 Technical Specifications

RECEIVER (MEASURE), continued

CHARACTERISTICS	SPECIFICATIONS
PAR:	Peak-to-Average Ratio (PAR) is measured from 0 to 120 PAR units to a resolution of 1 PAR unit. Accuracy is ± 2 from 30 to 110, ± 4 from 0 to 120 over a signal range of -40 to 0 dBm. PAR signal level is measured from -40 to 0 dBm with a resolution of 1 dBm, using an RMS detector.
Noise:	Noise is measured with an RMS responding detector from 10 to 99 dBrn to 1 dBrn resolution. Accuracy is ± 1 dBrn from 20 to 99 dBrn, and ± 2 dBrn from 10 to 20 dBrn. Weighting Filters are 3 KHz flat, 15 KHz flat, CMSG, and Program filter.
Notched Noise:	Notched noise is the same as noise with the addition of a 1010 Hz notch filter, minimum 50 dB deep from 995 to 1025 Hz.
S/N ratio:	Signal-to-Noise (S/N) ratio displays the ratio of signal (holding tone) to notched noise. The signal must be -40 to +10 dBm. The notched noise may be 10 to 70 dBrn. The S/N ratio may be from 10 to 50 dB. Resolution is 1 dB. Accuracy is ± 1 dB for notched noise 20 to 70 dBrn, and ± 2 dB for notched noise from 10 to 20 dBrn.
Amplitude Jitter:	Displays the incidental amplitude modulation of a holding tone. The holding tone must be -40 to +10 dBm, 990 to 1030 Hz. Amplitude jitter is displayed from 0.0 to 25.0% with a resolution of .1% and an accuracy of ±.2% ±5% of reading. Weighting-filter selection: 20-300 Hz or 4-300 Hz.
Phase Jitter:	Displays the incidental phase modulation of a holding tone. The holding tone must be -40 to +10 dBm, 990 to 1030 Hz. Phase jitter is displayed in degrees from 0.0 to 25.0 degrees with a resolution of .1 degree and an accuracy of ± .2 degree ± 5% of reading. Weighting-filter selection: 20-300 Hz or 4-300 Hz.

Table 1-1, continued
AM-48 Technical Specifications

RECEIVER (MEASURE), continued

CHARACTERISTICS	SPECIFICATIONS
Impulse Noise:	Three (3) noise thresholds are established: Low, Middle and High levels, with an equal interval between them called the Delta. The maximum High threshold is 105 dBrn for 600 Ohm impedance (or 104 dBrn for 900 Ohm). The minumum Low threshold is 30 dBrn. Delta can be 2,3,4, or 6 dB. Threshold accuracy ± 1dB. A user-selected blanking interval of 1 to 255 ms for each threshold blocks further counting of impulses at that threshold. The study duration timer may be set from .1 minute to 1999.9 minutes in .1 minute steps, or continuous. Each threshold has a count capacity of 0-9999. Weighting filters same as Noise.
Transients:	Counts dropouts, gain hits, phase hits, and 3-level impulse noise with tone. Holding tone must be -40 to +10 dBm, 995 to 1025 Hz. Dropout threshold is -12 dB from the initial level of the holding tone. A dropout will be counted if the holding tone drops below the threshold for at least 4 ms ± .5ms. Counting of dropouts, gain hits, phase hits, and impulses is inhibited for a blanking interval which lasts until 1 second after the holding tone is restored to a level above the dropout threshold. Gain hit threshold can be 2, 3, 4, or 6 dB. A gain hit will be counted if the level of the holding tone changes up or down by more than the threshold for at least 4 ms ± .5 ms. A blanking interval, that is user-set from 1 to 255 ms, blocks further counting of gain hits. Phase hit threshold can be 5 to 45 degrees in 1 degree steps with an accuracy of ±.5 degrees ± 10% of the setting. A phase hit will be counted if the phase of the holding tone changes by more than the threshold for at least 4 ms ± .5 ms. A blanking interval, that is user-set from 1 to 255 ms, blocks further counting of gain hits. The three-level impulse noise low threshold can be set from 30 to 110 dBrn with threshold differences of 2,3,4, or 6 dB. Threshold accuracy ± 1dB. An independent blanking interval for each threshold, user-set from 1 to 255 ms, blocks further counting of impulses at that threshold.

Table 1-1, continued
AM-48 Technical Specifications

RECEIVER (MEASURE), continued

CHARACTERISTICS	SPECIFICATIONS
Transients: (continued)	The study duration timer may be set from .1 minute to 1999.9 minutes in .1 minute steps, or set to 0 for a continuous study. Each transient has a count capacity of 0-9999. Filters same as Noise.
Damping:	A damp mode reduces the display update rate from approximately 4 times/second to approximately 2 times/second for reading widely fluctuating measurements. The same switch, when in <DAMP> position, also changes the monitoring point of the receive (RCV) monitor speaker to the output of the auto-range amplifier (significantly increasing the speaker level).
Term/Bridge:	When in terminate, the receiver terminates the line in the selected impedance. When in bridge, the line is bridged by a high impedance, causing no more than .2 dB loss on a 600 Ohm line.

POWER/PHYSICAL

CHARACTERISTICS	SPECIFICATIONS
Power:	Four 1.5 Vdc "AA" alkaline batteries provide about six hours operation. NiCad batteries provide about half the life of alkalines. External AC adapter powers unit from 120 Vac and charges optional NiCad batteries in the unit. Auto shutoff after last switch actuation is user-programmable for 0 (no shutoff) or from 1 to 255 minutes. May be overridden by placing power switch in the <ON> position. Does not turn itself off while timed study is in progress.
Physical:	Size 4.2"(106mm)W x 7.6"(193mm)H x 1.7"(43mm)D. Weight 23 oz. with alkaline batteries (slightly less with NiCad). Connections to phone line via dual bantam jacks and RJ11C modular jack.

1.04 AM-48E TECHNICAL SPECIFICATIONS

The AM-48E is an international version transmission test set which meets CCITT* standards. All specifications for the AM-48 in Table 1-1 are identical for the AM-48E, except as described below:

1. Instead of the C-Message (CMSG) noise-weighting filter, the AM-48E has the Psophometric (PSHO) noise-weighting filter. See Fig. 3-6 and Fig. 3-7.

2. Instead of the Program (PROG) noise-weighting filter, the AM-48E has the Sound-weighted (SWTD) filter. See Fig. 3-6 and Fig. 3-7.

3. Instead of the 3TONE slope frequency send mode of 404 Hz, 1004 Hz and 2804 Hz @ 5 seconds, the AM-48E has a 4-tone SLOPE frequency send mode of 404 Hz, 1004 Hz, 2004 Hz and 3004 Hz @ 5 seconds. See Fig. 3-6 and Fig. 3-7

4. Instead of Signal Frequency (SF) Skip 2450 Hz to 2750 Hz, the AM-48E has SF Skip from 2130 Hz to 2430 Hz.

5. On all noise displays, instead of units of dBrn, the AM-48E displays the noise in units of dBm. See Para. 8.02 and Fig. 8-1 for definitions and corresponding values of dBrn and dBm units.

*CCITT = Comite Consultatif International Telegraphique et Telephonique (International Telegraph and Telephone Consultative Committee).

2. RECEIVING AND UNPACKING

2.01 INTRODUCTION

This section covers procedures to follow when the AM-48 is first received in its shipping container:

2.02 Inspection when Received
2.03 Verification of Contents

2.02 INSPECTION WHEN RECEIVED

The AM-48 was thoroughly tested and carefully packed before shipment and was in good condition when turned over to the carrier for transport.

The name of the carrier will be noted on the packing slip which accompanied the shipment.

Upon receipt, thoroughly inspect the outside of the shipping container for damage. If the container is damaged, and the AM-48 is found to be damaged or non-operational, immediately contact the carrier and submit a claim for damages.

> NOTE
> To test if unit is operational, see Section 4 for Power Considerations and Section 5 for Self-Test Instructions.

2.03 VERIFICATION OF CONTENTS

After opening and unpacking, use the following equipment lists to verify that all ordered items have been received. Note that some items are standard, always included; other items are optional, only shipped when specially ordered.

Standard Contents. Each AM-48 is shipped with the following:

- 1 - AM-48 unit
- 4 - AA-size 1.5 Vdc alkaline batteries (24-0006)
- 1 - Modular input cord with minigator clips (48-0049)
- 1 - Earphone (82-0005)
- 1 - AC adaptor (70-0029)
- 1 - AM-48/AM-48E Instruction Manual (18-0015)
- 1 - Plastic transport case (87-0009), made to hold AM-48, AC Adaptor, Cables and AM-47 Hand-held printer.

Optional Contents. Possible optional Accessories and Cables are listed here (only shipped if purchased in addition to the basic unit). Part numbers are also listed for reference.

Accessories

24-0005	1 - Impedance Adaptor (1200,150,135,75 Ohms)
24-0006	4 - AA-size alkaline batteries (replacement set)
24-0007	4 - AA-Size NiCad (rechargeable) batteries
AM-47	1 - Hand-held Printer -- includes roll of paper, ribbon cartridge and 48-0079 Printer Cable
26-0014	1 - roll of paper for Hand-held Printer
26-0015	1 - ribbon cartridge for Hand-held Printer

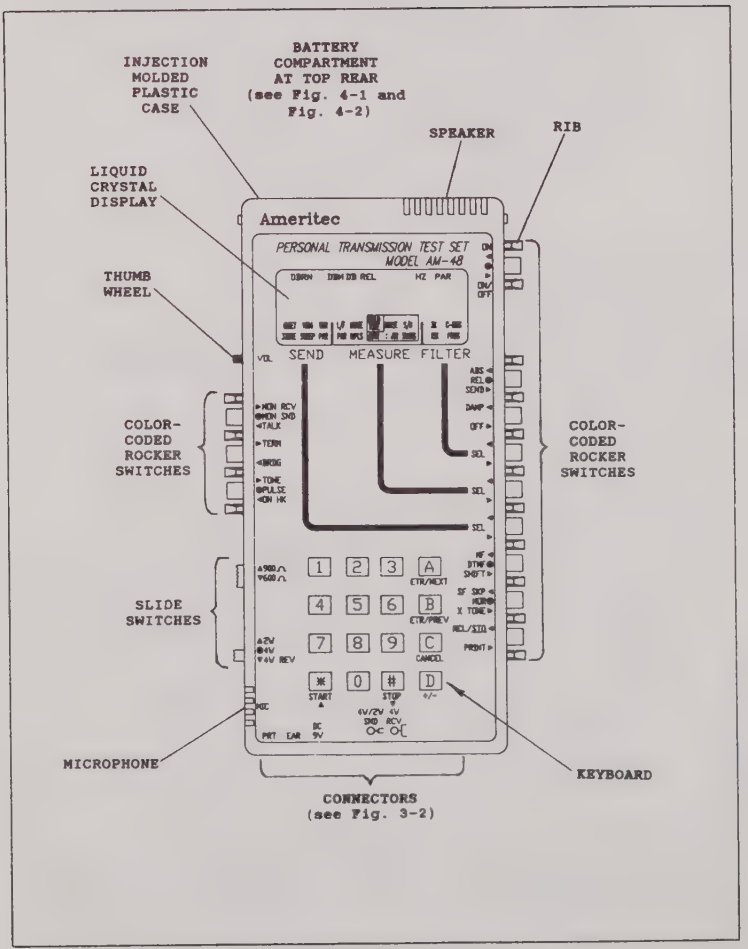

Figure 3-1. AM-48 Location of Components, Front View

3.03 COMPONENT LOCATION (Fig. 3-1), continued

Sides (continued). The rocker switches are protected from abuse by integral "ribs" molded into the case. Also on the left side is a thumb wheel speaker volume control and slots for the microphone.

Top and Bottom. The slots at the top are for the speaker.

Along the bottom are connectors for the transmission line, AC adaptor, earphone and printer, illustrated in Fig. 3-2.

Rear Panel. Access the battery compartment through a slide door in the rear panel. See Para. 4.02 and Para. 4.03 for details.

3.04 CONNECTORS AND CABLES (Fig. 3-2 and Fig. 3-3)

AM-48 connectors are shown in Fig. 3-2. See Fig. 3-3 for the standard and optional cables available. See Para. 6.03 for cable connection instructions.

Note that the AM-47 Hand-held Printer includes its own cable, 48-0079. The 48-0078 Printer Cable is for connection to the RS-232 port (25-pin female) of most other serial EIA printers.

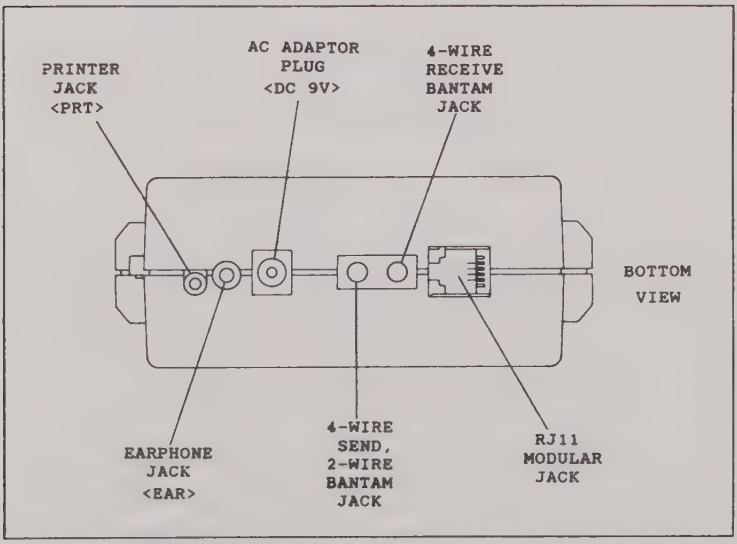

Figure 3-2. AM-48 Connectors

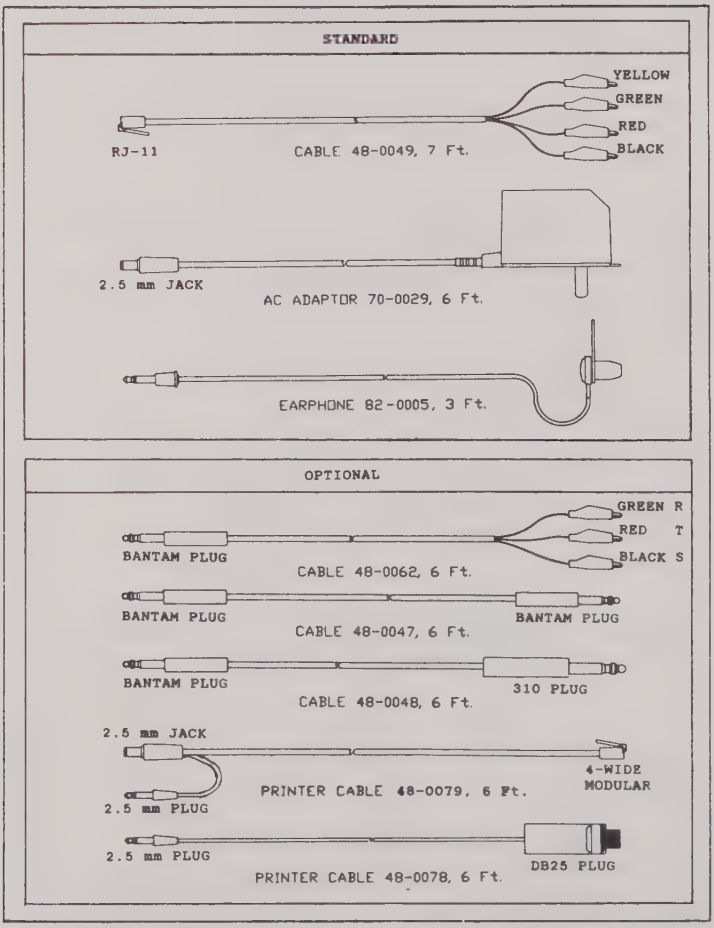

Figure 3-3. AM-48 Cables

3.05 SWITCHES (Fig. 3-4/FOLDOUT)

Fig. 3-4 shows the location of the AM-48 switches. The functional descriptions of the switches in this paragraph follow the same numbering scheme as Fig. 3-4.

NOTES

- Throughout this manual, a switch position indicated on the front panel is referred to with angular brackets, < >. For example, <ABS> refers to the absolute measurement position of Switch 2.
- Switches are referred to by number throughout this manual. See FOLDOUT at back of manual for copy of Fig. 3-4 for ease of reference of switch numbers.

There are three (3) types of switches:

Thumb Wheel. "Switch" 15 is the only thumb wheel. It is a volume control. Push up (toward the front panel) on <VOL> to increase the volume of the monitor speaker. Push down on <VOL> to decrease the volume of the monitor speaker volume.

Slide Switches. Switches 10 and 11 are slide switches. Push these switches toward the top or bottom in the direction indicated by the arrows on the front panel to select the desired line parameter.

Rocker Switches. The other 12 switches are rocker switches. The action of these switches is rather like a rocking chair. Rock the appropriate switch toward or away from the front panel as indicated by the arrows to activate the desired function. There are various combinations between toggle and/or momentary switching action as explained in the functional descriptions which follow (reference Fig. 3-4/FOLDOUT):

(1) Power. Combination toggle and momentary rocker switch.

- Set to <ON> position for power to be on continuously.
- To allow the AM-48 to power down by itself, turn the power on by momentarily pressing the switch toward the <ON/OFF> position; the power will shut off automatically after the TIME OFF setting, if the unit is left unattended (see Para. 7.12,4 for instructions to set the time).
- To turn the power off, momentarily press the switch toward the <ON/OFF> position.

(2) Display Select. Three-position toggle switch. This determines what is being viewed on the display.

- Set <ABS> to view MEASUREMENT mode in absolute reference.
- Set <REL> to view MEASUREMENT mode in relative reference.
- Set <SEND> to view the SEND mode.

See Para. 7.22 and Para. 8.02,5 for explanation of absolute and relative measurements.

NOTE

FOLDOUT of this figure is at the end of the manual for ease of reference.

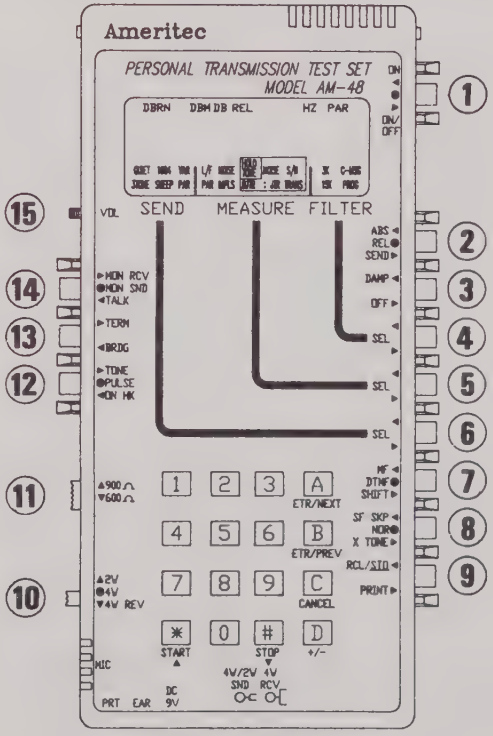

See Para. 3.05 for descriptions.

Figure 3-4. AM-48 Switch Identification Numbers

3.05 SWITCHES (Fig. 3-4/FOLDOUT), continued

(3) Two-position toggle switch. This switch has a dual function:
A. Controls the display damping. <DAMP> gives a display update of two times per second (used with widely fluctuating signals to update the display more often for better sampling of the measurement). <OFF> gives a display update of four times per second.
B. Controls the monitoring point of the receive monitor speaker (<MON RCV> position of Switch 14). <DAMP> gives a monitoring point at the output of the auto-range amplifier, significantly increasing the speaker level. See Fig. 9-1 for block diagram showing how this switch interacts with Switch 14.

(4) Filter Select. Dual momentary switch. Rock up or down to move FILTER menu cursor left or right to select desired noise-weighting filter. See Table 7-5 for list of measurements that require a noise-weighting filter. See Fig. 3-7 for FILTER menu.

(5) Measure Select. Dual momentary switch. Rock up or down to move MEASURE menu cursor left or right to select desired measure mode. See Fig. 3-7 for MEASURE menu.

(6) Send Select. Dual momentary switch. Rock up or down to move SEND menu cursor left or right to select desired send (generator) mode. See Fig. 3-7 for SEND menu.

(7) Three-position toggle switch. See Table 7-6 for interaction of this switch with Switch 12 for dialing.

-Set <MF> to dial multi-frequency tones from the keyboard.
-Set <DTMF> to dial DTMF (Touch Tone) from the keyboard.
-Set <SHIFT> to enable the auxiliary functions on the keyboard; see Para. 3.06 for details.

(8) Two-position toggle plus momentary switch.

-Set <SF SKP> to skip the signaling frequency band of 2450 Hz to 2750 Hz (2130 Hz to 2430 Hz for AM-48E), avoiding the accidental transmission of signaling frequencies.
-Set <NOR> to allow the internal signal generator to be stepped through all frequencies within its range while in the SWEEP and VAR SEND modes.
-Press <X TONE> to momentarily send a 2713 Hz tone, overriding the internal signal generator. This feature is useful for actuating loopback devices. See Para. 6.06 under "Loopback Testing" for procedure to use the Western Electric Model 829 loopback device.

(9) Dual momentary switch.

-Press <RCL/STO> to recall and/or store up to 10 test setups. See Para. 7.36 for details.
-Press <PRINT> to send unit setup and measurement results to the printer port, <PRT>. See Para. 3.09 and 7.39 for details.

3.05 SWITCHES (Fig. 3-4/FOLDOUT), continued

(10) Three-position slide switch. See Fig. 6-1 and Fig. 6-2 for 2-wire and 4-wire line connections associated with this switch.

-Set <2W> to connect together the internal measurement circuitry and signal generator across the 2-wire line at the <SND> jack; the signal generator source impedance of 600 or 900 Ohms terminates the line in all signal generator modes except QUIET. In QUIET mode, the line will be terminated only if Switch 13 is set to <TERM>. Note that <RCV> jack is not used when connecting to 2-wire circuits; see Fig. 6-1.
-Set <4W> to connect the internal measurement circuitry to the <RCV> pair and the internal signal generator to the <SND> pair; see upper half of Fig. 6-2.
-Set <4W REV> to reverse the send and receive pairs; see lower half of Fig. 6-2.

(11) Two-position slide switch.

-Set <600 Ω> (usual position for 4-wire) to
A. apply 600 Ohms across the receive pair when Switch 13 is set to <TERM> and
B. set the send pair source impedance at 600 Ohms.

-Set <900 Ω> (usual position for 2-wire) to
A. apply 900 Ohms across the receive pair when Switch 13 is set to <TERM> and
B. set the send pair source impedance at 900 Ohms.

(12) Three-position toggle switch. See Table 7-6 for interaction of this switch with Switch 7 for dialing.

-Set <TONE> to come off-hook to dial either MF or DTMF (set Switch 7 to <MF> or <DTMF> accordingly). <TONE> causes a 200-Ohm DC short across T & R of the send pair to simulate a telephone off-hook condition on 2-wire dial access lines. Press a button on the 16-button keypad to generate the appropriate DTMF or MF tone pair, depending upon the setting of Switch 7. See Table 7-7 for a list of MF and DTMF tone pairs generated by pressing the keys.

-Set <PULSE> to dial pulse. Switch 7 must be set at either <MF> or <DTMF>. <PULSE> causes a 200-Ohm DC short across T & R of the send pair to simulate a telephone off-hook condition on 2-wire dial access lines. Press a button on the 16-button keypad while in this mode to cause the DC short to make and break at 10 PPS, 60% break, creating dial pulses in accordance with the button pressed.

-Set <ON HK> to open the DC across T & R of the send pair to simulate a telephone on-hook condition on 2-wire dial access lines. The 16-button keypad stays operational and if pressed will send out DTMF or MF tones (see Table 7-7) as selected by Switch 7.

3.05 SWITCHES (Fig. 3-4/FOLDOUT), continued

(13) Two-position toggle switch.

-Set <TERM> to terminate the receive (<RCV>) line with a resistive impedance as selected by Switch 11.

-Set <BRDG> to unterminate the receive line and bridge it only with the impedance of the measurement circuitry (>25k Ohms) across the receive pair.

NOTE

In 2-wire mode the signal generator source impedance will terminate the line with 600 Ohms or 900 Ohms, regardless of the position of <TERM>/<BRDG>. If the "QUIET" send mode is selected while in 2-wire bridge mode, the signal generator will be disconnected from the send pair and the send pair source impedance will be >25k Ohms. This will allow the <TERM>/<BRDG> switch to function.

(14) Speaker Control. Two-position toggle and momentary switch. See Fig. 9-1 for block diagram showing how this switch interacts with Switch 3.

-Set <MON RCV> to connect the internal speaker to audibly monitor the receive pair.

-Set <MON SND> to connect the internal speaker to audibly monitor the send pair.

-Push <TALK> to mute the speaker and connect the internal microphone to allow "talking" over the send pair. This feature is useful in voice communication with an assistant technician at the distant end of the transmission line being tested. It also allows the AM-48 to be used as a conventional push-to-talk telephone set on 2-wire dial networks. See Para. 7.38 for more details.

(15) Volume Control. This controls the gain of the internal speaker amplifier. Use this to set the speaker or earphone loudness to a comfortable level.

Note that Switch 3 and Switch 14 control the speaker/earphone monitoring point; see Fig. 9-1 for block diagram showing the interaction of these switches. When Switch 3 is set to <DAMP>, the monitor point is after the auto-range amplifier which significantly increases the speaker level.

WARNING

Note that for a given volume setting, the earphone audio level sounds much higher than the speaker level. Be careful to adjust audio volume down before inserting earphone into ear.

3.06 KEYBOARD (Fig. 3-5)

See Fig. 3-5 for the AM-48 keyboard with identification numbers which are referenced in the descriptions of this paragraph.

Auxiliary Functions. The AM-48 is equipped with auxiliary keypad functions which are identified in Fig. 3-5 with reference numbers 2 thru 9. The keys and their auxiliary functions:

[*] START,
[#] STOP,
[A] ETR/NEXT
[B] ETR/PREV
[C] CANCEL
[D] +/-

NOTE

To enable the auxiliary functions, set Switch 7 to <SHIFT>.

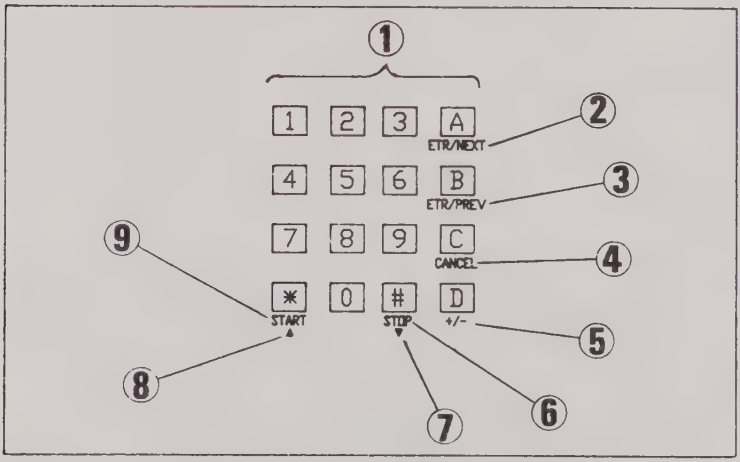

Figure 3-5. AM-48 Keyboard Identification Numbers

(1) 16-Key Array. The function of the keys depends on the positions of Switch 7 and Switch 12 (Fig. 3-4/FOLDOUT). See Table 7-1.

To use the keys to dial MF, DTMF or pulse, set Switches 7 and 12 as shown in Table 7-6. See Table 7-7 for a list of the dual tones for the different keys.

With Switch 7 in <SHIFT>, the number keys can enter new parameter values (Para. 7.08,2) or momentarily send user-programmed tones from the QUIET SEND display (Para. 7.13). The auxiliary functions of the other keys are described next.

(2,3) **[ETR/NEXT], [ETR/PREV].** These keys have a dual function:
A. To enter new parameter values into memory.
B. To scroll through multiple displays.
After using the number keys to input a new parameter value:
1) Press either [ETR/NEXT] or [ETR/PREV] to enter the new value into memory.
2) Then press [ETR/NEXT] to step to the next display, or press [ETR/PREV] to step to the previous display.
If no change was made to the display, or a change was made with the [△] or [▽] keys, press [ETR/NEXT] or [ETR/PREV] once to go immediately to the next/previous display.
See Para. 7.08 for complete details.

(4) **[CANCEL].** OOPS! Press [CANCEL] to erase a value input with the number keys; the display defaults to the previous value. To erase an input, press [CANCEL] before pressing [ETR/NEXT] or [ETR/PREV]. Note that [CANCEL] does not operate after pressing [△] or [▽] to change a value. See Para. 7.08 for complete details.

(5) **[+/-].** This key is used to designate a positive or negative polarity for a new parameter value input with the number keys. See Para. 7.08 for complete details.

(6,9) **[START]/[STOP].** These keys are used in the IMPLS (impulse noise) and TRANS (transients, i.e. impulse noise, phase hits, gain hits, and drop outs) modes, to stop/start the timed test. See Para. 7.24 for information on timed tests. The [START]/[STOP] functions are in operation only when data is displayed, i.e. not when a user-entered parameter is displayed. With a user-entered parameter displayed, these same keys take on the functions explained below under 7,8.

(7,8) **[△]/[▽].** Press [△] or [▽] to step up or down the value of any variable number displayed. Hold down [△] or [▽] for one (1) second to enable auto-repeat mode and step in increments ten (10) times the normal increments. See Table 7-2 for the values of the increments, depending on the parameter.

3.07 DISPLAY (Fig. 3-6 and Fig. 3-7)

Fig. 3-6 shows the AM-48 liquid crystal display:

1. The top line in Fig. 3-6 shows all the possible units of measurement. The units of measurement appear as appropriate to label the value(s) displayed in the main display field. Time and Count parameters do not show the units on the display.
2. The main display field has nine (9) 7-segmented characters with decimal points. The prompts that appear on the display are "pseudo-alpha" because of the limitations of the 7-segmented characters. There are three (3) possible types of display fields as explained in Para. 7.04,1.
3. Below the main display field are the menus for the three (3) cursors, shown in detail in Fig. 3-7.

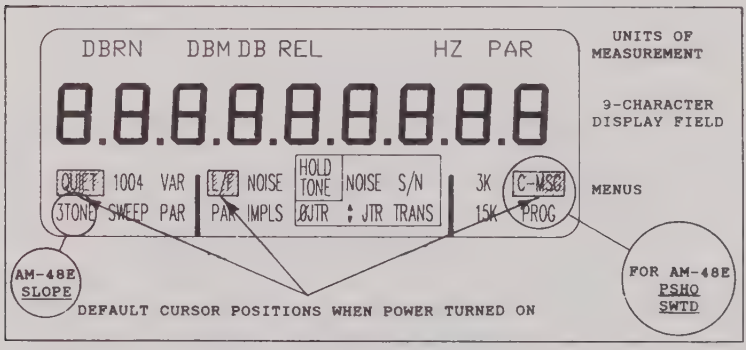

Figure 3-6. AM-48 Liquid Crystal Display

Menus. Fig. 3-7 defines each possible cursor position for the three (3) menus. The positions of the three (3) cursors identify the present SEND mode, MEASURE mode and FILTER selected. Switches 4, 5, and 6 move the cursors to select the desired mode of operation.

Menu Color Coding and Framing

1. All send modes on the SEND menu are yellow.
2. All noise-weighting filter options on the FILTER menu are orange.
3. On the MEASURE menu, both NOISE modes, IMPLS, S/N, and TRANS are orange, indicating that these measurements require a noise-weighting filter.
4. All MEASURE modes within the pink rectangle require a nominal 1004 Hz holding tone. The HOLD TONE indicator in the corner of the rectangle darkens when a valid holding tone is present at the receive port.

See Table 7-5 for summary of measurement requirements.

NOTE

Throughout this manual, cursor positions are referred to with ALL CAPITAL LETTERS, underlined. For example, QUIET always refers to the Quiet SEND menu cursor position and associated Quiet mode.

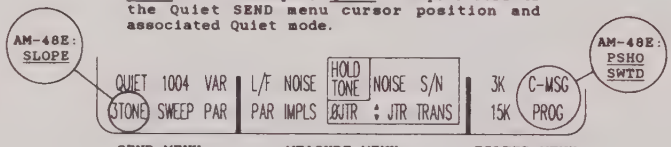

SEND MENU (Yellow) | MEASURE MENU (Pink and Orange) | FILTER MENU (Orange)

SEND MODES		MEASURE MODES		FILTER OPTIONS	
QUIET	Passive Resistor Termination	L/F	Level/Frequency	3K	3 kHz
1004	1004 Hz Tone @ Selected Level	NOISE	Idle Channel Noise	15K	15 kHz
VAR	Variable Continuous Frequency & Level	PAR	Peak-to-Average Ratio with Receive Level	AM-48 ONLY:	
AM-48 ONLY:		IMPLS	Impulse Noise (Timed Test)	C-MSG	C-Message
3TONE	404 Hz, 1004 Hz, 2804 Hz for 5 Sec, Cyclic @ Selected Level	MEASURE MODES LISTED BELOW NEED 1004 HZ HOLD TONE		PROG	Program
AM-48E ONLY:		NOISE	Notched Noise	AM-48E ONLY:	
SLOPE	404 Hz, 1004 Hz, 2004 Hz, 3004 Hz @ 5 Sec, Cyclic @ Selected Level	S/N	Signal-to-Noise Ratio	PSHO	Psophometric
SWEEP	Tones Stepped per Selected Level, Start/Stop Frequencies, Step Size and Sweep Rate	Ø JTR	Phase Jitter	SWTD	Sound-weighted
PAR	Peak-to-Average Ratio Waveform @ Selected Level	▲ JTR	Amplitude Jitter		
		TRANS	Transients (Timed Tests): Impulse Noise, Phase Hits, Gain Hits, Dropouts		

Figure 3-7. AM-48 SEND, MEASURE and FILTER Menus

3.08 MICROPHONE/SPEAKER

The speaker is for "listening" on the send or receive pairs and the microphone is for "talking" on the send pair. See Para. 7.38.

Pressing Switch 14 to <TALK> (momentary position) activates the microphone.

Note that Switch 3 and Switch 14 control the speaker/earphone monitoring point; see Fig. 9-1 for block diagram showing the interaction of these switches. When Switch 3 is set to <DAMP>, the monitor point is after the auto-range amplifier which significantly increases the speaker level; this is particularly useful for audibly monitoring the residual noise in notched noise and S/N ratio measurements.

3.09 HAND-HELD PRINTER (Table 3-1 and Fig. 3-8)

The AM-47 Hand-held Printer is designed to be used exclusively with the AM-48 to give a hard copy of the measurements and setups. See Table 3-1 for the list of technical specifications and Fig. 3-8 for component location. See Fig. 6-3 for connections and Para. 7.39 for operating instructions.

Connectors. The connectors are used with the AC Adaptor (70-0029) and the Printer Cable (48-0079) as shown in Fig. 6-3. The AC Adaptor is supplied with the AM-48 and the 48-0079 Printer Cable is supplied with the AM-47 Hand-held Printer. The input is a special serial ASCII current loop compatible with the AM-48.

Power. Power is provided by an internal NiCad battery pack. When the printer is connected, power to the AM-48 comes from the printer battery pack, prolonging the life of the AM-48 batteries. There is an internal recharging circuit in the printer that operates when the AC Adaptor is plugged in.

Power Switch. The slide switch to the left of the connectors is for POWER ON/OFF.

LEDs. The LEDs light as described below:

1. The POWER LED lights continuously when the AC Adaptor is connected and the battery pack is charging (starts charge cycle each time power is turned ON).
2. The POWER LED blinks when power is ON and the battery pack has been charged.
3. The SIGNAL LED lights when data is being received from the AM-48.

Printing Mechanism. This is a dot matrix impact type with replaceable ribbon cartridge. It uses standard-width adding machine paper. The ribbon cartridge and paper supply are housed within the case; see Page 2 of Fig. 3-8 for details. The printout is in 24-column format; see Fig. 7-11 thru 7-13 for example printouts. In order to conserve paper, no automatic space is made after a printout . The paper can be advanced manually with the PAPER ADVANCE button.

3.09 HAND-HELD PRINTER (Table 3-1 and Fig. 3-8), continued

Table 3-1
AM-47 Hand-held Printer, Technical Specifications

CHARACTERISTICS	SPECIFICATIONS
Input Signal	Serial ASCII Code with 2-Wire Proprietary Current Loop
Input Connector	4-Wide Modular Jack
Input Speed	300 Baud with 1500 Character FIFO Buffer
Print Type	6x8 Impact Dot Matrix
Paper	2.25"W x 1.8" Dia. Adding Machine Paper
Ink Supply	Replaceable Inked Ribbon Cartridge
Characters per Line	24
Print Speed	0.7 Lines per Second
Power	Internal NiCad Battery Pack with Built-in Charger
Battery Life	Approximately 10,000 Lines
Charge Time	8 to 14 Hours
Size	7.6"L x 3.4"W x 1.9"D
Weight	1.5 lbs.
Cables	Printer Cable (48-0079), Supplied AC Adaptor (70-0029) (cables illustrated in Fig. 3-3)

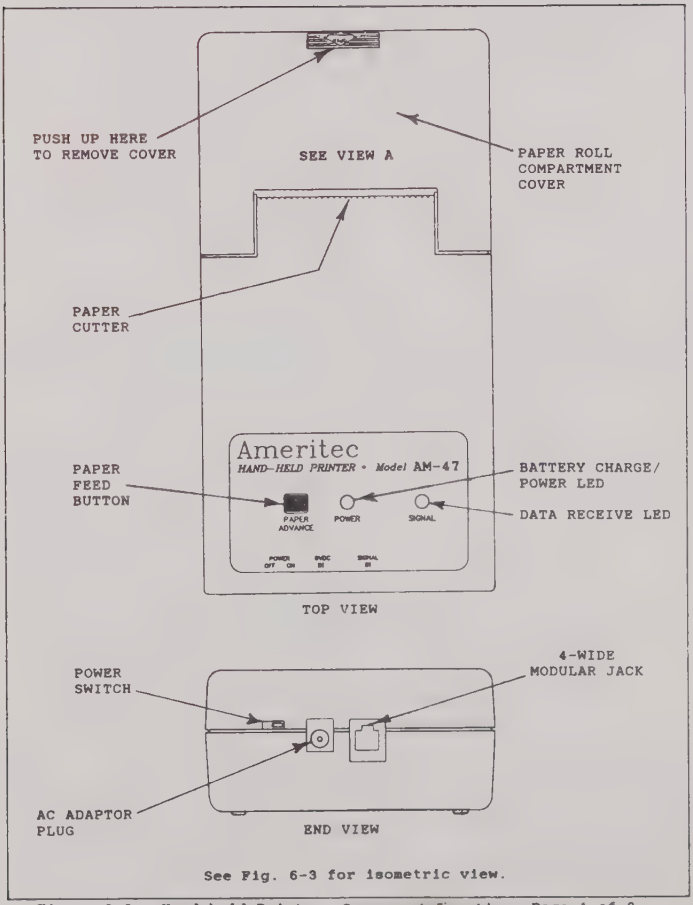

Figure 3-8. Hand-held Printer, Component Location, Page 1 of 2

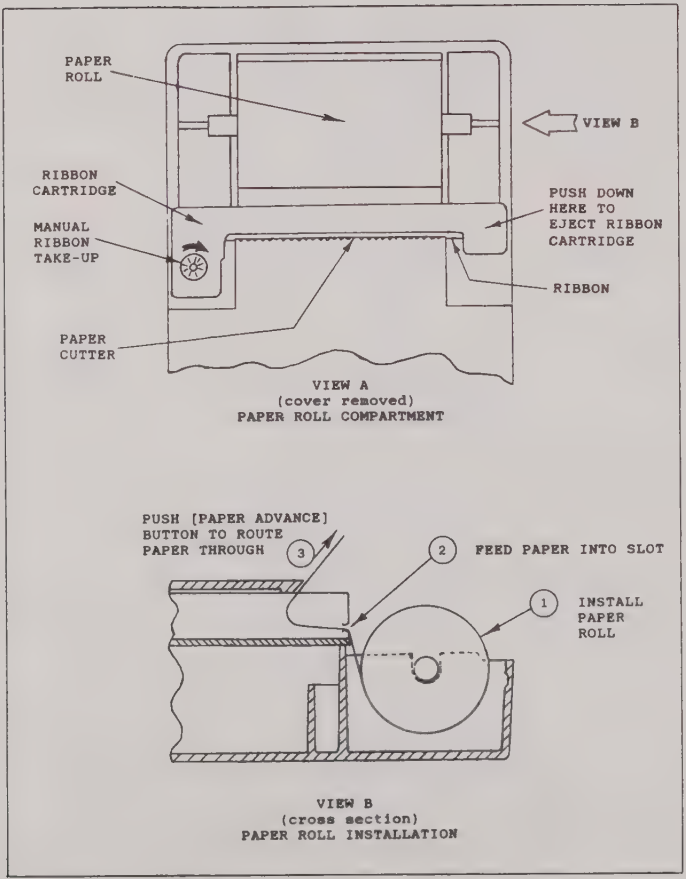

Figure 3-8. Hand-held Printer, Component Location, Page 2 of 2

3.10 IMPEDANCE ADAPTOR (Fig. 3-9)

The Impedance Adaptor (24-0005) is illustrated in Fig. 3-9. It is used to match the AM-48 to:

1. Line impedances other than 600 Ohms or 900 Ohms or
2. 4-wire split impedances.

The Impedance Adaptor has settings for five (5) different impedances to match the AM-48 to the user interface. It plugs into the RJ11 modular connector of the AM-48. See Para. 6.05 for installation and Para. 7.41 for measurement corrections when the Impedance Adaptor is used. The schematic diagram of the Impedance Adaptor is shown in Fig. 9-2

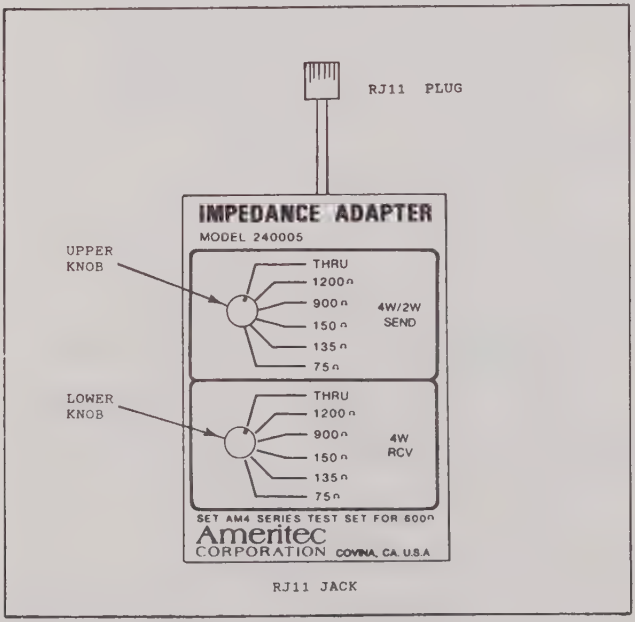

Figure 3-9. Impedance Adaptor

4. POWER CONSIDERATIONS

4.01 GENERAL

This section covers AM-48 power considerations, including battery installation, AC Adaptor connection and the power on/off switch.

The AM-48 runs on internal battery or external AC power. Flashing display decimal points indicate low batteries; alkaline batteries need replacing and NiCad batteries need recharging.

Low-Level Noise Measurements. Power the AM-48 with batteries when making a low-level noise measurement. Do not power the AM-48 with the AC Adaptor for this test because interference from the AC source can affect the measurement.

4.02 BATTERY COMPARTMENT (Fig. 4-1 and Fig. 4-2)

The battery compartment under the rear panel is accessed through a removable slide door. The compartment takes four (4) AA 1.5-volt alkaline or NiCad batteries. The battery compartment also serves as a recharger for NiCad batteries when the AM-48 is connected to 115 VAC with the AC Adaptor provided.

4.03 BATTERY-SELECTOR SWITCH (Fig. 4-2)

The Battery-Selector Switch is on the inside edge of the battery compartment as shown in Fig. 4-2.

Using a pointed instrument such as a pencil, set the Battery-Selector Switch to "NICAD" or "ALKALINE" position, to match the type of battery used.

NICAD Position. This position connects the internal battery charge circuitry to charge the NiCad batteries when the AC Adaptor is connected. Never set the switch to this position when using alkaline batteries. Observe the WARNING below.

ALKALINE Position. The internal battery charge circuitry is disconnected because alkaline batteries are not rechargeable.

The Battery-Selector Switch MUST be in the "ALKALINE" position when using alkaline batteries. Alkaline batteries can explode if the AC Adaptor is used with alkaline batteries with the Battery-Selector Switch in the "NICAD" position; warranty is voided if this happens.

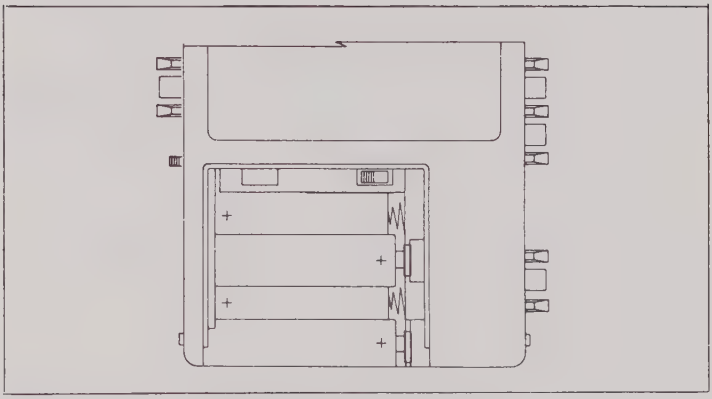

Figure 4-1. Battery Installation

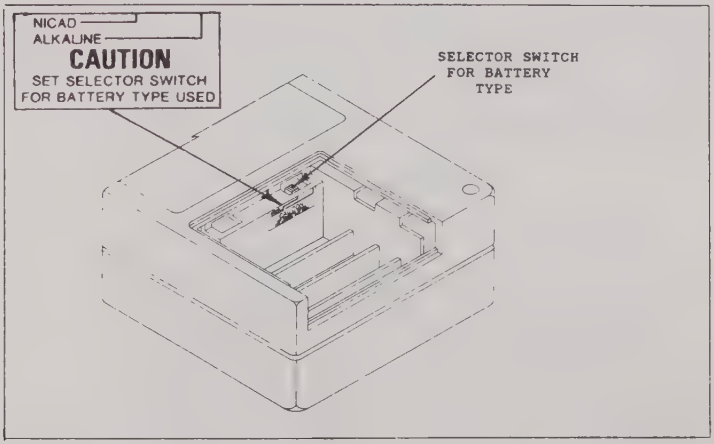

Figure 4-2. Battery-Selector Switch

4.04 BATTERY INSTALLATION (Fig. 4-1)

To install the batteries:

1. Slide off the battery compartment cover.
2. Set the Battery-Selector Switch per Para. 4.03.
3. Lay the ribbon in the base of the compartment (to be able to pull up on the ribbon for easy removal of the batteries).
4. Install four (4) 1.5-volt AA NiCad or Alkaline batteries as shown in Fig. 4-1.
5. Replace the battery compartment cover.

4.05 BATTERY INFORMATION

General. When new, each battery will furnish approximately 1.5 Volts. The batteries are wired in series, supplying 6 Vdc nominal. An internal DC-to-DC Convertor allows operation until the batteries have discharged to approximately 3 Volts.

To avoid battery chemical leakage:

1. Use only first quality batteries and
2. Do not subject the AM-48 to excessively high temperatures.

The warranty does not cover damage resulting from battery leakage.

Alkaline Batteries. The AM-48 is shipped with four (4) high-quality alkaline batteries which give approximately 6-7 hours of service. When the batteries have discharged to approximately 3.5 volts, the display decimal points will flash; this indicates approximately 30 minutes of remaining operating life.

NiCad Batteries. Commercially available, AA size Nickel Cadmium (rechargeable) batteries can be used, but operating life will be reduced to approximately 3 to 4 hours because of the limited energy storage capacity of rechargeable batteries. Due to the abrupt end-of-life discharge curve of Nickel Cadmium batteries, the flashing decimal points low-battery indication will only provide a few minutes of warning before the end of operation.

4.06 AC POWER

To power the AM-48 with 115 VAC, plug one end of the AC Adaptor (70-0029) provided into the <DC 9V> connector on the bottom of the unit and the other end into an AC wall jack. See Fig. 3-3 for the AC Adaptor and Fig. 3-2 for the AC Adaptor plug on the AM-48.

The AC Adaptor supplies 9 Vdc to the AM-48. The locations of the + and - dc voltage contacts on the 2.5 mm jack of the AC Adaptor are illustrated on the transformer housing of the AC Adaptor itself.

When using the AM-47 Hand-held Printer, the AC Adaptor can be used to maintain the charge of the printer batteries which in turn power the AM-48. See Fig. 6-3 for connections.

4.07 POWER ON/OFF SWITCH

This is a combination toggle switch and momentary switch at the right top of the AM-48 (Switch 1 in Fig. 3-4/FOLDOUT).

Automatic Power Shutdown. To allow the AM-48 to power down by itself, momentarily press the switch toward the <ON/OFF> position to turn the power on. If the unit is left unattended, the power will shut off automatically after the TIME OFF setting (see Para. 7.12,4 for instructions to set the time).

Continuous Power On. Set the switch to the <ON> position for power to be on continuously.

NOTE

To turn power on continuously when battery voltage is less than about 5 Vdc, first turn power on in momentary <ON/OFF> position, then set switch to <ON>.

Power Off. To turn the power off, momentarily press the switch toward the <ON/OFF> position.

When power is first turned on, the display will flash all the segments before settling into the initial display. The position of Switch 2 determines the initial display. The default power-up cursor positions are shown in Fig. 3-6.

5. SELF-TEST INSTRUCTIONS

5.01 INTRODUCTION

Purpose. This section has two (2) objectives:

1. To practice the main AM-48 operating procedures.
2. To verify that the AM-48 is working properly.

General. Each test in this section is described and illustrated. The figure number is referenced in parentheses next to the description heading. In the figures, circled letters correspond to the steps of the written description; circled numbers identify the switches.

> NOTE
> Power is ON for the tests in this section. See Section 4 concerning connecting and turning on power to the AM-48.

5.02 SELF-TEST SETUP (Fig. 5-1 and Fig. 5-2)

Cable Connection. The tests in this section are done with the AM-48 looped back on itself, not connected to any external equipment. Plug in the Modular-to-Minigator Cable (48-0049), supplied with the AM-48, and connect the minigator clips as shown in Fig. 5-1. The signals sent (generated) through the send port are routed directly back to the receive port.

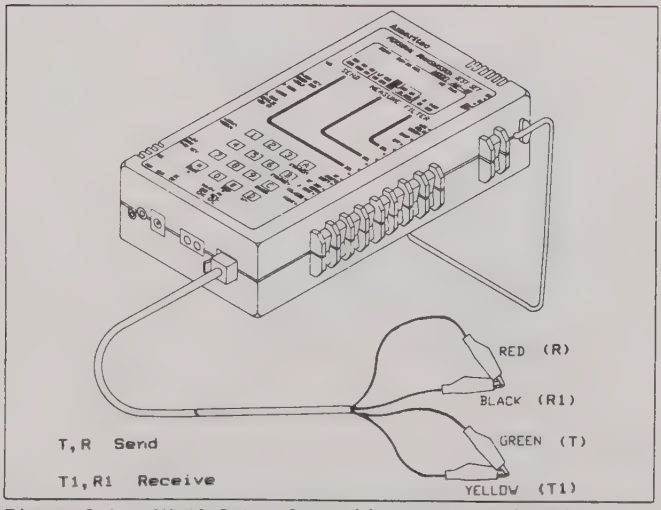

Figure 5-1. AM-48 Setup for Self Test (Looped Back)

5.02 SELF-TEST SETUP (Fig. 5-1 and Fig. 5-2), continued

General Switch Setup. Fig. 5-2 shows the initial positions of the switches for the tests in this section. Leave these switches in the positions indicated unless otherwise directed in the instructions for the individual tests. Switches are referenced by the circled numbers.

Switches 4, 5, 6 and 9 do not have a set position because they are all dual momentary switches. The instructions for each test will indicate when to rock Switches 5 and 6 to move the cursors to desired positions on the display menus.

The FILTER menu cursor (controlled by Switch 4) will default to C-MSG (PSHO for AM-48E) when power is turned on. Leave the cursor in this position for all the tests in this section.

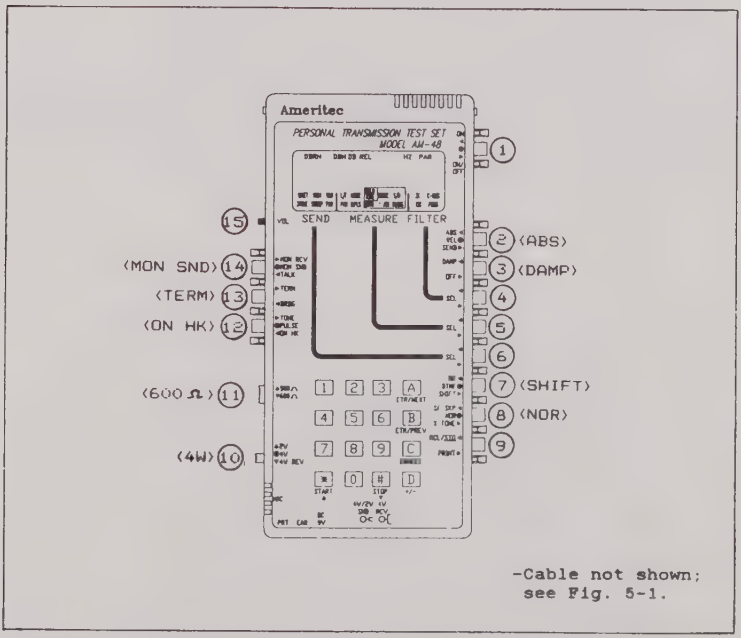

Figure 5-2. General Switch Setup for Self Test

5.03 QUIET SEND MODE (Fig. 5-3)

A. Verify that the SEND menu cursor is in QUIET (default position when first turn power on). Rock Switch 6 if necessary to move cursor to QUIET.
B. Verify that the MEASURE menu cursor is in L/F (default position when first turn power on). Rock Switch 5 if necessary to move cursor to L/F (level/frequency).
C. Display should read "UNDR" with units "DBM" and "HZ".
D. Rock Switch 5 to move cursor to NOISE (to the right of L/F).
E. Display should read "UNDR" with units of "DBRN" ("DBM" for AM-48E).

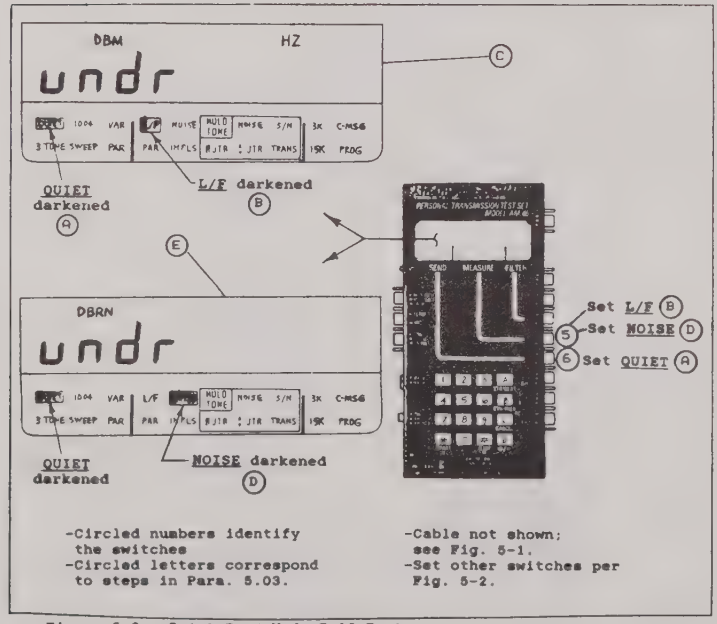

Figure 5-3. Quiet Send Mode Self Test

5.04 SEND 1004 HZ (Fig. 5-4A and Fig. 5-4B)

A. Rock Switch 6 to move SEND menu cursor to 1004.

NOTE

Turn volume control ("Switch" 15) up or down as desired to increase or decrease the volume of the speaker sound. With Switch 14 in <MON SND>, the speaker is monitoring the 1004 Hz tone being sent.

B. Rock Switch 5 if needed to move MEASURE menu cursor to L/F.
C. Read "00.0 ±0.1 DBM" and "1004 HZ" on display.
D. Rock Switch 5 to move MEASURE menu cursor to NOISE.
E. Read "90.0 ±1.0 DBRN" ("00.0 ±1.0 DBM" for AM-48E) on display.
F. Rock Switch 5 to move MEASURE menu cursor to NOISE (to the right of HOLD TONE).

NOTE

HOLD TONE will be darkened for the remaining steps in this paragraph.

G. Read typically "32.0 DBRN" (must be <40.0 dBrn) and "1004 HZ" on display; for AM-48E, "-58.0 DBM" (must be <-50.0 dBm).
H. Rock Switch 5 to move MEASURE menu cursor to S/N (signal-to-noise ratio).
I. Read typically "58.0 DB" (must be >50.0 dB) and "1004 HZ" on display.
J. Rock Switch 5 to move MEASURE menu cursor to Ø JTR.
K. Read "JITR 00.0 ±0.2 °" on display.
L. Rock Switch 5 to move MEASURE menu cursor to △▽ JTR.
M. Read "JITR 00.0 ±0.2" on display.

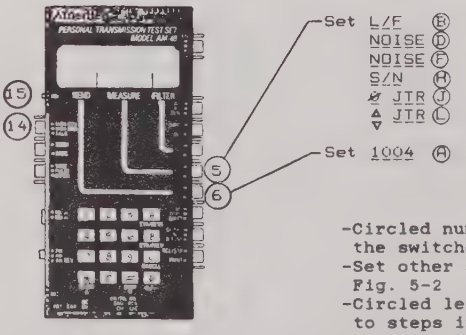

Figure 5-4A. Send 1004 Hz Self Test, Switch Settings

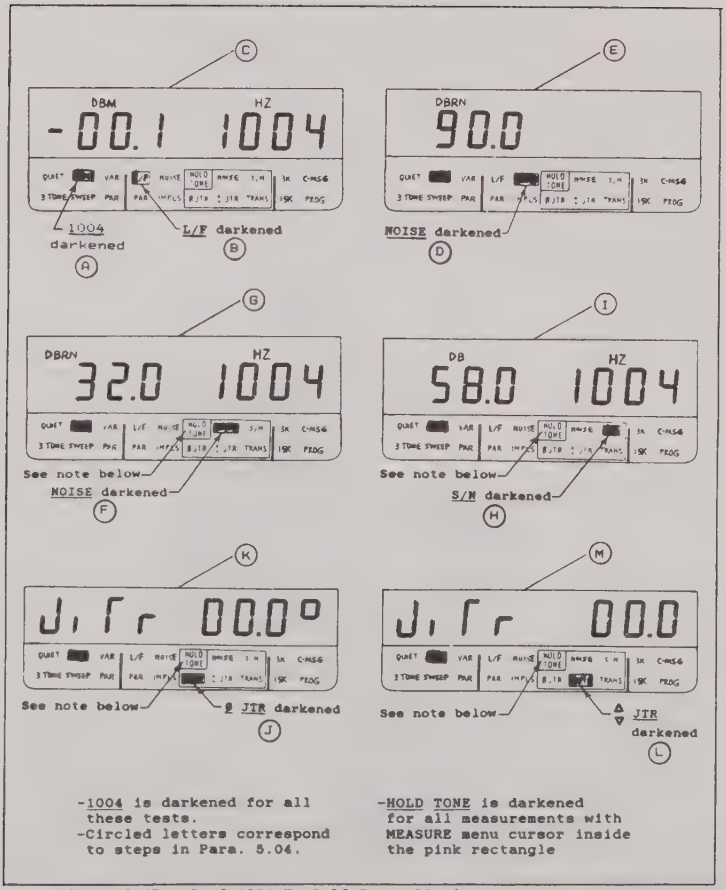

Figure 5-4B. Send 1004 Hz Self Test, Displays

5.05 SEND PAR, Peak-to-Average Ratio (Fig. 5-5)

A. Rock Switch 6 to move SEND menu cursor to PAR.

NOTE

Turn volume control ("Switch" 15) up or down as desired to increase or decrease the volume of the speaker sound. With Switch 14 in <MON SND>, the speaker is monitoring the PAR waveform being sent.

B. Rock Switch 5 to move MEASURE menu cursor to PAR.
C. Read "00.0 ±1.0 DBM 100 ±2 PAR" on display.

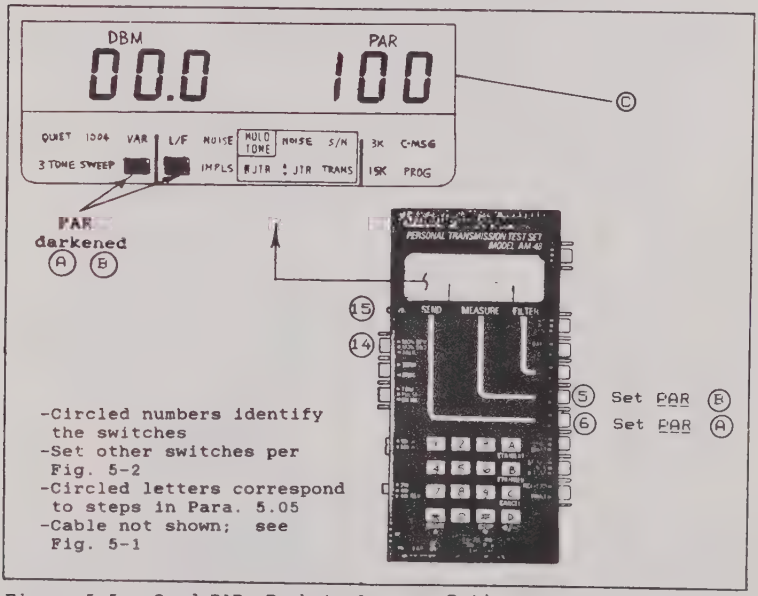

Figure 5-5. Send PAR, Peak-to-Average Ratio

5.06 DIALING (Fig. 5-6)

A. Rock Switch 6 to move SEND menu cursor to QUIET.
B. Rock Switch 5 to move MEASURE menu cursor to L/F.
C. Set Switch 2 (display select) to <SEND>.
D. Set Switch 7 to <MF>.
E. Set Switch 12 to <TONE>.
F. Turn volume control ("Switch" 15) all the way up for maximum speaker volume.

5.06 DIALING (Fig. 5-6), continued

G. Press various keys on the keypad to dial MF (multiple frequency) tones. Listen to the dual tones coming from the speaker. The speaker will emit the tones as long as the key is held down. Note that key [D] has no MF tones.

NOTE

See Table 7-7 for list of dual frequencies transmitted in tone dialing.

H. When doing step G, the display will read "DIAL -10.0 DBM". This indicates that -10.0 dBm (factory setting) is the send level. Tone dialing send level can be changed; see Para. 7.12,3 and Fig. 7-1 for "TTLEV" (Touch Tone Level) display.

I. Set Switch 7 to <DTMF>.

J. Press various keys on the keypad to dial DTMF (Dual Tone Multiple Frequency) tones. Listen to the dual tones coming from the speaker. The speaker will emit the tones as long as the key is held down.

K. The display will read as in Step H.

L. Set Switch 12 to <PULSE>.

M. Press the keys on the keypad and note that no sound is heard. No battery is connected to the line and line battery voltage is required for pulse dialing.

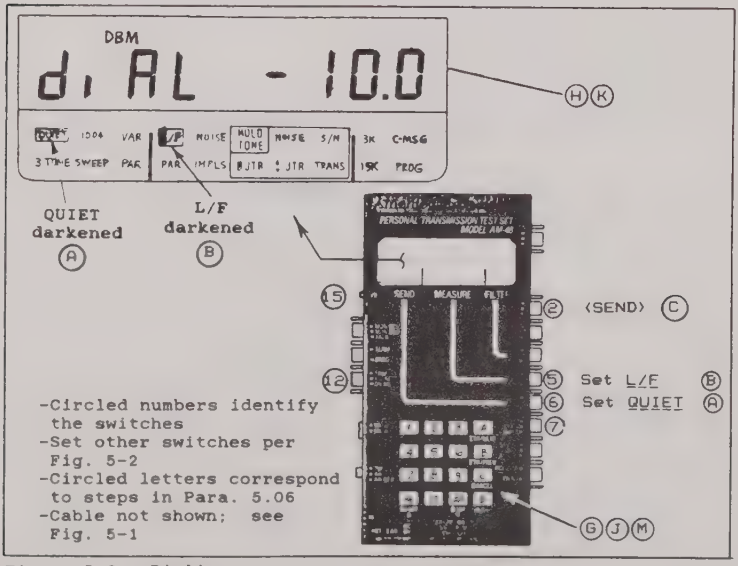

Figure 5-6. Dialing

5.07 PARAMETER VALUES FOR SEND SWEEP (Fig. 5-7)

A. Set Switch 2 to <SEND>.
B. Set Switch 7 to <SHIFT>.
C. Rock Switch 6 to move SEND menu cursor to SWEEP.

NOTES
-The MEASURE menu cursor can be in any mode.
-Turn volume control ("Switch" 15) up or down as desired to increase or decrease the volume of the speaker sound. With Switch 14 in <MON SND>, the speaker is monitoring the frequencies being swept.

D. Display will read "00.0 DBM" and frequencies which start at "204 HZ" and increase in 100 Hz steps every second up to 19,904 Hz, at which time the sweep starts again at 204 Hz.
E. Rock Switch 6 once to momentarily exit SWEEP mode. Rock Switch 6 once in the opposite direction to re-enter SWEEP mode (SEND menu cursor back to SWEEP). Note that the sweep starts again at 204 Hz.
F. Press [ETR/NEXT] on the keypad ([A] key).
G. Display will change to "LEVL 00.0 DBM". This is the first of five (5) default parameter settings which are shown in Fig. 5-7.
H. Repeat Step F four (4) more times and observe the NEXT displays in sequence:
I. "STRT 204 HZ"
J. "STOP 19904 HZ"
K. "STEP 100 HZ"
L. "RATE 1.0"
M. Press [ETR/PREV] on the keypad ([B] key) five (5) times and observe the PREVIOUS displays appear in reverse sequence.

NOTE
In the remaining steps, an example will be given of setting new parameter values for the SWEEP mode. Note carefully the procedure because the same procedure is used for setting all AM-48 parameter values.

N. Repeat Step E to start with the first SWEEP display.
O. Press [ETR/NEXT] to go to the NEXT display (sweep frequency LEVEL).
P. Press [+/-], same as [D] key. Then press [5] and [0]. Display now reads "LEVL -05.0 DBM". Press [+/-] several times and notice the "-" sign appear and disappear. Leave display with the "-".
Q. Press [ETR/NEXT] again. This EnTeRs the new LEVEL, -5.0 dBm.
R. Press [ETR/NEXT] to go to the NEXT display (START frequency setting).
S. Press [4], [0], [0]. Display now reads "STRT 400 HZ".
T. Press [ETR/NEXT] again. This EnTeRs the new START frequency, 400 Hz.

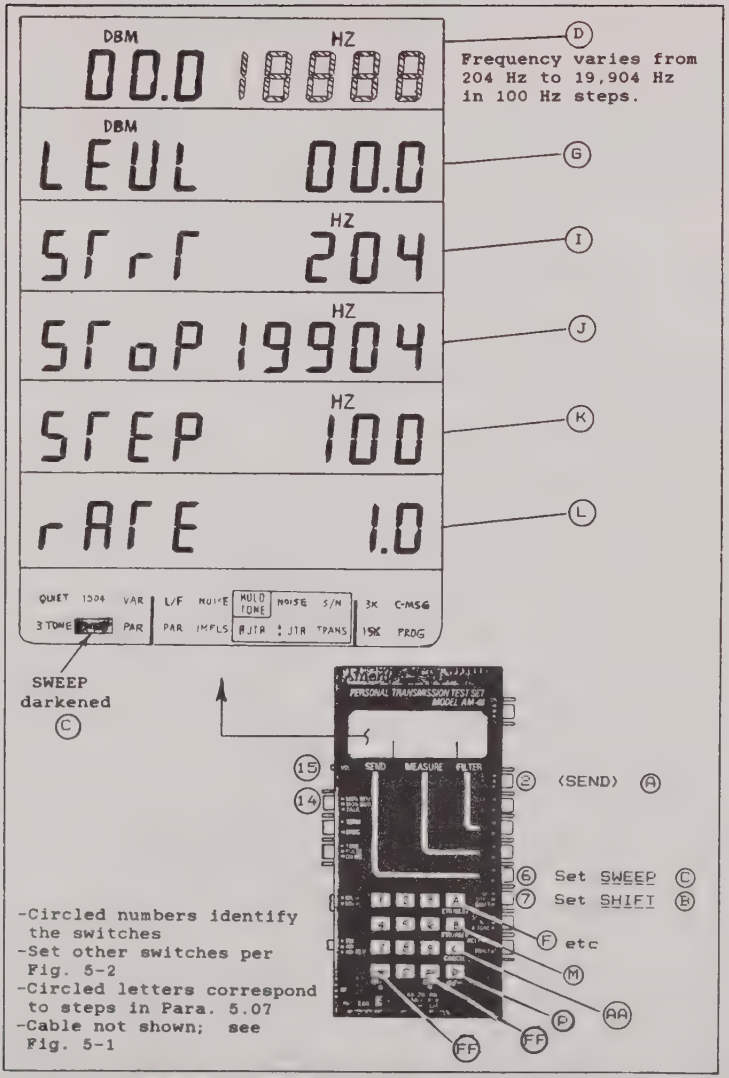

Figure 5-7. Default Parameter Settings for SWEEP Send Mode

5.07 PARAMETER VALUES FOR SEND SWEEP (Fig. 5-7), continued

U. Press [ETR/NEXT] to go to the NEXT display (STOP frequency setting).
V. Press [1], [6], [0], [0]. Display now reads "STOP 1600 HZ".
W. Press [ETR/NEXT] again. This EnTeRs the new STOP frequency, 1600 HZ.
X. Press [ETR/NEXT] to go to the NEXT display (frequency STEP setting).
Y. Display now reads "STEP 100 HZ".

NOTE

In the next step, a "mistake" will be made when entering a new parameter value to show how it can be corrected.

Z. Press [2], [0], [0]. Display now reads "STEP 200 HZ". This is a mistake; desired step is actually 300 Hz.
AA. Press [CANCEL], same as [C] key. The incorrect value is gone and the display now reads as in Step Y.
BB. Press [3], [0], [0]. Display now reads "STEP 300 HZ", the desired value.
CC. Press [ETR/NEXT] again. This EnTeRs the new frequency STEP, 300 HZ.
DD. Press [ETR/NEXT] to go to the NEXT display (RATE, i.e. duration of each frequency in the sweep).
EE. Display now reads "RATE 1.0".
FF. Press [△] momentarily repeatedly and notice the time increase 0.1 sec. at a time: 1.1, 1.2, 1.3, ...sec. Hold [△] down continuously and notice that the time starts increasing in steps of 1.0 sec, for example 2.0, 3.0, 4.0, ...sec. Press momentarily and/or hold down [▽] and note that the time decreases in steps of 0.1 and/or 1.0 sec. Use [△] and [▽] as necessary to step the time (rate) to 2.0 sec.
GG. Display now reads "RATE 2.0".
HH. Press [ETR/NEXT] to return to the original display. Instead of the sweep that was seen in Step D, there is now a new sweep according to the settings just made. Display now reads "-05.0 DBM" and frequencies which start at "400 HZ" and increase in 300 Hz steps every 2 seconds up to 1600 Hz, at which time the sweep starts again at 400 Hz.

NOTE

The new parameter settings will remain until (1) they are changed or (2) power is turned off. If power is turned off, the settings will revert back to the default settings as shown in Fig. 5-7.

This completes the self test. See Section 7 for complete operation instructions and details of other tests and parameter settings not covered here.

6. CONNECTION AND CONFIGURATION INSTRUCTIONS

6.01 INTRODUCTION

This section describes the AM-48 connections and configurations made in preparation for testing. It is divided into the following paragraphs:

6.02 General
6.03 Connectors and Cables
6.04 600 Ohm/900 Ohm Line Termination Impedances
6.05 Impedance Adaptor
6.06 Configurations

In Para. 6.06, basic operating instructions are given for testing with the Western Electric 829 loopback device and also with Ameritec responders.

NOTE

Section 7 gives detailed AM-48 operating instructions; Section 8 explains the meanings of the measurements.

6.02 GENERAL

Low-Level Noise Measurements. Power the AM-48 with batteries when making a low-level noise measurement. Do not power the AM-48 with the AC Adaptor for this test because interference from the AC source can affect the measurement.

"Dry" Circuit Measurements. Set Switch 12 (Fig. 3-4/FOLDOUT) to <ON HK> when making measurements on "dry" (4-wire only) circuits. "Dry" circuits have no loop current.

Independent Send and Measure Modes. The Send, Measure and Filter modes of the AM-48 operate completely independently. Any combination of Send, Measure or Filter can be selected. However, depending on the setup, the resulting measurements may or may not be valid.

For example, a 1004 Hz holding tone must be sent for various measure modes and a PAR waveform must be sent when PAR is measured. If the 1004 Hz tone or PAR waveform were not present in the corresponding measurement, the measurement would not be valid. The AM-48 configuration (see Para. 6.06) determines in what part of the system the signals need to be sent and measured.

The correct Send, Measure and Filter modes are indicated for each test described in the operating instructions of Sections 5 and 7.

6.03 CONNECTORS AND CABLES

See Fig. 3-2 and Fig. 3-3 for illustrations of the AM-48 connectors and cables. Note that some cables are standard and others are optional. Connect the appropriate cable(s) described in this paragraph according to the desired application.

6.03 CONNECTORS AND CABLES, continued

AC Adaptor. Connect the circular connector of the AC Adaptor to the <DC 9V> AC Adaptor Plug. Plug the two (2) prongs on the other end into a standard 115 Vac wall socket. Observe the WARNING in Para. 4.03.

Earphone. The earphone can be used in place of the speaker. Use the earphone to hear better in noisy environments or to listen without disturbing other people in the area. See WARNING in Para. 3.05,15 before connecting the earphone. Plug the Earphone into the <EAR> Earphone Jack. Note that the internal speaker is disconnected when the Earphone is plugged in.

Printer Cables. There are two (2) types of cables used with printers. The 48-0079 is used with the AM-47 Hand-held Printer. The 48-0078 is used to connect to most other 25-pin female serial EIA printers; the pin assignments of the male connector: 2=RCV, 3=XMIT, 7=GND, 20=Data Terminal Ready (+12V, typical).

Figure 6-3 shows the connections for the AM-47 Hand-held printer. See Para. 7.39 for operating instructions for printing.

Line Connection Cables. The RJ-11 (modular) and three (3) Bantam cables illustrated in Fig. 3-3 are used for line connections. Use these cables as required to connect the AM-48 to 2-wire or 4-wire lines. Fig. 6-1 and Fig. 6-2 illustrate and define Modular and Bantam line connections. Be sure to set Switch 10 (Fig. 3-4/ FOLDOUT) to the appropriate position, as indicated in the figures.

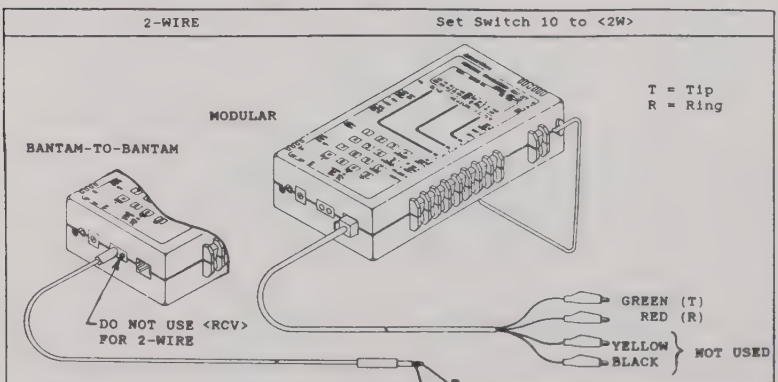

Figure 6-1. 2-Wire AM-48 Line Connections

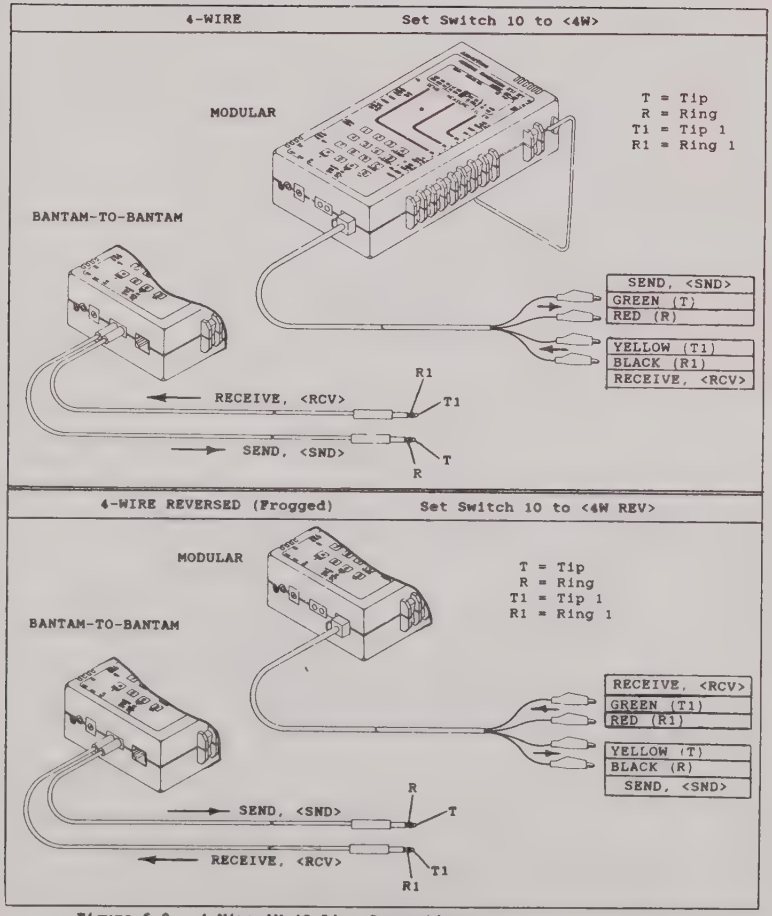

Figure 6-2. 4-Wire AM-48 Line Connections

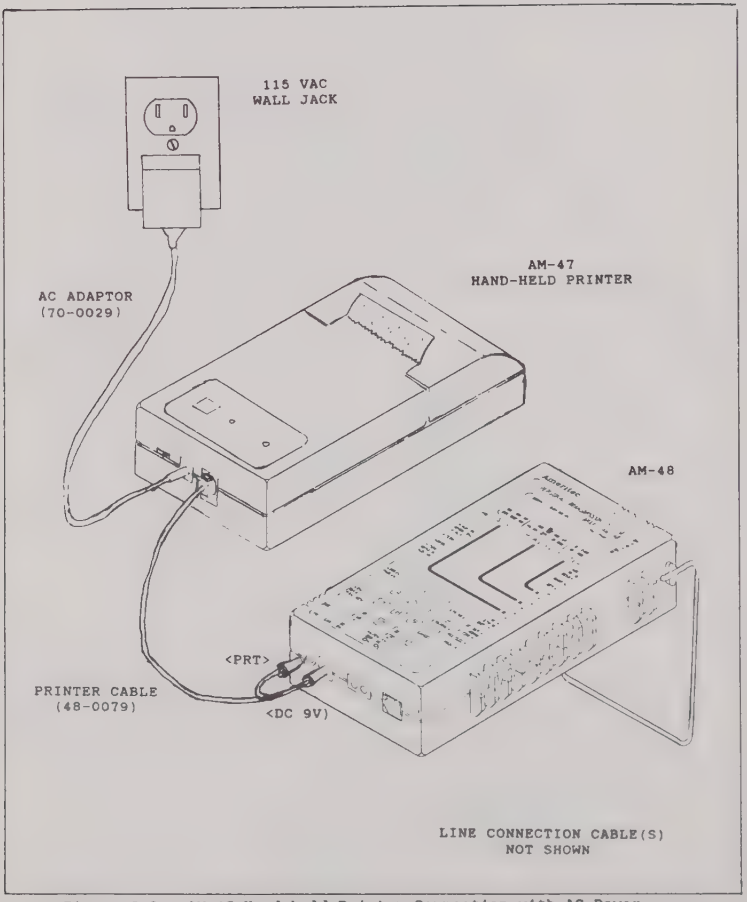

Figure 6-3. AM-47 Hand-held Printer Connection with AC Power

Line Connection Cables, continued.

NOTES
-The RJ-11 and Bantam jacks are wired in parallel, resulting in the identical connection by using either type of plug.
-Do not use the <RCV> jack to connect 2-wire lines.

AM-48 Interface with Line Connections. The position of Switch 10 (Fig. 3-4/FOLDOUT) determines the connection of the AM-48 internal circuitry to the 2-wire or 4-wire lines. The connections for the different settings of Switch 10 are listed below:

<2W> Connects together the internal measurement circuitry and signal generator across the 2-wire line at the <SND> jack; the signal generator source impedance of 600 or 900 Ohms (determined by Switch 11) terminates the line in all signal generator modes except QUIET. In QUIET mode, the line will be terminated only if Switch 13 is set to <TERM>. Note that the <RCV> jack is not used to connect to 2-wire lines.

<4W> Connects the internal measurement circuitry to the <RCV> pair and the internal signal generator to the <SND> pair.

<4W REV> Send and receive pairs (as defined above) are reversed.

See Para. 6.04 and Para. 6.05 for details about line termination impedances.

AM-48 is Polarity Insensitive. It does not matter which way the Send pair or the Receive pair of contacts are connected. The Send <SND> T and R can be interchanged without affecting the measurement. Also the Receive <RCV> T1 and R1 could be switched without changing the measurement. For example, in Fig. 5-1, which shows the loopback connections for self-test, the connections could be changed as indicated below:

FIG. 5-1 CONNECTIONS	ALTERNATE CONNECTIONS
RED (R) to BLACK (R1) GREEN (T) to YELLOW (T1)	RED (R) to YELLOW (T1) GREEN (T) to BLACK (R1)

In general:

1. For 4-wire,
   A. Use the <SND> T and R (connected either way) for the Send contacts
   B. Use the <RCV> T1 and R1 (connected either way) for the Receive contacts
2. For 2-wire, use <2W> T and R (connected either way); these contacts are the same as the <SND> for 4-wire.

6.04 600 OHM/900 OHM LINE TERMINATION IMPEDANCES

It is important that the line(s) be properly terminated with a matching impedance. This paragraph gives instructions for terminating lines with 600 Ohms or 900 Ohms impedance. To terminate lines with impedance other than 600 Ohm or 900 Ohm, connect the Ameritec Impedance Adaptor per Para. 6.05.

To terminate the line(s) correctly with 600 Ohms or 900 Ohms:

1. Choose either terminate or bridge mode:
   A. Set Switch 13 to <TERM>, terminate mode or
   B. Set Switch 13 to <BRDG>, bridge mode, and terminate the line with some other device (such as a modem) of proper impedance.
2. Regardless of the method of termination, set Switch 11 to <600Ω> or <900Ω> to match the impedance of the line.

NOTE

A wrong Switch 11 setting results in about 1.8 dB error in level and noise readings.

Switch 13 Settings. The connections for the settings of Switch 13 are listed below:

<TERM> Receive line terminated with a resistive impedance as selected by Switch 11.

<BRDG> Receive line unterminated and bridged only with the impedance of the measurement circuitry (>25K ohms) across the receive pair.

NOTE

In 2-wire mode, the signal generator source impedance will terminate the line with 600 Ohms or 900 Ohms with Switch 13 in either <TERM> or <BRDG>. However, if SEND is in QUIET mode, Switch 13 will be able to function. In 2-wire QUIET send mode, setting Switch 13 to <BRDG> will disconnect the signal generator from the send pair and the send pair source impedance will be >25K Ohms. There will be an error of 6 dB if <BRDG> is incorrectly selected when the line should be terminated with <TERM>.

Switch 11 Settings. The connections for the settings of Switch 11 are listed below:

<600Ω>
1. 600 Ohms applied across the Receive pair when Switch 13 is set to <TERM> and
2. Send pair source impedance set at 600 Ohms.

<900Ω>
1. 900 Ohms applied across the Receive pair when Switch 13 is set to <TERM> and
2. Send pair source impedance set at 900 Ohms.

6.05 IMPEDANCE ADAPTOR

The Impedance Adaptor (24-0005) is used:

1. To match the AM-48 to a user interface of impedance other than 600 Ohms or 900 Ohms or
2. To match 4-wire split impedances.

See Fig. 3-9 for an illustration of the Impedance Adaptor; Fig. 9-2 is the schematic diagram of the Impedance Adaptor.

The Impedance Adaptor is used to adapt the AM-48 to impedances of 75, 135, 150 or 1200 Ohms. For example, high speed digital lines typically have impedances of 75, 135 or 150 Ohms. A "THRU" setting on the Impedance Adaptor makes a straight through connection resulting in a 600 or 900 Ohm termination inside the AM-48.

To use the AM-48 with the Impedance Adaptor:

1. Set AM-48 Switch 11 to <600Ω> and Switch 13 to <BRDG>.
2. Plug the Impedance Adaptor into the AM-48 modular jack.
3. Plug a modular line cable into the jack on the Impedance Adaptor.
4. Connect the line cable to the 2-wire or 4-wire line per Fig. 6-1 or Fig. 6-2.
5. Turn knob(s) on Impedance Adaptor to match impedance of the line:
   A. For 2-wire, use only the upper knob.
   B. For 4-wire, set the upper knob to match the Send pair impedance and the lower knob to match the Receive pair impedance.

NOTE

The reading on the AM-48 display needs to be corrected when the Impedance Adaptor is used; see Para. 7.41 for instructions.

6.06 CONFIGURATIONS

There are three (3) basic AM-48 configurations to test 2-wire and 4-wire telephone and data communication lines:

1. End-to-end -- requiring two (2) AM-48s
2. Loopback
3. Testing with responders

This paragraph describes the different configurations, explains how they are used, and discusses the advantages and disadvantages.

GENERAL APPLICATION NOTE

-End-to-end and responder testing apply to either 2-wire or 4-wire.
-Loopback testing only applies to 4-wire.

End-to-End Testing (Fig. 6-4). Measurements on telephone transmission lines are usually made by applying an appropriate signal at one end of the transmission line and then measuring the results at the other end of the line. This configuration requires a test set at each end of the line and is called "end-to-end" testing.

End-to-End Testing, continued. Fig. 6-4 shows a 4-wire end-to-end configuration, making measurements over a telephone network that normally connects two (2) modems. Each AM-48 both sends and receives signals, sending a signal over the <SND> pair of lines and measuring the signal received over the <RCV> pair of lines.

End-to-end testing can also be done over 2-wire lines. The AM-48 on one end sends a signal and the AM-48 on the other end measures the received signal.

End-to-end testing is the most reliable for characterizing the near-to-far and far-to-near impairments, but it has the disadvantage of requiring two (2) test sets and an operator at each test site.

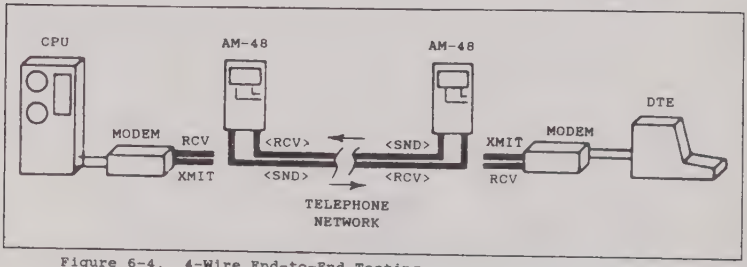

Figure 6-4. 4-Wire End-to-End Testing

Loopback Testing. The distant end of a 4-wire transmission line can be looped back (1) manually or (2) with a commandable loopback device such as the Western Electric Model 829. The AM-48 at the near end sends a signal which travels to the distant end where it makes a U-turn and travels back to the AM-48 which measures the received signal.

The advantage of this configuration is that it requires only one (1) operator and test set at a central site. Although this method is more convenient and less costly than end-to-end testing, it is also less reliable. The disadvantage is that it does not characterize transmission impairments in each direction. Instead of detecting impairments, a loopback measurement could actually cover them up; an apparently satisfactory loopback measurement may contain impairments in each direction which cancel each other! This method of testing may be useful, however, providing its limitations are recognized.

NOTE

A loopback test can not be done on 2-wire because signals can not be sent and measured simultaneously on the same pair of lines.

Loopback Testing, continued.

To do a loopback test with a Western Electric Model 829:

1. Connect the AM-48 at the near end of the 4-wire line under test.
2. With Switch 8 (Fig. 3-4/FOLDOUT), momentarily press <X TONE> to send a 2713 Hz tone over the <SND> line. This will trip the distant Model 829 into loopback.
3. Send the desired test signal with the AM-48 and make the desired measurement of the looped-back signal.
4. After testing is finished, momentarily press <X TONE> to restore the Model 829 to its normal, transparent state.

Testing with Responders (Fig. 6-5 and Fig. 6-6). Using multi-function responders has most of the advantages of end-to-end testing with the added advantage of not requiring an AM-48 at the far end of the system. This configuration is similar to loopback testing except that the responder can generate signals in addition to looping back. Unlike a dedicated loopback device, responders can be used in 2-wire far-to-near testing.

On 4-wire circuits, a DTMF commandable responder, such as the Ameritec Model AM3-4, may be placed permanently at the distant modem where it remains transparent until commanded by DTMF signals sent from the AM-48 at the central site. In addition to performing loopback, the responder can send various tones; this allows far-to-near tests as well as loopback tests.

EXAMPLE: 4-wire far-to-near and loopback tests for level and frequency with an Ameritec AM3-4A or AM3-4B Responder:

1. Connect an AM-48 to the near end of a 4-wire facility and an Ameritec Model AM3-4A or AM3-4B Responder at the far end. A typical configuration is illustrated in Fig. 6-5.
2. Use AM-48 keypad to send the appropriate DTMF command sequence to command the responder into milliwatt mode (responder will generate 1004 Hz, 0dBm signal). Measure received signal and note level and frequency.
3. Use AM-48 keypad to send DTMF command sequence to command responder into loopback.
4. Use AM-48 to send 1004 Hz tone @ 0dBm. Measure loopback received level and frequency.
5. Use AM-48 keypad to send DTMF command sequence to restore responder to normal.

On a 2-wire network, dial access responders are very useful in measuring far-to-near characteristics. An Ameritec AM3-2C Responder (automatic milliwatt) or AM3-2A Responder can be dialed up over the network path under test using the AM-48 keypad. It can then be commanded with touch tone from the AM-48 to make level measurements or send tones. The AM3-2C can perform far-to-near level and frequency, idle channel noise and noise with tone. In addition to the AM3-2C functions, the AM3-2A can also perform far-to-near gain slope and near-to-far level. A typical configuration is illustrated in Fig. 6-6.

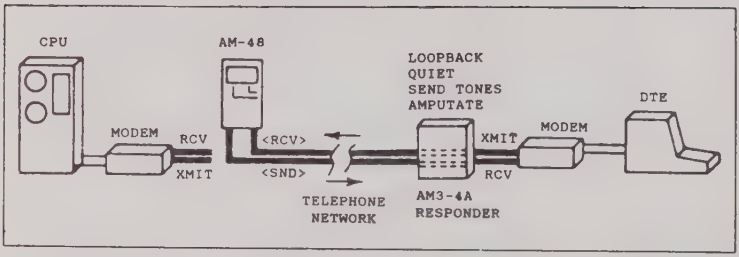

Figure 6-5. 4-Wire Testing with Responder

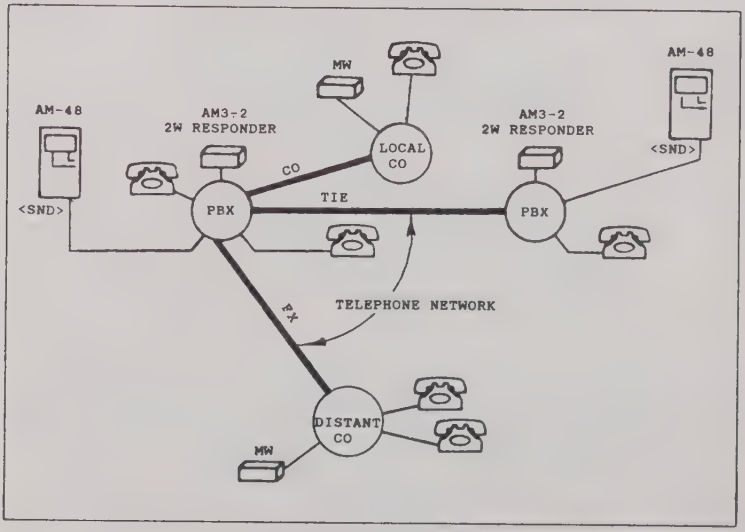

Figure 6-6. 2-Wire Network Testing with Responders

7. OPERATING INSTRUCTIONS

IMPORTANT

Set up the AM-48 per Section 6 before performing operations in this section.

7.01 INTRODUCTION

The AM-48 operating instructions in this section are divided into five (5) major subjects with paragraphs as listed below:

7.02 GENERAL INSTRUCTIONS AND NOTES
- 7.03 General Operating Notes
- 7.04 Figure Format
- 7.05 General Switch Setup
- 7.06 Multiple Use of Keys
- 7.07 Memory
- 7.08 General Procedure to Set New Parameter Values

7.09 SEND (GENERATOR) MODES AND PARAMETER SETTINGS
- 7.10 Types of Send Signals
- 7.11 Send Quiet
- 7.12 Set Parameters from Quiet Display
- 7.13 Send Momentary Variable Tones
- 7.14 Send 1004 Hz
- 7.15 Send Continuous Variable Tone
- 7.16 Send 3-Tone Slope
- 7.17 Send Variable Sweep
- 7.18 Send PAR Waveform
- 7.19 Send Momentary 2713 Hz Tone

7.20 GENERAL MEASURE MODE NOTES
- 7.21 Accuracy of Measurements
- 7.22 Absolute and Relative Measurements
- 7.23 Special Measurement Requirements
- 7.24 Timed Tests

7.25 MEASURE MODES AND PARAMETER SETTINGS
- 7.26 Measure Level and Frequency
- 7.27 Measure Noise
- 7.28 Measure PAR
- 7.29 Measure Impulse Noise
- 7.30 Measure Notched Noise
- 7.31 Measure S/N Ratio
- 7.32 Measure Phase Jitter
- 7.33 Measure Amplitude Jitter
- 7.34 MeasureTransients (Impulse Noise, Notched Noise, Phase Hits, Gain Hits and Dropouts)

7.35 MISCELLANEOUS OPERATIONS
- 7.36 Store and Recall
- 7.37 Dialing
- 7.38 Talking
- 7.39 Printing
- 7.40 Auto Study Result Save
- 7.41 Impedance Adaptor Measurement Corrections
- 7.42 Auto Calibrate

It is assumed in this section that the user is familiar with basic AM-48 operation, having followed the self-test instructions of Section 5. Instead of step-by-step procedures with full details, the instructions refer to the figures which summarize the information needed to perform a test.

Read the general notes in Paragraphs 7.02 thru 7.10 and 7.20 thru 7.24 before going to specific operating instructions.

GENERAL INSTRUCTIONS AND NOTES

7.02 Paragraphs 7.03 thru 7.08 cover general instructions and notes. These paragraphs should be read before doing a specific test or operation.

7.03 GENERAL OPERATING NOTES

Keys. Do not be afraid to experiment with the keys. The AM-48 will not accept an "illegal" or meaningless keystroke. If an out-of-tolerance value is entered in a user-programmable variable field, the display will default to an acceptable value.

Displays

1. The units of measurement appear at the top of the display above the value. Time and count units are not shown but are given in the table next to the corresponding display in the figures.
2. Display decimal points will flash when batteries are low.
3. Displays of "OVER" or "UNDR" indicate the signal being monitored is too high or low to be read.
4. Depending on the mode, there may be multiple displays through which one can scroll. All displays accessible from each mode are shown in the figures.
5. To quickly go to the initial display from another display in a scroll, momentarily exit and then re-enter the same mode by moving the cursor. See EXAMPLE in Para. 5.07,E.

Check List. Go through the following check list to cover important points while performing any operation:

1. Look at the cursor positions on the menus. These indicate what SEND and MEASURE Mode are selected and what noise-weighting FILTER is connected.
2. Note the color-coding and framing of the cursor menus and use these to determine if a filter is needed (orange functions) or a holding tone is needed (within the rectangle) for the present position of the cursors. See Para. 3.07 and Para. 7.23 for explanation of menu framing.
3. Note the setting of Switch 2, the Display Select Switch. This will indicate what is being viewed on the display. <ABS> or <REL> indicate display is viewing MEASURE mode, <SEND> indicates display is viewing SEND mode.
4. Note the setting of Switch 7. This indicates whether the keyboard is connected to dial (<DTMF> or <MF>) or to operate the auxiliary functions (<SHIFT>).

7.04 FIGURE FORMAT

Figures 7-1 thru 7-9 show the display(s) which can be accessed from the indicated SEND or MEASURE mode. The position of the menu cursor, the necessary switch settings, and other pertinent information is indicated in each figure. A detailed description of the arrangement of the figures is listed below:

1. The display fields are shown with three (3) types of characters. The characters are illustrated at the bottom of some figures in a table labeled "DISPLAY CHARACTER CODE". The meanings of the characters:
   A. Solid: These letters and numbers are fixed and will always appear just as they are shown. They are abbreviations for the names of the parameters.
   B. Cross-hatched: These characters represent values that are variable but cannot be changed by the user from the display in which they are shown. In the SEND modes these indicate the level and frequency being sent; in the MEASURE modes, they give the measured values.
   C. Plain: These characters represent parameter values that are variable and can be changed by the user from the display in which they are shown.
2. Next to each display is a table of information and instructions which apply to the adjacent display. The middle column of the table gives the range of acceptable values to enter for a variable parameter or the range of values that can be measured.
3. The SEND or MEASURE cursor setting is shown darkened on the menu just as it appears at the bottom of the AM-48 display. There are always three (3) cursors in view, although only one (1) is shown in each of the figures. The positions of the other two (2) cursors will depend on the test configuration and setup.
4. The switch settings are indicated next to the location of the switches in the illustration of the AM-48 at the bottom of the figure. Only the necessary switch settings for the test under consideration are shown. Set the other switches as appropriate according to the test configuration and setup.
5. The notes on the left at the bottom of the figures relate to the displays; the notes on the right relate to the switches and keyboard.
6. At the bottom of some figures, an alternate display(s) is illustrated, e.g. "OVER" or "UNDR", which may come up to call attention to an out-of-tolerance condition.

7.05 GENERAL SWITCH SETUP

See Para. 3.05 for a summary of the use of each switch. Refer to FOLDOUT (copy of Fig. 3-4) at end of manual for switch identification numbers. Note the color-coding of the switches according to their function (see Para. 3.02). Follow the guidelines below for proper switch setup:

1. Make connections and set Switches 10, 11 and 13 per the line interface. See Para. 6.03 thru 6.05 for details.
2. Connect and turn on power with Switch 1 per Section 4.
3. Switch 2, Display Select, determines what appears on the display. Set Switch 2 to the desired position:
   A. <ABS> to view MEASURE display (see Para. 7.22 for use of <REL> position)
   B. <SEND> to view SEND display
4. Use Switches 5 and 6 to set display cursor to desired SEND and MEASURE modes, and Switch 4 to select noise-weighting filter, if required (see Table 7-5).
5. Set Switch 7 to <SHIFT> to enable auxiliary keyboard functions to:
   A. Scroll through multiple displays
   B. Use keyboard to change a parameter value
   C. Send momentary user-programmed tone from keyboard in QUIET mode.
   D. Do Store/Recall
   E. Run a transient test
   F. Do auto calibrate

   Leave Switch 7 in <Shift> except when dialing.
6. Use Switches 3, 14 and 15 to connect speaker or earphone to desired monitoring point and adjust volume. As a rule, leave Switch 3 in <OFF>.
7. Leave Switch 8 in <NOR> unless it is desired to avoid transmission of tones in the signaling frequency band (in which case, set to <SF SKIP>).
8. Use Switch 9 as required to Store and Recall setups or output information to the Printer port. See Para. 7.36 and Para. 7.39.
9. Leave Switch 12 in <ON HK> except to go off-hook on 2-wire dial access lines. <TONE> and <PULSE> are off-hook positions and connect a 200-Ohm DC short across T and R.

Display Damping Switch. Set Switch 3 to <OFF> for a normal display update of four (4) times per second -- or to <DAMP> to slow the display update to two (2) times per second.

Switch 3 also affects the monitor point of the speaker. Refer to the upper part of Fig. 9-1 with the descriptions below:

1. With Switch 14 set to <MON RCV> and Switch 3 set to <OFF>, the speaker monitors the signal on the <RCV> jack (T1,R1) for 4-wire operation.
2. With Switch 14 set to <MON RCV> and Switch 3 set to <DAMP>, the speaker monitors the received signal (from T1,R1 in 4-wire operation, or T,R in 2-wire operation) at a point following the noise weighting filter, notch filter (if in use) and auto-ranging amplifiers. This is particularly useful for audibly monitoring the residual noise in notched noise and S/N ratio measurements.

7.06 MULTIPLE USE OF KEYS

Multi-Function Keyboard. See Table 7-1 for different uses of the keyboard, per the setup (switch numbers per Fig. 3-4/FOLDOUT):

Table 7-1
Setup Requirements for Different Keyboard Applications

KEYBOARD USE	SWITCH 7 POSITION	SWITCH 12 POSITION	
		2-WIRE OFF-HOOK (loop current)	2-WIRE ON-HOOK OR 4-WIRE
Dial DTMF	<DTMF>	<TONE>	<ON HK>
Dial MF	<MF>	<TONE>	<ON HK>
Dial Pulse	<DTMF> or <MF>	<PULSE>	-----
		DISPLAY REQUIREMENTS	
Send Momentary Variable Tone	<SHIFT>	From QUIET SEND Display	
Set Parameter Values	<SHIFT>	Displays in Fig. 7-1 thru 7-9 with plain (not cross-hatched) characters	

Keys with Two (2) Auxiliary Functions. The [*] and [#] key each have two (2) auxiliary functions. The [START]/[△], on the [*] key, and [STOP]/[▽], on the [#] key, are enabled per the setup.

The [START] and [STOP] functions only operate from certain displays in a timed test; see Para. 7.24,3.

See Para. 7.08,2,3 for explanation of the use of the [△] and [▽] functions. When the [△] or [▽] key is pressed continuously, the "auto-repeat" feature is enabled and steps a parameter value repeatedly in steps 10 times the normal step. Table 7-2 lists the momentary and continuous press steps.

Table 7-2
Steps for [△] and [▽] Keys

PARAMETER	MOMENTARY PRESS STEP	CONTINUOUS PRESS STEP
Frequency	10 Hz	100 Hz
Level	0.1 dB	1.0 dB
Time	0.1 minute	1.0 minute

Note that in changing a level, the [△] key steps mathematically more positive and the [▽] key steps mathematically more negative. For example, if a negative level is stepped down with the [▽] key, the value of the number itself will become larger.

7.07 MEMORY

Parameter Values Stored in Memory. Some user-programmable parameter values are stored in volatile memory and others are stored in non-volatile memory. Table 7-3 lists the variable parameters and indicates in which memory they are stored. General information about the two (2) types of memory is given below:

1. Volatile Memory. User-set values stored here will be stored as long as the AM-48 power is on or until they are changed by the user. When power is turned off or times out (after turning on with the momentary power switch), the user-set volatile memory values will be lost and revert to the default values.

2. Non-Volatile Memory. Values stored here will stay stored even if AM-48 power is turned off. They will remain until they are changed by the user to another value. Also stored in non-volatile memory are the results and the parameter settings of the last timed impulse noise or transient test. Note that the timed test information is not stored in non-volatile memory unless the test is actually run. In order to allow the transfer of timed test information into non-volatile memory, the AM-48 power will not time-out during a timed study. The time-out timer restarts at the end of a timed study.

Level Display. There is only one level setting and it is stored in volatile memory. For convenience, the level display which shows this value can be accessed from any SEND display. The level display is always the second display in the scroll. To access the level display:

1. Set Switch 2 to <SEND>
2. Set Switch 7 to <SHIFT>
3. Rock Switch 6 to select any SEND mode
4. Press [ETR/NEXT]
5. Level display will appear

Remember that when the level value is changed, it changes the level for all SEND signals, except for dialed tones (see Para. 7.12,3 for instructions to set touch tone level). When power is turned off, the send level always defaults to 00.0 dBm. The level for dialed tones, however, is stored in non-volatile memory.

Store/Recall. Up to 10 test setups, including parameter values, can be stored in non-volatile memory. A stored test setup can be recalled, avoiding the need to set cursors and re-enter parameter values for a routine test. See Para. 7.36 for instructions.

Table 7-3
User-Programmable Parameter Values Stored in Memory

VOLATILE MEMORY

PARAMETER	DEFAULT VALUE
Level	00.0 dBm
Variable Frequency	1004 Hz
Variable Sweep Start Frequency	204 Hz
Stop Frequency	19,904 Hz
Step	100 Hz
Rate	1.0 sec
Jitter Bandpass Range	20 Hz - 300 Hz

NON-VOLATILE MEMORY

PARAMETER	FACTORY SETTINGS
Dial Level (DTMF and MF)	-10.0 dBm
Blanking Interval	125 ms
Time Off with Momentary Power	16 minutes
10 Momentary Frequencies (with Volatile Memory Level)	Not Applicable
10 Test Setups (Stored on Number Keys using <RCL/STO>)	Not Applicable
Timed Test Parameters Duration of Timed Test Impulse Noise Delta Impulse Noise Threshold Phase Hit Threshold Gain Hit Threshold Timed Test Results Time Elapsed Low Impulse Count Middle Impulse Count High Impulse Count Noise Phase Hit Count Gain Hit Count Dropouts Phase Locked Loop Frequency	Not Applicable Not Applicable

7.08 GENERAL PROCEDURE TO SET NEW PARAMETER VALUES

NOTES
-Set Switch 7 to <SHIFT> to enable the keys to perform the auxiliary functions.
-See Para. 7.36 for instructions to store new parameter values for future use.

Items 2,3,4,5,7 and 8 shown in Fig. 3-5 are the auxiliary keyboard functions that are used together with the number keys to set new parameter values. Para. 3.06 explains how these keys are used.

See Para. 5.07, Steps N thru HH, for an EXAMPLE of setting new parameter values. To summarize, there are three (3) procedures used to set new parameter values (confirm Switch 7 in <SHIFT>):

1. Scroll Through the Displays. To view the displays without making any changes in parameter values,
   A. Press [ETR/NEXT] to go to the NEXT display and
   B. Press [ETR/PREV] to go to the PREVious display.

2. Set a New Parameter Value Using the Number Keys.
   A. Press any number key or the [+/-] key to clear the display of the old parameter value and start writing a new value on the display.

      NOTE
      Now the [△] and [▽] keys will not work.

      Finish writing the new value with the number keys.

   B. If a mistake is made in Step A above, press [CANCEL] to clear the display and view the old value again.
   C. After writing a desired new value with the number keys in Step A above, press either [ETR/NEXT] or [ETR/PREV] to EnTeR the new value into memory, replacing the old value.

      NOTE
      Now [CANCEL] will not work.

   D. Use Procedure 1 above to go to another display.

3. Set a New Parameter Value Using the [△] and [▽] Keys.
   A. Press [△] and/or [▽] to step the displayed parameter value up or down to a new value. To step in increments 10-times the normal increment, hold the key down continuously. See Table 7-2 for step values. The new value displayed is entered directly into memory, replacing the old value.
   B. The [CANCEL] key will not work here because the new value directly replaces the old value in memory.
   C. [+/-] can not be used to change the sign because it will clear the display (see Procedure 2A above).
   D. Use Procedure 1 above to go to another display.

SEND (GENERATOR) MODES AND PARAMETER SETTINGS

7.09 Paragraphs 7.10 thru 7.19 cover the SEND modes. The appropriate figure is referenced in parentheses next to the paragraph heading.

> NOTE
> For all SEND modes, set Switch 8 to <SF SKP> to prevent sending tones in the signaling band of 2450 Hz to 2750 Hz (2130 Hz to 2430 Hz for AM-48E); set Switch 8 to <NOR> to allow all frequencies to be sent.

7.10 TYPES OF SEND SIGNALS

The AM-48 Send signals can be classified according to their duration. The three (3) types of Send signals are:

1. Momentary
2. Continuous
3. Stepped (Slope and Sweep)

To send a variable momentary tone, set SEND cursor to QUIET and set the level and frequency per instructions in Para. 7.12,1&2. Send the frequency from the QUIET SEND display by pressing the number key to which the tone is assigned. Momentarily press Switch 8 to <X TONE> to send momentary 2713 Hz tone (Para. 7.19).

To send a variable continuous tone, set SEND cursor to VAR and set desired level and frequency per Para. 7.15.

To send continuous 1004 Hz, set SEND cursor to 1004 (Para. 7.14). To send continuous PAR, set SEND cursor to PAR (Para. 7.18).

To send a pre-programmed set of slope frequencies, set SEND cursor to 3TONE (SLOPE for AM-48E); see Para. 7.16.

To send variable sweep, set SEND cursor to SWEEP (Para. 7.17).

7.11 SEND QUIET (Fig. 7-1)

1. See Fig. 7-1: set switches per SWITCH SETUP illustration and SEND cursor per menu illustration.
2. Quiet termination display will appear,"- - - - - - - -", confirming that the AM-48 is quiet terminated.

7.12 SET PARAMETERS FROM QUIET DISPLAY (Fig. 7-1, Para. 7.08)

There are a total of 15 displays in the QUIET SEND mode. The third display in Fig. 7-1, "FR 8 18888", represents 10 different displays, from "FR 0 18888" to "FR 9 18888".

See Fig. 7-1 for all parameter settings in this paragraph: set switches per SWITCH SETUP illustration and SEND cursor per menu illustration.

1. Set Level (see Fig. 7-1 and Para. 7.08)
   A. Go to "LEVL" display.
   B. Set desired level value (default value is 00.0 dBm).
   C. New level value is stored in volatile memory.

QUIET DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
- - - - - - - -	QUIET TERMINATION	_____	Press key ([0] to [9]) to momentarily send user-programmed tone
DBM LEUL -88.8	LEVEL "LEVL"	10.0 to -50.0 dBm	Set level for all tones sent (except dialed tones)
HZ Fr 0 10000	FREQUENCY "FR"	200 to 19,999 Hz	10 displays. Set frequencies for tones on keys [0] to [9]
DBM rrLEU -88.8	TOUCH TONE LEVEL "TTLEV"	7.0 to -50.0* dBm	Set level for DTMF or MF tones dialed
rNoFF 888	TIME OFF with momentary power switch on "TMOFF"	0	Power stays on
		1 to 255* minutes	Unused AM-48 powers down after this time
bLAnc 888	BLANKING INTERVAL "BLANC"	1 to 255* millisec (ms)	For impulse and transient tests. Standards: 143ms Bell 41009 125ms IEEE



QUIET darkened

* FACTORY SETTINGS	
TTLEV	-10.0 dBm
TMOFF	16 minutes
BLANC	125 ms

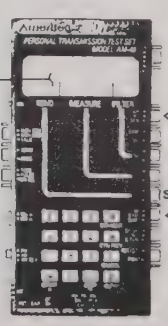

DISPLAY CHARACTER CODE

8. Parameter Name (fixed)

9 Key from which Programmed Tone is Sent

8 User-Entered Value

See Para. 7.11, 7.12, 7.13 for instructions.

See Para. 7.08 for general procedure to set new parameter values.

SWITCH SETUP

Figure 7-1. Parameter Settings from QUIET SEND Display

See Fig. 7-1 for all parameter settings in this paragraph; set switches per SWITCH SETUP illustration and SEND cursor per menu illustration.

2. Set Up to 10 Frequencies, sent with number keys from QUIET display (see Fig. 7-1 and Para. 7.08)
   A. Go to desired "FR" display -- one (1) of 10.
   B. The number after "FR" identifies the number key onto which the frequency is programmed.
   C. Set desired frequency value.
   D. This value is stored in non-volatile memory.
   E. Repeat Steps A and C for other frequencies as desired.

3. Set Touch Tone Level (see Fig. 7-1 and Para. 7.08)
   A. Go to "TTLEV" display.
   B. Set desired level value for DTMT and MF dialing.
   C. Recommended level (factory setting) is -10.0 dBm.
   D. This value is stored in non-volatile memory.

4. Set Time Off; operates when power turned on with momentary power switch (see Fig. 7-1 and Para. 7.08)
   A. Go to "TMOFF" display.
   B. Set desired time value.
   C. This value is stored in non-volatile memory (factory setting is 16 minutes).
   D. This time is when the AM-48 will turn off after the last key or switch activity, if the unit has been turned on with the momentary power switch.
   E. Note that the AM-48 will not turn itself off if a time of "0" is set; this is not a desirable setting when using batteries.

5. Set Blanking Interval (see Fig. 7-1 and Para. 7.08)
   A. Go to "BLANC" display.
   B. Set the desired blanking interval value.
   C. This value is stored in non-volatile memory (factory setting is 125 millisec).
   D. The meaning of the blanking interval for timed tests is explained in Para. 8.09.
   E. Note the Bell and IEEE standard settings listed in Fig. 7-1.

7.13 SEND MOMENTARY VARIABLE TONES (Fig. 7-1, Para. 7.08)

1. With the switches and cursor set per Fig. 7-1, program desired frequencies on the number keys per Para. 7.12,2.
2. The level of the tone sent is the value in the "LEVL" display, stored in volatile memory. If desired, set a new level value per Para. 7.12,1.
3. Go to the QUIET termination display, "- - - - - - -".

*** * * * * * NOTE * * * * * ***
FIRST SELECT "SEND 1004" AND THEN STEP BACKWARDS TO SELECT QUIET TERMINATION.

4. Press the appropriate number key, [0],[1],[2],....[9], to send the desired frequency.
5. The tone will be sent for as long as the key is held down.

7.14 SEND 1004 HZ (Fig. 7-2, Para. 7.08)

1. See Fig. 7-2: set switches per SWITCH SETUP illustration and SEND cursor per upper menu illustration.
2. Go to "LEVL" display and set desired level value.

7.15 SEND CONTINUOUS VARIABLE TONE (Fig. 7-2, Para. 7.08)

1. See Fig. 7-2: set switches per SWITCH SETUP illustration and SEND cursor per lower menu illustration.
2. Go to "LEVL" display and set desired level value.
3. Go to "FREQ" display and set desired frequency value.

7.16 SEND SET OF SLOPE TONES (Fig. 7-3, Para. 7.08)

1. See Fig. 7-3: set switches per SWITCH SETUP illustration and SEND cursor per upper menu illustration.
2. Go to "LEVL" display and set desired level value.
3. Go to initial display and note that the frequencies 404 Hz, 1004 Hz and 2804 Hz (404 Hz, 1004 Hz, 2004 Hz and 3004 Hz for AM-48E) are sent in a cycle @ 5 seconds.

7.17 SEND VARIABLE SWEEP (Fig. 7-4, Para. 7.08)

See Para. 5.07 for an EXAMPLE of setting the parameter values for this SEND mode. Fig. 5-7 shows the displays with the default parameter settings; Fig. 7-4 shows the general displays.

1. See Fig. 7-4: set switches per SWITCH SETUP illustration and SEND cursor per menu illustration.
2. See Para. 7.08: set the parameter values for the desired sweep per the acceptable values and notes in Fig. 7-4.
3. The new parameter values are stored in volatile memory.
4. To start the sweep at the Start frequency, momentarily move the SEND cursor out of SWEEP mode and then re-enter SWEEP mode. As soon as SWEEP mode is entered, the sweep will begin at the Start frequency.
5. Press <RCL/STO> with Switch 9 to store this setup in non-volatile memory for future use. See Para. 7.36.

7.18 SEND PAR WAVEFORM (Fig. 7-3, Para. 7.08)

1. See Fig. 7-3: set switches per SWITCH SETUP illustration and SEND cursor per lower menu illustration.
2. Go to "LEVL" display and set desired level value.
3. PAR level is limited to the range 00.0 dBm to -40.0 dBm.
4. If the level were above 00.0 dBm or below -40.0 dBm, the PAR level would default to 0.00 dBm or -40.0 dBm respectively while sending PAR. For this case, if no new level value were set while in the PAR mode, the level value would return to its previous value after exiting PAR.

7.19 SEND MOMENTARY 2713 HZ TONE

Press <X TONE> with Switch 8 to momentarily send a 2713 Hz tone, overriding the internal signal generator. This is used to activate loopback devices; see "Loopback Testing" in Para. 6.06.

1004 HZ TONE DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
DBM -80.8 HZ 1004	"1004" HZ TONE	_____	Send Level of 1004 Hz constant tone
DBM LEVL -80.8	LEVEL "LEVL"	10.0 to -50.0 dBm	Set level for all tones sent (except dialed tones)

1004 darkened

VARIABLE TONE DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
DBM -80.8 HZ 10000	VARIABLE TONE	_____	Send Level and Frequency of variable constant tone
DBM LEVL -80.8	LEVEL "LEVL"	10.0 to -50.0 dBm	Set level for all tones sent (except dialed tones)
HZ FrEQ 1000	FREQUENCY "FREQ"	200 to 19,999 Hz	Set frequency for variable constant tone



VAR darkened

SWITCH SETUP

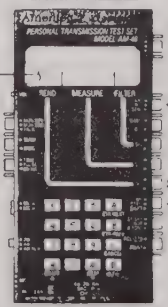

<SEND>

Set 1004 or VAR <SHIFT>

DISPLAY CHARACTER CODE

8. Parameter Name (fixed)

0 Displayed Data

0 User-Entered Value

See Para. 7.08 for general procedure to set new parameter values.

Figure 7-2. Parameter Settings from 1004 Hz and VARiable Tone SEND Displays

SLOPE DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
DBM -88.8 HZ 8888	SLOPE TONES	———	Send Level and Frequency (404, 1004, 2804 Hz* for 5 sec., cyclical)
DBM LEVL -88.8	LEVEL "LEVL"	10.0 to -50.0 dBm	Level for all tones sent (except dialed tones)

3TONE (SLOPE for AM-48E) darkened

* 404 Hz, 1004 Hz, 2004 Hz, 3004 Hz for AM-48E

PAR DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
DBM -88.8 PAr	PEAK-TO-AVERAGE RATIO "PAR"	———	Send Level of Peak-to-Average Ratio waveform
DBM LEVL -88.8	LEVEL "LEVL"	0.0 to -40.0* dBm	Level for all tones sent (except dialed tones)

*PAR waveform level has range 0.0 to -40.0 dBm (not 10.0 to -50 dBm, as with other tones).

PAR darkened

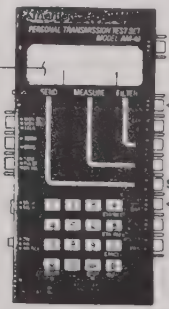

SWITCH SETUP

<SEND>

Set 3 TONE* or PAR <SHIFT>

* SLOPE for AM-48E

DISPLAY CHARACTER CODE

8. Parameter Name (fixed)

8 Displayed Data

8 User-Entered Value

See Para. 7.08 for general procedure to set new parameter values.

Figure 7-3. Parameter Settings from 3-TONE Slope and PAR SEND Displays

SWEEP DISPLAYS	NAME	ACCEPTABLE VALUES	NOTES
DBM HZ -80.8 10000	SWEEP LEVEL/ FREQUENCY	———	Level and Frequency of tone being sent. See below for override displays.
DBM LEUL -80.8	LEVEL "LEVL"	10.0 to -50.0 dBm	Level for all tones sent (except dialed tones)
HZ SrrT 10000	START FREQUENCY "STRT"	200 to 19,999 Hz	Frequency at the start of the sweep
HZ SToP 10000	STOP FREQUENCY "STOP"	200 to 19,999 Hz	Frequency at the end of the sweep
HZ SrEP 10000	"STEP"	1 to 19,999 Hz	Frequency increase for each step of the sweep
rAtE 1000.0	"RATE"	.1 to 1999.9 seconds	Time each tone is sent during the sweep, after which the next tone is sent

QUIET 1004 VAR | L/F NOISE [HOLD TONE] NOISE S/N | 3K C-MSG
3 TONE PAR | PAR IMPLS JITR JITR TRANS | 15K PROG

SWEEP darkened

SWITCH SETUP

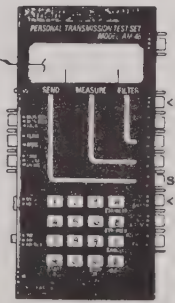

<SEND>

Set SWEEP
<SHIFT>

OVERRIDE LEVEL/FREQUENCY DISPLAYS	
SF SKIP?	STUCK
<SF SKP> switch is set and sweep frequency range is entirely within SF band. See Para. 7.09 note.	Only one tone can be sent with present setup.

DISPLAY CHARACTER CODE

8. Parameter Name (fixed)

8 Displayed Data

8 User-Entered Value

-See Para. 7.08 for general procedure to set new parameter values.
-See Fig. 5-7 for sweep default parameter settings.

Figure 7-4. Parameter Settings from SWEEP SEND Display

GENERAL MEASURE MODE NOTES

7.20 Paragraphs 7.21 thru 7.24 cover general instructions and notes for the MEASURE modes.

7.21 ACCURACY OF MEASUREMENTS

Observe the instructions listed here to ensure accurate readings with the AM-48.

1. Be sure Switch 12 is in <ON HK> except when an off-hook condition is desired for 2-wire access lines. Switch 12 in <TONE> or <PULSE> will cause erroneous readings for measurements on 4-wire circuits.
2. Be sure that Switch 11 is set to match the line impedance. Generally, <600Ω> matches 4-wire and <900Ω> matches 2-wire. A wrong Switch 11 setting results in about 1.8 dB error in level and noise measurements.
3. Use batteries when making low-level noise measurements.
4. For 2-wire measurements (Switch 2 in <ABS> or <REL>), set the SEND cursor to QUIET mode; if not, the AM-48 will be measuring its own generator output in addition to the signal received from the far end of the line.
5. When using the Impedance Adaptor (Para. 6.05 and 9.03), correct the measurements per instructions in Para. 7.41.

7.22 ABSOLUTE AND RELATIVE MEASUREMENTS

See Para. 8.02 for a discussion of units of measurement, including Absolute and Relative measurements.

Either an Absolute or Relative measurement can be made with any level or noise measurement. The choice is made by setting the Display Switch, Switch 2, to either <ABS> or <REL>. The use of <ABS> and <REL> is outlined below:

1. Normally, the absolute, <ABS>, setting is used for noise and level measurements.
2. <REL> position is used to establish a new zero reference level. This is useful in tests such as frequency response where levels at various frequencies are to be compared with the level at a reference frequency.

To use <REL>:

1. Start with Switch 2 in <ABS>.
2. When the desired reference point is established, set Switch 2 to <REL>.
3. When <REL> is first selected, the display will read "00.0 dB REL", meaning that the level or noise reading is now referenced to the reading that was on the display when <REL> was pressed.
4. Subsequent readings are now referenced to this new zero reference.
5. To summarize, "REL" means "relative to the last reading before <REL> was pressed".

7.22 ABSOLUTE AND RELATIVE MEASUREMENTS, continued

EXAMPLE: Changing from <ABS> to <REL> with a level measurement.

1. **With the MEASURE cursor in L/F and Switch 2 set to <ABS>, a level of "-17.7 dBm" is displayed.**
2. **Set Switch 2 to <REL>. Reading is now "00.0 dB REL".**
3. **With Switch 2 still in <REL>, the reading changes to "-02.3 dB REL"; this means that the level is -2.3 dB relative to the reading just before <REL> was set.**
4. **The absolute reading would be -17.7 -2.3 = -20.0 dBm.**

7.23 SPECIAL MEASUREMENT REQUIREMENTS

Certain measurements require one or more of the following conditions in order to be valid:

1. 1004 Hz nominal Holding Tone
2. One (1) of the following noise-weighting filters:
   A. C-Message, C-MSG (Psophometric, PSHO for AM-48E)
   B. 3 KHz, 3K
   C. 15 KHz, 15K
   D. Program, PROG (Sound-weighted, SWTD for AM-48E)
3. PAR waveform

The AM-48 can send 1004 Hz and PAR waveform (Para. 7.14, 7.18).

To select a noise-weighting filter, rock Switch 4, Filter Select, to set the FILTER menu cursor to the desired filter.

Table 7-5 defines which measurements require special conditions. The AM-48 menus are color-coded and framed as explained below to indicate which measurements require a noise-weighting filter and which require a Holding Tone; note that some measurements require both.

Color Coding. The filters on the FILTER menu are written in orange. The tests which require one of these noise-weighting filters are also written in orange on the MEASURE mode menu.

Menu Framing. Refer to Fig. 3-7. There is a pink rectangle within the MEASURE menu. In the upper left corner of this rectangle is a box enclosing HOLD TONE. The HOLD TONE indicator will have a dark background (like a cursor) when a valid 1004 Hz Holding Tone is present at the receive port. Each MEASURE test within the rectangle requires a valid 1004 Hz Holding Tone at the receive port for the measurement to be accurate.

Holding Tone Ranges. See Table 7-4 for holding tone range specifications, which depend on the type of measurement.

Table 7-4
Acceptable Holding Tone Ranges

ACCEPTABLE RANGE	TYPE OF MEASUREMENT
990 Hz to 1030 Hz	Phase Jitter and Amplitude Jitter
995 Hz to 1025 Hz	All other holding tone tests

Table 7-5
Special Measurement Requirements

MEASUREMENT	REQUIREMENT(S)		
	HOLDING TONE	NOISE-WEIGHTING FILTER	PAR WAVEFORM
Noise		X	
PAR			X
Impulse Noise		X	
Notched Noise	X	X	
S/N Ratio	X	X	
Phase Jitter	X		
Amplitude Jitter	X		
Transients:			
Notched Noise	X	X	
Impulse Noise	X	X	
Phase Hits	X		
Gain Hits	X		
Dropouts	X		

7.24 TIMED TESTS

A timed study is made with the Impulse Noise and Transient tests. See Para. 7.29 and 7.34. In general, for AM-48 timed tests:

1. The time over which the study is to be made and the constraints (thresholds and blanking interval) are programmed before the test.
2. The [START] key is used to start a test and the [STOP] key to stop a test in progress before the programmed time-out. Pressing [START] disables the power-off timer.
3. A test may be started or stopped from any display showing a measurement, indicated in Fig. 7-6 and Fig. 7-9 by a cross-hatched character variable field; these displays are also labeled on the left side with "S/S", meaning "start/stop". A test may <u>not</u> be started from a display used to set a parameter because the [△] and [▽] functions are performed on the same keys that would be used for [START] and [STOP].

4. The cursor (IMPLS or TRANS) will flash while the test is running. The cursor will flash until [STOP] is pressed or the duration time, indicated in the initial "DUR" display, is reached.
5. The "TIME" display, indicating time elapsed into the run, will reset to 0.0 minutes each time [START] is pressed.
6. If a printer is connected, an automatic printout will be delivered every 15 minutes during the test and also at the end of the test.
7. After a timed test has been run, the setup parameters and the measurements are stored in non-volatile memory for future reference. At the end of the run, the power-off timer starts running with maximum time.

MEASURE MODES AND PARAMETER SETTINGS

7.25 Paragraphs 7.26 thru 7.34 cover the MEASURE modes. The appropriate figure is referenced in parentheses next to the paragraph heading.

7.26 MEASURE LEVEL AND FREQUENCY (Fig. 7-5)

1. See Para. 8.03 for information on this measurement.
2. 1004 Hz @ 0 dBm is normally sent from the far end.
3. See Fig. 7-5: set switches per SWITCH SETUP illustration and MEASURE cursor per top menu illustration (L/F DISPLAY).
4. Read the level and frequency on the display.

7.27 MEASURE NOISE (Fig. 7-5)

1. See Para. 8.04 for information on this measurement.
2. The distant end is normally Quiet Terminated.
3. See Fig. 7-5: set switches per SWITCH SETUP illustration and MEASURE cursor per middle menu illustration (NOISE DISPLAY).
4. A noise-weighting filter is used for this measurement. Set the FILTER cursor for the desired filter as indicated in Fig. 7-5.
5. Read the noise on the display. Note that the reading will always be a whole number.

7.28 MEASURE PAR (Fig. 7-5)

1. See Para. 8.07 for information on this measurement.
2. A PAR waveform must be sent from the far end for this measurement to be valid.
3. See Fig. 7-5: set switches per SWITCH SETUP illustration and MEASURE cursor per bottom menu illustration (PAR DISPLAY).
4. Read the level and PAR value on the display. Note that the readings will always be whole numbers.

L/F DISPLAY	NAME	MEASURABLE RANGE	NOTES
DBM* HZ -88.8 18888 QUIET 1004 VAR L/F NOISE HOLD TONE NOISE S/N 3K C-MSG 3 TONE SWEEP PAR PAR IMPLS #JTR : JTR TRANS 15K PROG	LEVEL/ FREQUENCY	-65 to 10.9 dBm 0 to 19,999 Hz	Level and Frequency of tone being received. 0.1 dBm resolution

L/F darkened

NOISE DISPLAY	NAME	MEASURABLE RANGE	NOTES
DBRN* 88.0 QUIET 1004 VAR L/F NOISE HOLD TONE NOISE S/N 3K C-MSG 3 TONE SWEEP PAR PAR IMPLS #JTR : JTR TRANS 15K PROG	NOISE	10 to 99 dBrn (-80 to 9 dBm)	Select desired noise-weighting filter: C-MSG, 3K, 15K or PROG. A holding tone is not required

NOISE darkened — selected filter darkened

PAR DISPLAY	NAME	MEASURABLE RANGE	NOTES
DBM* PAR -88.0 888 QUIET 1004 VAR L/F NOISE HOLD TONE NOISE S/N 3K C-MSG 3 TONE SWEEP PAR IMPLS #JTR : JTR TRANS 15K PROG	LEVEL/ PAR (peak-to-average ratio)	-40 to 0 dBm 0 to 120 P/AR	Level and PAR measurement of PAR waveform received

PAR darkened

SWITCH SETUP

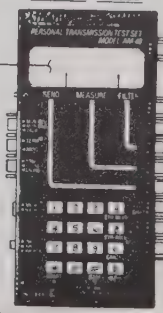

<ABS> or <REL>*

For Noise Measurement, Set 3K, C-MSG, 15K or PROG

Set L/F, NOISE, or PAR

*For Switch 2 in <REL>, level units are dB REL

OUT-OF-RANGE LEVELS	
DISPLAY	MEANING
undr	Level is under minimum measurable level
oUEr	Level is over maximum measurable level

All displays show measured data. There are no user-entered values.

Figure 7-5. L/F, NOISE and PAR MEASURE Displays

7.29 MEASURE IMPULSE NOISE (Fig. 7-6, Para. 7.08)

General information

1. This is a timed test. See Para. 7.24.
2. Three (3) noise thresholds are established: low, middle, and high levels, with an equal interval between them called the delta.
3. The time over which the run is to be made is set, called the duration.
4. The run is started and a running count is kept of the number of noise pulses that exceed each threshold.
5. The run will automatically stop when the duration time is reached, or the test can be manually stopped at any previous time.
6. The "TIME" display resets to zero at the beginning of a run and keeps a running count of the time elapsed during the run.
7. If a run is left to continue to the duration time set, both the "DUR" and "TIME" displays will read the same at the end of the run.
8. A blanking interval is set during which time the noise pulse counter does not count.
9. See Para. 8.09 for more details about (idle channel) impulse noise measurements.

Procedure (see Para. 7.08)

1. Set blanking interval per Para. 7.12,5.
2. See Fig. 7-6: set switches per SWITCH SETUP illustration and MEASURE cursor per menu illustration.
3. Go to "DUR" display. Set desired duration for the test.
4. Go to "ITHLD" display and set the Low impulse noise threshold; the minimum setting is 30 dBrn. The maximum setting is such that the High impulse noise threshold will not exceed 105 dBrn for 600 Ohms impedance (or 104 dBrn for 900 Ohm). The High impulse noise threshold = Low threshold + 2 Delta (see Fig. 8-2) illustration. For example, with a Delta = 2 dB and 600 Ohm impedance, the maximum Low threshold would be 101 dBrn [101dBrn + 2(2dB) = 101 + 4 = 105 dBrn, maximum High threshold].
5. Go to the "IDELTA" display and set the desired Delta (equal interval between the three (3) thresholds).
6. A noise-weighting filter is used for this measurement. Set the FILTER cursor for the desired filter as indicated in Fig. 7-6
7. To start the run, go to any display marked "S/S" (in the left margin) and press [START]. The IMPLS cursor will start to flash.
8. At any time, go to the "NOISE" display and read the real time noise; it will always be a whole number reading.
9. To stop the run before the duration time has elapsed, press [STOP]. The IMPLS cursor will stop flashing.
10. When run is stopped before duration ("DUR") time is up, read the "TIME" display for the actual time of the run.
11. After the run, go to the respective display to read the low, middle and high threshold noise counts.
12. After the run, the parameter settings and the readings are stored in non-volatile memory.

	IMPULSE NOISE DISPLAYS	NAME	RANGE	NOTES
	dur 1888.8	STUDY DURATION "DUR"	0	No time-out
			.1 to 1999.9 minutes	Set duration for timed studies
S/S	r,nE 1888.8	"TIME"	.1 to 1999.9 minutes	Elapsed time of last timed study
	DBRN ,rHLd 188	IMPULSE THRESHOLD "ITHLD"	30 to 101 dBrn (-60 to 20 dBm)	Set low threshold for impulse noise
	DB ,dELrA 8	IMPULSE DELTA "IDELTA"	2, 3, 4 or 6 dB	Set difference between impulse noise thresholds (low-to-mid and mid-to-high)
S/S	,Lo 8888	LOW IMPULSE COUNT "ILO"	0 to 9999	Number of noise impulses exceeding the low threshold
S/S	,n,d 8888	MIDDLE IMPULSE COUNT "IMID"	0 to 9999	Number of noise impulses exceeding the middle threshold
S/S	,H, 8888	HIGH IMPULSE COUNT "IHI"	0 to 9999	Number of noise impulses exceeding the high threshold
S/S	DBRN* no,SE 88.0	"NOISE"	10 to 99 dBrn (-80 to 9 dBm)	Select desired noise-weighting filter: C-MSG, 3K, 15K or PROG. A holding tone is not required.

QUIET 1004 VAR | L/F NOISE | HOLD TONE | NOISE S/N | 3K C-MSG
3 TONE SWEEP PAR | PAR | 6 JTR 3 JTR TRANS | 15K PROG

IMPLS darkened (flashes during run)

selected filter darkened

From any display marked S/S, press [START]/[STOP] to start/stop impulse noise counter

<ABS> or <REL>*

Select desired filter

Set IMPLS

<SHIFT>

*For display switch in <REL>, level units are dB REL

POSSIBLE DISPLAY WHEN PRESS [START]
rHLd 2 Hi
THRESHOLD TOO HIGH, "THLD 2 HI"
The high threshold is set too high. Re-set "ITHLD" and/or "IDELTA".

-See Para. 7.08 for general procedure to set new parameter values.
-BLANKING INTERVAL value is set from the QUIET SEND display. See Figure 7-1.

SWITCH SETUP

Figure 7-6. IMPLS MEASURE Displays

7.30 MEASURE NOTCHED NOISE (Fig. 7-7)

1. See Para. 8.05 for explanation of Notched Noise.
2. See Fig. 7-7: set switches per SWITCH SETUP illustration and MEASURE cursor per top menu illustration (NOTCHED NOISE DISPLAY).
3. Display indicates frequency of received holding tone, which must be from 995 Hz to 1025 Hz to be valid. Be sure HOLD TONE cursor is darkened, indicating a valid holding tone is being received.
4. A noise-weighting filter is used for this measurement. Set the FILTER cursor for the desired filter as indicated in Fig. 7-7.
5. Read the notched noise on the display. Note that the reading will always be a whole number.
6. Set Switch 3 to <DAMP> and Switch 14 to <MON RCV> to audibly monitor the residual noise (see Para. 7.05 under Display Damping Switch).

7.31 MEASURE S/N RATIO (Fig. 7-7)

1. See Para. 8.06 for explanation of S/N Ratio measurement.
2. See Fig. 7-7: set switches per SWITCH SETUP illustration and MEASURE cursor per bottom menu illustration (SIGNAL-TO-NOISE RATIO DISPLAY).
3. Display indicates frequency of received holding tone, which must be from 995 Hz to 1025 Hz to be valid. Be sure HOLD TONE cursor is darkened, indicating a valid holding tone is being received.
4. A noise-weighting filter is used for this measurement. Set the FILTER cursor for the desired filter as indicated in Fig. 7-7.
5. Read the signal-to-noise ratio on the display. Note that the reading will always be a whole number.
6. Set Switch 3 to <DAMP> and Switch 14 to <MON RCV> to audibly monitor the residual noise (see Para. 7.05 under Display Damping Switch).

7.32 MEASURE PHASE JITTER (Fig. 7-8, Para. 7.08)

1. See Para. 8.10 for explanation of Phase Jitter measurement.
2. See Fig. 7-8: set switches per SWITCH SETUP illustration and MEASURE cursor per top menu illustration (PHASE JITTER DISPLAYS).
3. Go to "PLL" display. This indicates the phase-locked-loop generator frequency which must be from 990 Hz to 1030 Hz for a valid measurement. Be sure HOLD TONE cursor is darkened, indicating a valid holding tone is being received.
4. Go to "RANGE" display. Press [4] or [2] for desired bandwidth (4 Hz to 300 Hz or 20 Hz to 300 Hz).
5. Go to "JITR" display and read the peak-to-peak phase jitter.

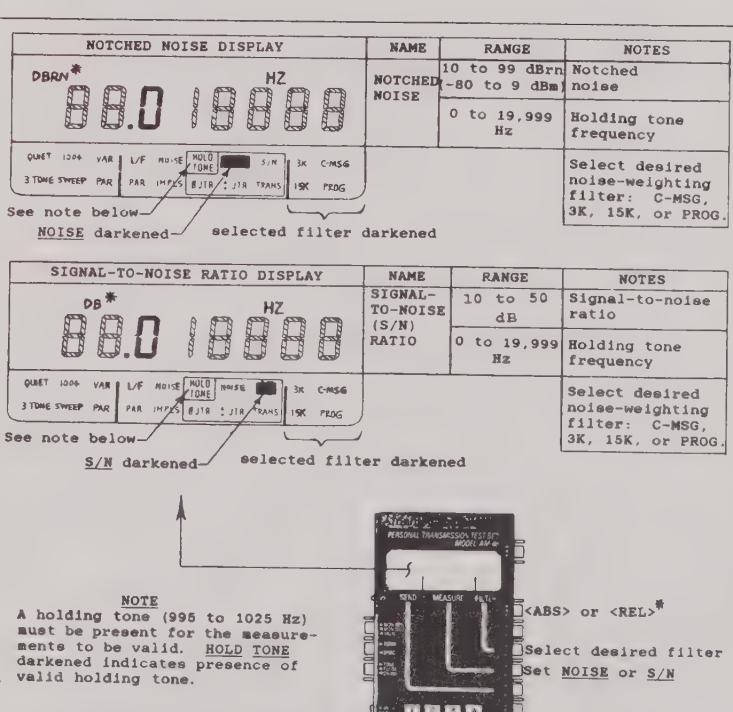

Figure 7-7. Notched NOISE and S/N Ratio MEASURE Displays

PHASE JITTER DISPLAYS	NAME	RANGE	NOTES
JiTr 88.8°	PHASE JITTER "JITR O"	0.0 to 25.0 degrees	Peak-to-peak phase jitter displayed
PLL HZ 1888.8	PHASE LOCKED LOOP FREQUENCY "PLL"	0.0 to 1999.9 Hz	Phase-locked-loop frequency displayed
rAnGE HZ 88	FREQUENCY BANDWIDTH "RANGE"	4 or 20 Hz	Select bandwidth: -Press [4] for 4 Hz to 300 Hz -Press [2] for 20 Hz to 300 Hz



See note below — Ø JTR darkened

AMPLITUDE JITTER DISPLAYS	NAME	RANGE	NOTES
JiTr 88.8	AMPLITUDE JITTER "JITR"	0.0 to 25.0 percent	Peak-to-peak amplitude jitter displayed
rAnGE HZ 88	FREQUENCY BANDWIDTH "RANGE"	4 or 20 Hz	Select bandwidth: -Press [4] for 4 Hz to 300 Hz -Press [2] for 20 Hz to 300 Hz



See note below — △/▽ JTR darkened

SWITCH SETUP

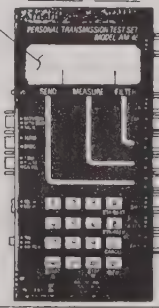

NOTE

A holding tone (990 to 1030 Hz) must be present for the measurements to be valid. HOLD TONE darkened indicates presence of valid holding tone.

DISPLAY CHARACTER CODE

8. Parameter Name (fixed)

8 Displayed Data

8 User-Entered Value

See Par. 7.08 for general procedure to set new parameter values.

Figure 7-8. Ø JTR and △/▽ JTR MEASURE Displays

7.33 MEASURE AMPLITUDE JITTER (Fig. 7-8, Para. 7.08)

1. See Para. 8.11 for explanation of Amplitude Jitter measurement.
2. See Fig. 7-8: set switches per SWITCH SETUP illustration and MEASURE cursor per bottom menu illustration (AMPLITUDE JITTER DISPLAYS).
3. Be sure HOLD TONE cursor is darkened, indicating a valid holding tone is being received.
4. Go to "RANGE" display. Press [4] or [2] for desired bandwidth (4 Hz to 300 Hz or 20 Hz to 300 Hz).
5. Go to "JITR" display and read the P/P amplitude jitter.

7.34 MEASURE TRANSIENTS (Fig. 7-9 -- two (2) pages, Para. 7.08)

These are timed tests, any or all of which can be performed at the same time. See Para. 7.24 for general information.

There are a total of 14 displays in the TRANS MEASURE mode, shown in the two (2) pages of Fig. 7-9.

See Fig. 7-9 for all parameter settings and operations described in this paragraph; set switches per SWITCH SETUP illustration and MEASURE and FILTER cursors per menu illustration.

1. Measure Notched Impulse Noise. This measurement is identical to the (idle channel) Impulse Noise measurement except that a holding tone is required. The operating instructions are thus identical, as indicated below.
   A. Be sure HOLD TONE cursor is darkened, indicating a valid holding tone.
   B. See Fig. 7-9. Note that the first eight (8) displays in Fig. 7-9 are identical to the eight (8) displays in Fig. 7-6.
   C. Follow the procedure in Para. 7.29, except that the TRANS cursor will be darkened and flash during the run instead of the IMPLS cursor. Note that the "NOISE" display reads notched noise instead of idle channel noise.

2. Measure Phase Hits. See Para. 8.13 for explanation of phase hit measurement.
   A. See Fig. 7-9. Be sure HOLD TONE cursor is darkened.
   B. Go to "DUR" display and set the desired duration for the test.
   C. Go to "PTHLD" display and set phase hit threshold.
   D. Go to any display labled "S/S" and press [START]; the TRANS cursor will start to flash.
   E. To stop the run before the duration time has elapsed, press [STOP]. The TRANS cursor will stop flashing.
   F. When the run is stopped before the duration ("DUR") time is up, read the "TIME" display for the actual time of the run.
   G. After the run, go to "PHIT" display to read the number of phase hits.
   H. After the run, the parameter settings and the readings are stored in non-volatile memory.

TRANSIENT DISPLAYS (first 7 of 14)	NAME	RANGE	NOTES
dur 18888	STUDY DURATION "DUR"	0	No time-out
		.1 to 1999.9 minutes	Set duration for timed studies
S/S ΓiME 18888	"TIME"	.1 to 1999.9 minutes	Elapsed time of last timed study
DBRN iΓHLd 188	IMPULSE THRESHOLD "ITHLD"	30 to 101 dBrn (-60 to 20 dBm)	Set low threshold for impulse noise
DB idELTA 8	IMPULSE DELTA "IDELTA"	2, 3, 4 or 6 dB	Set difference between impulse noise thresholds (low-to-mid and mid-to-high)
S/S iLo 8888	LOW IMPULSE COUNT "ILO"	0 to 9999	Number of noise impulses exceeding the low threshold
S/S iMid 8888	MIDDLE IMPULSE COUNT "IMID"	0 to 9999	Number of noise impulses exceeding the middle threshold
S/S iHi 8888	HIGH IMPULSE COUNT "IHI"	0 to 9999	Number of noise impulses exceeding the high threshold



Selected filter darkened

TRANS darkened (flashes during run)

HOLD TONE darkened = valid holding tone

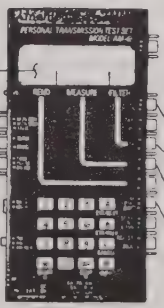

From any display marked S/S, press [START]/[STOP] to start/stop transient counters

<ABS> or <REL>*

Select desired filter

Set TRANS

<SHIFT>

SWITCH SETUP

POSSIBLE DISPLAY WHEN PRESS [START]

ΓHLd 2 Hi

THRESHOLD TOO HIGH, "THLD 2 HI"

The high threshold is set too high. Re-set "ITHLD" and/or "IDELTA".

-Holding tone (995 to 1025 Hz) required.
-See Para. 7.08 for general procedure to set new parameter values.
-BLANKING INTERVAL value is set from the QUIET SEND display. See Figure 7-1.

Figure 7-9. TRANS MEASURE Displays, Page 1 of 2.

TRANSIENT DISPLAYS (second 7 of 14)	NAME	RANGE	NOTES
S/S DBRN* noiSE 88.0	NOTCHED NOISE "NOISE"	10 to 99 dBrn (-80 to 9 dBm)	Select desired noise-weighting filter: C-MSG, 3K, 15K or PROG.
PrHLd 88 0	PHASE HIT THRESHOLD "PTHLD"	5 to 45 degrees	Set phase hit threshold
S/S PHiT 8888	PHASE HIT COUNT "PHIT"	0 to 9999	Number of phase hits exceeding the phase hit threshold
DB GrHLd 8	GAIN HIT THRESHOLD "GTHLD"	2, 3, 4 or 6 dB	Set gain hit threshold
S/S GHiT 8888	GAIN HIT COUNT "GHIT"	0 to 9999	Number of gain hits exceeding the gain hit threshold
S/S droP 8888	DROPOUTS "DROP"	0 to 9999	Number of dropouts
S/S HZ PLL 1888.8	PHASE LOCKED LOOP FREQUENCY "PLL"	0.0 to 1999.9 Hz	Phase-locked-loop frequency displayed



Selected filter darkened

TRANS darkened (flashes during run)

HOLD TONE darkened = valid holding tone

OUT-OF-RANGE LEVELS	
DISPLAY	MEANING
undr	Level is under minimum measurable level
oUEr	Level is over maximum measurable level

From any display marked S/S, press [START]/[STOP] to start/stop transient counters

-Holding tone (995 to 1025 Hz) required
-See Para. 7.08 for general procedure to set new parameter values.

*For display switch in <REL>, level units are dB REL

Switch Setup is on Page 1 of this figure.

Figure 7-9. TRANS MEASURE Displays (continued), Page 2 of 2

7.34 **MEASURE TRANSIENTS, continued (Fig. 7-9 -- two (2) pages, Para. 7.08)**

3. Measure Gain Hits. See Para. 8.14 for explanation of gain hit measurement.
   A. See Fig. 7-9. Be sure HOLD TONE cursor is darkened.
   B. Go to "DUR" display and set the desired duration for the test.
   C. Go to "GTHLD" display and set desired gain hit threshold.
   D. Go to any display labled "S/S" and press [START]; the TRANS cursor will start to flash.
   E. To stop the run before the duration time has elapsed, press [STOP]. The TRANS cursor will stop flashing.
   F. When the run is stopped before the duration ("DUR") time is up, read the "TIME" display for the actual time of the run.
   G. After the run, go to "GHIT" display to read the number of gain hits.
   H. After the run, the parameter settings and the readings are stored in non-volatile memory.

4. Measure Dropouts. See Para. 8.15 for explanation of dropouts measurement.
   A. See Fig. 7-9. Be sure HOLD TONE cursor is darkened.
   B. Go to "DUR" display and set the desired duration for the test.
   C. Go to any display labled "S/S" and press [START]; the TRANS cursor will start to flash.
   D. To stop the run before the duration time has elapsed, press [STOP]. The TRANS cursor will stop flashing.
   E. When the run is stopped before the duration ("DUR") time is up, read the "TIME" display for the actual time of the run.
   F. After the run, go to "DROP" display to read the number of dropouts (loss of holding tone).
   G. After the run, the parameter settings and the readings are stored in non-volatile memory.

MISCELLANEOUS OPERATIONS

7.35 Paragraphs 7.36 thru 7.42 cover miscellaneous AM-48 operations.

7.36 STORE AND RECALL (Fig. 7-10)

The Store and Recall feature is very useful to quickly set up a test that was previously set up. The parameters and cursor settings are stored in non-volatile memory after they are first programmed, and are recalled each time the test is repeated.

Recall. To recall a test setup previously stored:

1. Momentarily press Switch 9 to <RCL/STO>.
2. The prompt "RECALL?" will appear on the display.
3. Press a number key [0] thru [9] to recall a setup previously stored on that key, or press [CANCEL] to abort.

Store. To store:

1. Adjust the AM-48 to the test setup and parameter settings to be stored.
2. Press and hold Switch 9 to <RCL/STO> for about five (5) seconds (<STO> is underlined to indicate that the store function is enabled when Switch 9 is held down).
3. The "RECALL?" prompt will then change to "STORE?".
4. Press a number key [0] thru [9] to store the setup on that key, or press [CANCEL] to abort.

Parameters and cursor settings that are saved/stored by the STORE/RECALL function are listed below:

Send mode
Measure mode
Noise-weighting filter selected
Send level
Send variable frequency
Sweep start frequency
Sweep stop frequency
Sweep step frequency
Sweep rate
Duration time
Elapsed time
Impulse threshold
Impulse delta threshold
Phase hit threshold
Gain hit threshold
Jitter range (4 Hz or 20 Hz high pass)

7.37 DIALING

1. For DTMF or MF dialing, set desired send level per Para. 7.12.3.
2. Set Switch 10 to <2W>, <4W> or <4W REV> for desired 2-wire or or 4-wire line connection.
3. Match line impedance per Para. 6.04 or Para. 6.05. For dial pulse (DP), set Switch 13 to <BRDG> while dialing, and set to <TERM> when making measurements.

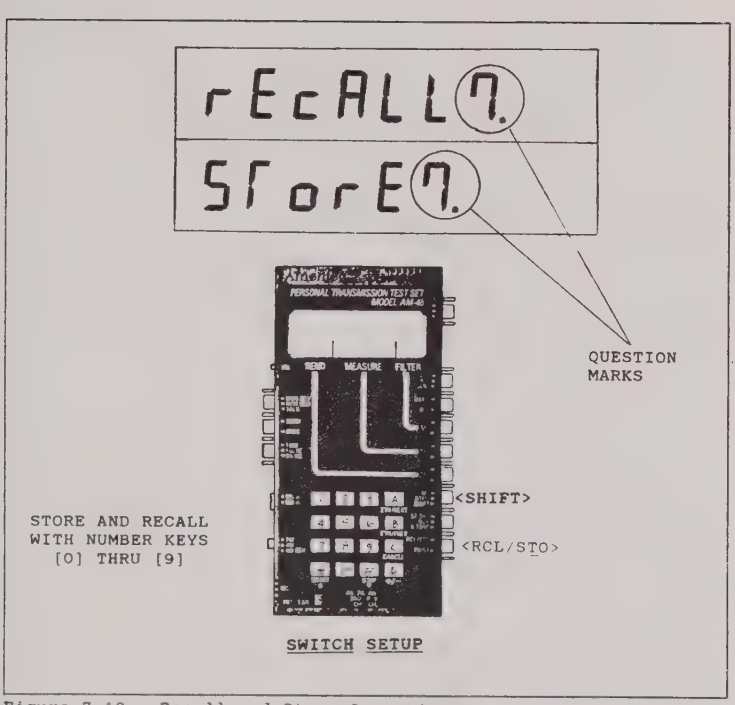

Figure 7-10. Recall and Store Operations

7.37 DIALING, continued

4. Set Switches 7 and 12 for dialing mode per Table 7-6.
5. The line connected to the AM-48 should provide dial tone. Adjust speaker volume to a comfortable level.
6. Table 7-7 lists the MF and DTMF dual tones on each of the keys. Note that there is no MF on key [D].
7. Dial number using keypad. See Fig. 5-6 for dial display when Switch 2 is in <SEND>. If timeout occurs, go back on hook by setting Switch 12 to <ON HK> for two to three seconds, then switch back to <PULSE> or <TONE> to go back off-hook. Re-enter dialed number.
8. If a person has been dialed, press Switch 14 to <TALK> and speak into the microphone. To listen to the other person, release <TALK> to <MON SND>.
9. If an Ameritec AM3-2A DTMF Commandable Responder has been called it will automatically answer ringing and be open to DTMF commands. See Table 7-6 for DTMF dialing setup and dial appropriate DTMF commands.

Table 7-6
Setup Requirements for Dialing

DIAL MODE	SWITCH 7 POSITION	SWITCH 12 POSITION	
		2-WIRE OFF-HOOK (loop current)	2-WIRE ON-HOOK OR 4-WIRE
Dial DTMF	<DTMF>	<TONE>	<ON HK>
Dial MF	<MF>	<TONE>	<ON HK>
Dial Pulse	<DTMF> or <MF>	<PULSE>	-----

Table 7-7
MF and DTMF Tone Pairs

KEY	MF TONE PAIRS (Hz)	DTMF TONE PAIRS (Hz)
[1]	700/900	1209/697
[2]	700/1100	1336/697
[3]	900/1100	1477/697
[4]	700/1300	1209/770
[5]	900/1300	1336/770
[6]	1100/1300	1477/770
[7]	700/1500	1209/852
[8]	900/1500	1336/852
[9]	1100/1500	1477/852
[*] (KP)	1100/1700	1209/941
[0]	1300/1500	1336/941
[#] (ST)	1500/1700	1477/941
[A] (ST3P)	700/1700	1633/697
[B] (STP)	900/1700	1633/770
[C] (ST2P)	1300/1700	1633/852
[D]		1633/941

7.38 TALKING

The AM-48 can be used as a telephone "butt-set" (also see Para. 3.05,14):

1. To talk, hold down Switch 14 in <TALK> position and speak into the microphone (labeled MIC). See Fig. 3-1 for microphone location.
2. "VOICE" appears on display when <TALK> is pressed and Switch 2 is in <SEND>.
3. To listen, release <TALK> switch to <MON SND>. SEND cursor will default to QUIET mode.
4. For more privacy or better listening clarity, use the the earphone supplied with the AM-48.
5. See Fig. 3-2 for location of earphone jack, <EAR>, on the bottom of the AM-48.

7.39 PRINTING (Fig. 3-8, Fig. 6-3, Fig. 7-11, 7-12, 7-13

This paragraph is divided into two (2) main parts:

A. Operation instructions for the AM-47 Hand-held Printer.
B. Explanation of the information given in AM-48 Printouts.

A. AM-47 HAND-HELD PRINTER: OPERATION

See Para. 3.09 and Fig. 3-8 for physical and functional desciption of the AM-47 Hand-held Printer.

Paper Roll Installation. Refer to Fig. 3-8 (two pages).

1. For additional rolls of paper, order Part No. 26-0014.
2. Push up on end of housing (as indicated by arrow) to remove Paper Roll Compartment cover.
3. As illustrated in VIEW B of Fig. 3-8
   a. Install Paper Roll.
   b. Feed paper into slot.
   c. Push [PAPER ADVANCE] button to route paper through.
4. Re-install compartment cover.

Self Test. For a printout of all possible characters:

1. Simultaneously hold down the [PAPER ADVANCE] button and set the Power Switch ON.
2. Self-Test printouts will be output for as long as the [PAPER ADVANCE] button is held down continuously (from the time power is first turned ON).

Charging Considerations. The AM-47 NiCad battery pack is charged through the AC Adaptor (70-0029); see Fig. 6-3 for connection.

Note the following concerning the charging process:

1. Charging is controlled by a microprocessor that is programmed to run the charging circuitry without sensing the actual charged or discharged state of the battery pack.
2. With the AC Adaptor connected, each time the power is turned ON, the microprocessor assumes the worst case and goes into a full 14-hour charge cycle.
3. With the AC Adaptor connected and the power OFF, the AM-47 is charged with a very low trickle current which takes several days to charge the battery pack.

NOTE

The AC adaptor is only for charging the batteries. If batteries are dead, AC adaptor will not power the unit. Observe carefully that the AM-47 is normally charged with the Power ON, even though many other devices are typically charged with the power OFF.

4. The AC Adaptor can be left continuously connected to the AM-47. There is no danger of "overcharging" the battery pack.
5. There are two (2) charging procedures:
   a. A normal procedure.
   b. A procedure if the battery pack is completely discharged.

   See procedures below for steps to follow.

A. AM-47 HAND-HELD PRINTER: OPERATION, continued

Charging Considerations, continued

Note the following concerning the charging process (continued):

6. After the charging cycle, the POWER LED will blink. Also after the charging cycle, a timer is set which will start the charge cycle again after it is decremented to zero. Each time a line is printed, the timer is decremented a certain amount. If the POWER Switch is left ON, the AM-47 can print about 10,000 lines before the timer decrements to zero and a new charge cycle is initiated.

Normal Charging Procedure:

1. Connect AC Adaptor (70-0029) as shown in Fig. 6-3.
2. Turn POWER Switch ON.
3. POWER LED will light, indicating charging. (If LED does not light, Battery Pack is completely discharged; go to special procedure below.)
4. When charging cycle is complete (after about 14 hours), POWER LED will blink.

NOTE

Each time power in turned ON with the AC Adaptor connected, the AM-47 will go through a complete charging cycle, regardless of the charge of the battery pack.

Charging Procedure When Battery Pack Completely Discharged:

1. Connect AC Adaptor (70-0029) as shown in Fig. 6-3.
2. Turn POWER Switch ON to confirm Battery Pack is completely discharged.
3. If Battery Pack is completely discharged, the POWER LED will not light.
4. Turn POWER Switch OFF. This will initiate a trickle charge that will charge the Battery Pack enough to operate the microprocessor-controlled charging circuitry.
5. Leave the POWER Switch OFF for about one (1) hour.
6. Turn the POWER Switch ON.
7. The POWER LED will now light continuously, indicating that the full charge cycle has begun.
8. After about 14 hours, the POWER LED will start to blink, indicating charging is complete.

Ribbon Cartridge Replacement. Refer to Fig. 3-8 (two pages).

1. For replacement Ribbon Cartridges, order Part No. 26-0015.
2. Push up on end of housing (as indicated by arrow) to Remove Paper Roll Compartment Cover
3. See VIEW A illustration in Fig. 3-8:
   a. Observe how ribbon is routed on the old cartridge.
   b. Push on end of cartridge as indicated to eject old cartridge.
   c. Snap in new cartridge, being careful to insert ribbon correctly.
   d. Rotate Manual Ribbon Take-Up as indicated by the arrow to apply tension to the ribbon.
4. Re-install Compartment Cover

7.39 PRINTING (Fig. 3-8, Fig. 6-3, Fig. 7-11, 7-12, 7-13)

B. AM-48 PRINTOUTS

Connect the AM-47 Hand-held Printer or other printer to the AM-48 per Par. 6.03 and Fig. 6-3. There are two (2) ways to obtain an AM-48 printout:

1. Momentarily press Switch 9 to <PRINT> to get a printout on demand.
2. During a timed study (Impulse Noise or Transient Tests), there is an automatic printout every 15 minutes and at the end of the timed study.

IMPORTANT NOTE: The content of a printout depends on what mode is being displayed at the time of the printout.

Figures 7-11 thru 7-13 show the switch setups and sample printouts for each SEND and MEASURE mode. Note:

1. For modes with more than one display, a printout can be made from any display of the selected mode.
2. Printouts are shown exactly as they are output by the AM-47 Hand-held Printer, in a 24-column format. When there is more than one (1) row to a printout, the rows after the first are indented by one (1) space.
3. In the NOTES column, the title of the printout is underlined and variable parameters are defined in parentheses next to their printout. Definitions for more than one parameter are separated by a slash,"/". Units of measurement are given only if not shown in the printout.
4. Asterisks, "*" or "**", are used to reference notes.
5. For any measurements requiring a holding tone (HT), "HT=ON" indicates that the holding tone cursor was darkened at the time of the printout, meaning the measurement is valid. "HT=OFF" means an invalid measurement because the holding tone was not to specification.
6. The CMSG filter is shown in each printout of a measurement requiring a noise-weighting filter. 3K, 15K or PROG (also PSHO or SWTD for AM-48E) would appear in this same position on the readout if one of these filters were selected.
7. Noise levels and thresholds are in "dBrn" which applies to the AM-48 only; units would be "dBm" for AM-48E.
8. "OVER" or "UNDER" readings could appear for any level measurement -- only some samples are shown; these out-of-range indications are based on the absolute reading, even for relative printouts. "OVER" will print out for levels received greater than +10.9 dBm and "UNDER" will print out for levels lower than -65.0 dBm. For Send and Measure ranges of values, see Fig. 7-1 thru 7-9 in the tables next to the displays.
9. EXAMPLE of meaning of relative measurements in Fig. 7-13: In the second entry, "+ 5.1rel-12.3" means "+5.1 dB relative to -12.3 dBm (the reading when Switch 2 was set from <ABS> to <REL>)."
10. In Fig. 7-13, relative noise printouts are possible for IMPLS and TRANS cursor settings. These are the same as the relative noise measurements shown in the Fig. 7-13 printouts which start with "NZ" and "NN".

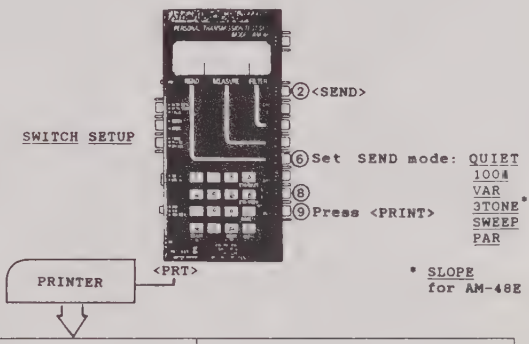

SEND CURSOR	SAMPLE PRINTOUT	NOTES (variable parameters defined in parentheses)
QUIET	SND QUIET	Send Quiet Termination
1004	SND 1004 HT +00.0dBm	Send 1004 Hz Tone (Level) HT = Holding Tone
VAR	SND 15000Hz -10.0dBm	Send Continuous Tone (Frequency/Level)
3TONE (SLOPE for AM-48E)	SND 3TONE*-15.0dBm	Send 404, 1004, 2804 Hz (AM-48E: 404, 1004, 2004, 3004 Hz) Tones @5 Sec Duration (Level) *SLOPE for AM-48E
SWEEP	SND SWEEP +00.0dBm 204Hz-19904Hz SFSKIP* 100 STEP 1.0 RATE	Send Programmed Sweep (Level) (Start frequency-Stop frequency) (Frequency step,Hz/Rate,sec) *SFSKIP is printed only if Switch 8 set to <SF SKP>
PAR	SND PAR -20.5dBm	Send Peak-to-Average Waveform (Level)

Figure 7-11. SEND Printouts

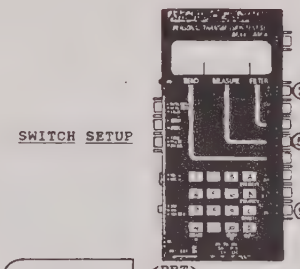

MEASURE CURSOR	SAMPLE PRINTOUT	NOTES (variable parameters defined in parentheses)
L/F	LF OVER dBm 1004Hz	Measure Level/Frequency Level is too high to measure
L/F	LF UNDERdBm 1004Hz	Measure Level/Frequency Level is too low to measure
L/F	LF +10.2dBm 12345Hz	Measure Level/Frequency (Level/Frequency)
NOISE	NZ +15.0dBrn CMSG*	Measure Idle Channel Noise (Level) *Filter Selected
NOISE	NN +12.0dBrn CMSG* 1020HT=ON**	Measure Notched Noise (Level) *Filter Selected **Valid Measurement
NOISE	NN +12.0dBrn CMSG* 980HT=OFF**	Measure Notched Noise (Level) *Filter Selected **Invalid Measurement

Figure 7-12. MEASURE Printouts, Absolute Measure Mode, Page 1 of 2

SWITCH SETUP is on Page 1 of this figure.

MEASURE CURSOR	SAMPLE PRINTOUT	NOTES (variable parameters defined in parentheses)
S/N	SN +50.0dB CMSG* 1000HT=ON**	Measure Signal-to-Noise Ratio (Difference between levels of holding tone and notched noise) *Filter Selected **Valid Measurement
PAR	PAR -15.7dBm 85par	Measure Peak-to-Average Ratio (Level/Received PAR Reading)
IMPLS	IMP 15.0DUR 11.4TIM THLD 80dBrn DELTA 2dB BLANKING 125mS CMSG* 7654LO 4321MID 1234HI	Measure Idle Channel Impulse Noise (Duration/Elapsed Time,minutes) (Low Threshold/Threshold Differential) (Blanking Interval) (Low/Middle/High Impulse Noise Counts) *Filter Selected
ØJTR	PHJTR+17.2 RANGE 4-300 1000HT=ON* 999.6 PLL	Measure Phase Jitter (P/P Phase Jitter,degrees/Bandwidth,Hz) (Phase-Locked-Loop Frequency,Hz) *Valid Measurement
△▽ JTR	AMJTR+14.8% RANGE 20-300 998HT=ON*	Measure Amplitude Jitter (P/P Amplitude Jitter/Bandwidth,Hz) *Valid Measurement
TRANS	TRAN 60.0DUR 45.0TIM THLD 100dBrn DELTA 4dB BLANKING 125mS CMSG* 7645LO 5113MID 1538HI PTHLD 30 PHIT 2234 GTHLD 3 GHIT 1077 DROP 16 1008HT=ON**1007.7 PLL	Transient Test Run (Duration/Elapsed Time,minutes) (Low Threshold/Threshold Differential) (Blanking Interval) (Low/Middle/High Impulse Noise Counts) (Phase Hit Threshold,degrees/Phase Hits) (Gain Hit Threshold,dB/Gain Hits) (Number of Dropouts) (Phase-Locked-Loop Frequency,Hz) *Filter Selected **Valid Measurement

Figure 7-12. MEASURE Printouts, Absolute Measure Mode, Page 2 of 2

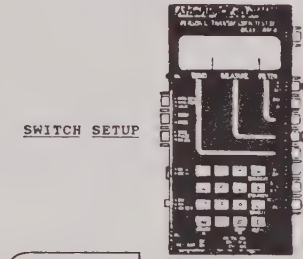

MEASURE CURSOR	SAMPLE PRINTOUT	NOTES (variable parameters defined in parentheses)
L/F	LF OVER rel+ 7.5 1234Hz	Level is too high to measure
L/F	LF + 5.1rel-12.3 1650Hz	Measure Relative Level and Frequency (Relative Level,dB/ Reference Level,dBm/Frequency)
NOISE	NZ + 4.0rel+67.0 CMSG*	Measure Relative Idle Channel Noise (Relative Level,dB/Reference Level,dBrn) *Filter Selected
NOISE	NN - 3.0rel+54.0 CMSG* 1000HT=ON**	Measure Relative Notched Noise (Relative Level,dB/Reference Level,dBrn) *Filter Selected **Valid Measurement
S/N	SN + 1.0rel+45.0 CMSG* 997HT=ON**	Measure Relative Signal-to-Noise Ratio (Rel. S/N Ratio,dB/Ref. S/N Ratio,dB) *Filter Selected **Valid Measurement
PAR	PAR + 2.3rel-40.6 72par	Measure Relative PAR Level (Relative PAR Level,dB/ Reference PAR Level,dBm/PAR Reading)

Figure 7-13. MEASURE Printouts, Relative Measure Mode

7.40 AUTO STUDY RESULT SAVE

At the end of timed study (impulse or transient test), the AM-48 automatically stores the results and associated setup parameters in non-volatile memory. Whenever the AM-48 is turned on, the results of the last impulse or transient study are automatically recalled. The following measurements and parameters are automatically stored and recalled:

Impulse LO count
Impulse MID count
Impulse HI count
Phase hit count
Gain hit count
Dropout count
Elapsed time
Impulse threshold
Impulse delta theshold
Phase hit threshold
Gain hit threshold

Note that parameter settings will not be stored if the [START] key is not pressed to actually run the impulse or transient test. Only the results of the last timed test that was run are stored.

Timed tests are not affected by the automatic power shutdown feature. The AM-48 will not turn itself off while an impulse or transient study is in progress. The power-off timer is reset to maximum time when [START] is pressed and does not operate during the study. As soon as the study is over, the power-off timer starts running with maximum time.

7.41 IMPEDANCE ADAPTOR MEASUREMENT CORRECTIONS

The Impedance Adaptor is illustrated in Fig. 3-9; Fig. 9-2 is the schematic diagram. See Para. 6.05 for connection instructions. When the line is connected to the AM-48 through the Impedance Adaptor, the display reading needs to be corrected.

Table 7-8 lists the correction values to add or subtract from the value on the display. To calculate the correct level on the line, add the correction value to a MEASURE level or noise display reading (Switch 2 in <ABS> or <REL>); subtract the correction value from a SEND level display reading (Switch 2 in <SEND>).

Table 7-8
Impedance Adaptor Correction Values

IMPEDANCE ADAPTOR SETTING	CORRECTION VALUE
1200 OHM	3.0 dB
900 OHM	1.8 dB
THRU (600 OHM)	0 dB
150 OHM	6.0 dB
135 OHM	6.5 dB
75 OHM	9.0 dB

Memory Aid. To remember whether to add or subtract the correction value, it is helpful to think of the Impedance Adaptor as introducing loss. The signal out of the Impedance Adaptor is thus less than the signal in. Refer to Fig. 7-14:

For an AM-48 SEND mode, the signal actually sent on the line (beyond the Impedance Adaptor) is less than the signal sent from the AM-48 (as indicated on the display). The correction factor is thus subtracted from the display reading to give the actual level of the signal sent on the line.

For an AM-48 MEASURE mode, the signal received by the AM-48 (as indicated on the display) is less than the incoming level from the line. The correction factor is thus added to the display reading to give the actual level of the signal received at the line.

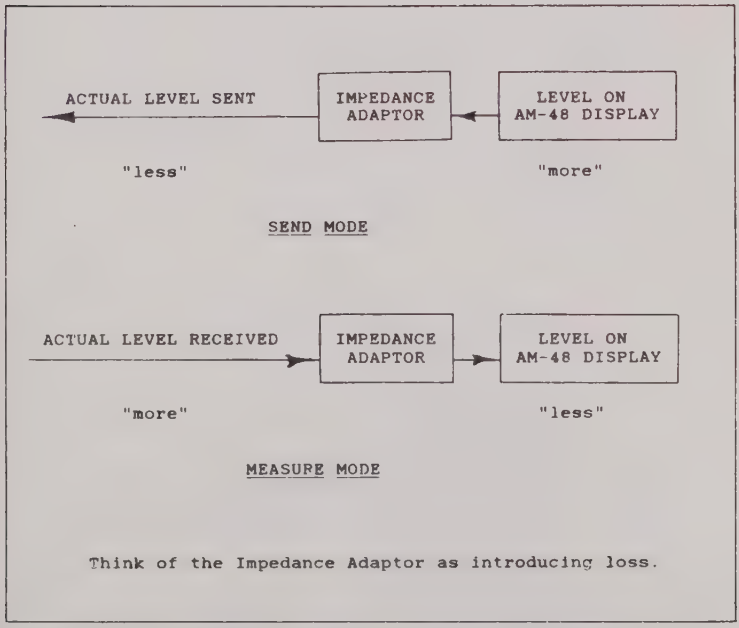

Figure 7-14. Impedance Adaptor Correction Value Memory Aid

7.41 IMPEDANCE ADAPTOR MEASUREMENT CORRECTIONS, continued

EXAMPLES. Refer to Table 7-8 for correction values (given in parentheses in the examples below).

1. Impedance Adaptor set to 135 Ohms.
   A. For AM-48 only:
      Switch 2 in <ABS> and MEASURE cursor at (idle channel) NOISE. The display reads 60.0 dBrn.

      The correct reading is 60 + (6.5) = 66.5 dBrn

      For AM-48E only:
      Switch 2 in <ABS> and MEASURE cursor at (idle channel) NOISE. The display reads -30.0 dBm.

      The correct reading is -30 + (6.5) = -23.5 dBm

   B. Switch 2 in <SEND> and SEND cursor at 1004. Level reading on display is -3.5 dBm.

      The correct reading is -3.5 - (6.5) = -10.0 dBm

2. Impedance Adaptor set to 1200 Ohms.
   A. Switch 2 in <ABS> and MEASURE cursor at L/F. Level reading on display is -20.0 dBm.

      The correct reading is -20.0 +(3.0) = -17.0 dBm

   B. Switch 2 in <SEND> and SEND cursor at PAR. Level reading on display is -3.0 dBm.

      The correct reading is
      -3.0 -(3.0) = - 6.0 dBm

7.42 AUTO CALIBRATE (Fig. 7-15)

NOTE
Auto-calibrate is only performed during servicing of the AM-48. The unit stays in calibration during normal operation.

Instructions to execute the AM-48 automatic self calibrate:

1. Go to the QUIET SEND display, " ---- ----", by setting switches as shown in Fig. 7-15.
2. Press [C] and hold for about five (5) seconds.
3. The display responds with a series of prompts shown and explained in Fig. 7-15.
4. Answer each prompt with "yes" or "no":
   A. Press [ETR/NEXT] for "yes" or
   B. Press [CANCEL] for "no", which aborts the auto calibrate sequence.
5. After the last prompt, the AM-48 will proceed with an auto-calibrate of the measurement circuits.

DISPLAYS	NAME	CONDITION TO CHECK BEFORE PROCEEDING
AuTo cAL ?	AUTO CAL?	Press [ETR/NEXT] to proceed with Auto Calibrate. Press [CANCEL] to abort.
on HooC ?	ON HOOK?	Be sure holding circuit is on hook (Switch 12 in <ON HK>).
4 WirE ?.	4 WIRE?	Be sure Switch 10 in <4W> (or <4W REV>).
900 oHM ?	900 OHM?	Be sure Switch 11 in <900Ω>.
TErM ?.	TERM?	Be sure Switch 13 in <TERM>.
LooP ?.	LOOP?	Be sure a cable is installed to loop back the send pair to the receive pair (see Fig. 5-1 for possible connection).



After each prompt, check that the indicated setup is made before pressing [ETR/NEXT] to proceed. Press [CANCEL] at any time to abort Auto Calibrate.

Figure 7-15. AM-48 Auto Calibrate Prompts

8. EXPLANATION AND APPLICATION OF MEASUREMENTS

8.01 INTRODUCTION

This section gives the theory behind the measurements whose operating instructions are described in Section 7. The meaning of the measurements and how they are used is discussed. This section is divided into the following paragraphs:

8.02 Units of Measurement
8.03 Level (Gain or Loss) and Frequency
8.04 Idle Channel Noise
8.05 Notched Noise (Noise with Tone)
8.06 Signal-to-Noise
8.07 PAR
8.08 Gain Slope
8.09 Idle Channel Impulse Noise
8.10 Phase Jitter
8.11 Amplitude Jitter
8.12 Notched Impulse Noise
8.13 Phase Hits
8.14 Gain Hits
8.15 Dropouts

8.02 UNITS OF MEASUREMENT (Fig. 8-1)

As with any system of measurement, standard units of measurement have been established in transmission testing to be able to meaningfully evaluate and make comparisons of the results.

This paragraph discusses units of measurement used in analog transmission level and noise measurements. Refer to Fig. 8-1.

1. dB. The deciBel (dB) is a logarithmic (base 10) electrical unit used to compare or indicate changes in level of intensity. The dB unit is only a unit of intensity, however, and does not have meaning unless a point of reference is established. Thus the systems of dBm and dBrn were established as described below.

2. dBm. To establish a point of reference in making comparisons in level (and noise for CCITT standard) measurements in transmission testing, the system of dBm was adopted.

   00.0 dBm is defined as the level of one (1) milliWatt of power, hence the abbreviation "m" after the dB. Levels of less intensity than this reference point are negative, -dBm values and levels of greater intensity are positive, +dBm values.

   It turns out that 00.0 dBm is a strong level for a telephone line, so most of the level measurements in units of dBm are negative, i.e. less intense than the 00.0 dBm reference. For example, -10.0 dBm is a typical level at which dialing tones are sent.

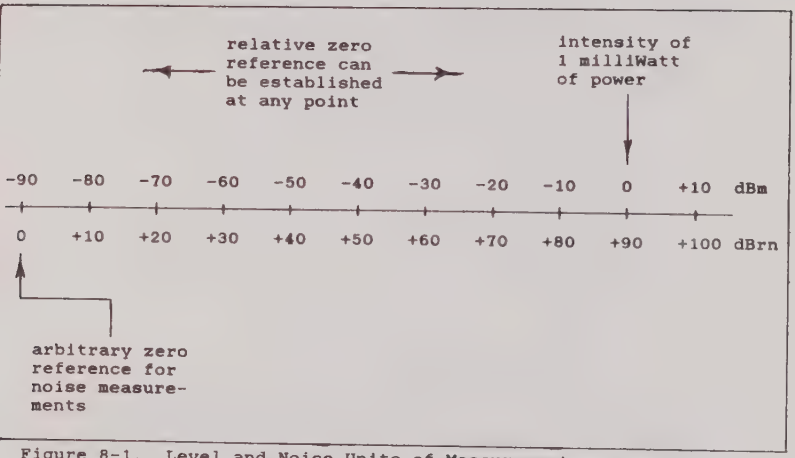
relative zero reference can be established at any point
intensity of 1 milliWatt of power
-90 -80 -70 -60 -50 -40 -30 -20 -10 0 +10 dBm
0 +10 +20 +30 +40 +50 +60 +70 +80 +90 +100 dBrn
arbitrary zero reference for noise measure-ments

Figure 8-1. Level and Noise Units of Measurement

3. dBrn. The dBrn unit is used in noise level measurements, "rn" meaning relative noise. The zero reference for noise measurement has been established at -90.0 dBm, an extremely low level for a telephone line. Thus, noise measurements will always be positive (higher level) with respect to the 00.0 dBrn reference.

   Note that 00.0 dBm is the same as +90.0 dBrn. This is shown in Para. 5.04,D,E and Fig. 5-4B, where a 00.0 dBm tone is looped back and measured as a "noise". In real life, however, noise is measured on an idle line or after notching out a holding tone.

4. Voltage to dB Conversion. The AM-48 makes level and frequency measurements by measuring the voltage appearing on the line. The internal microprocessor then converts this voltage reading to dBm or dBrn by assuming that the line is terminated by either 600 or 900 Ohms as selected by slide Switch 11. The conversion is in accordance with the formula:

$$10 \times \text{LOG}_{10} [(1000) \times (V^2 / Z)]$$

WHERE: Z = 600 or 900 ohms

V = measured voltage

8.02 UNITS OF MEASUREMENT (Fig. 8-1), continued

5. Absolute and Relative Measurements. An absolute level measurement is made in units of dBm, described in 2 above. A relative (Rel) measurement is in units of dB Rel; a zero point of reference is established at any level, and subsequent level measurements are made relative to that level. See Para. 7.22 for an explanation of how relative measurements are used.

8.03 LEVEL (LOSS OR GAIN) AND FREQUENCY

Level or frequency measurements are made by applying a tone of a known frequency and amplitude (normally 1004Hz @ 0.0 dBm) to the distant end of the transmission line being tested and then measuring the received level and frequency at the near end. The difference between sent level and received level is the loss (or gain) introduced by the line. The difference in sent frequency and received frequency is the frequency offset introduced by the line.

8.04 IDLE CHANNEL NOISE

These noise measurements are made through an internal noise-weighting (shaping) filter on a line under test without tone present.

One (1) of four (4) standard noise-weighting FILTERs is selected for this test:

C-Message, C-MSG (Psophometric, PSHO, for AM-48E)
3-KHz, 3K
15-KHz, 15K
Program, PROG (Sound-weighted, SWTD, for AM-48E)

The distant end of the line being measured is normally "Quiet Terminated", i.e. disconnected from the distant modem or terminal and connected to a resistive termination.

8.05 NOTCHED NOISE (NOISE WITH TONE)

Far End. A notched noise measurement is made with a holding tone of a specific frequency (normally 1004Hz in North America) applied to the distant end of the line under test.

Near End. At the near end of the line, the AM-48 test set removes the holding tone by routing the received signal through a notch filter, and then passes the remaining noise through the selected noise-weighting filter before measuring its level.

Holding Tone. In order for the measurement to be accurate it is important for the received holding tone to be of the proper frequency and of adequate amplitude. A "HOLD TONE" indicator is provided in the AM-48. If it is darkened, the hold tone is of an acceptable frequency and level to insure an accurate measurement. If the hold tone indicator is not on, the measurement is invalid.

8.06 SIGNAL-TO-NOISE (S/N) RATIO

This test is also performed by applying a holding tone to the distant end of the line under test. At the near end, the AM-48:

1. Measures and remembers the level of the received signal (Holding Tone)
2. Notches out the Holding Tone, and measures the residual noise
3. Displays the S/N ratio (the difference, in dB, of the two readings).

Note that if the noise component is largely independent of the hold tone signal level, then the S/N ratio will vary with the level of the transmitted hold tone. For this reason it is important that the transmitted hold tone level be set at the same level as the normal signal which appears on the line.

8.07 P/AR MEASUREMENTS

Definition of P/AR. P/AR (Peak to Average Ratio) measurements are made by applying a special 16 tone (PAR) signal at the distant end of the line under test. At the near end, the AM-48 simultaneously measures the peak value and average value of the received test signal. The ratio of the Peak value to the Average value of the transmitted signal is arbitrarily assigned a value of 100.

If the transmission channel were non-dispersive, then the received Peak-to-Average Ratio would also have a value of 100. A typical telephone channel causes smearing or Intersymbol Interference, however, and a value other than 100 is observed.

Table 8-1 shows some typical values which might be used to judge the acceptability of a telephone line to reliably transmit data.

EXAMPLE: If a modem requires a C2 conditioned line and a P/AR of 50 is measured, this line is likely to encounter transmission problems. On the other hand, if a P/AR of 78 is measured, Intersymbol Interference will not present problems.

Table 8-1
P/AR Requirements of Telephone Lines

CIRCUIT CONDITIONING	TYPICAL P/AR VALUES
BASIC CHANNEL	45
C1	48
C2	78
C4	87
C5	95

Definition of P/AR, continued. The P/AR value of the received (distorted) signal is made according to the following formula:

$$P/AR = 100*(K\ P/Afw - 1)$$

Where: P = peak voltage of received signal
Afw = full-wave average of the received signal
K = a constant

The constant K is derived by giving undistorted signal a nominal value of 100. Therefore:

$$K = 2Afwo/Po$$

Where Po = Peak voltage of the undistorted (original) signal
Afwo = full-wave averageof the undistorted (original) signal

Therefore:

$$P/AR = 100 * (2(P/Po)/(Afw/Afwo)-1)$$

or $$P/AR = 100 * (2(Pn/Afwn)-1)$$

Where Pn = normalized peak voltage of the received signal
Afwn = normalized full-wave average of the received signal.

Factors Which Affect P/AR. P/AR is most sensitive to envelope delay distortion and return loss problems. To a lesser degree it is affected by attenuation distortion, noise, and nonlinear (intermodulation) distortion. It is basically unaffected by transient phenomena such as impulse noise and phase and gain hits.

Envelope Delay Distortion. There is high correlation between measured P/AR values and values calculated from a plot of envelope delay distortion. In fact, for an envelope delay response containing significant ripples, P/AR is a better indication of the ability of the network to pass data reliably. Return loss problems are a common source of envelope delay ripple.

Effect of Noise. Noise can have a significant effect on a P/AR measurement. For this reason, it is important to measure signal to noise ratio (or noise-with-tone) before making a P/AR measurement. If the signal-to-noise ratio is less than 25 dB, then the P/AR reading will be significantly reduced by noise alone.

8.07 P/AR MEASUREMENTS, continued

Effect of Nonlinear Distortion. Nonlinear (Intermodulation) Distortion can similarly affect the P/AR reading. The effect depends on whether the second or third order products dominate as the source of distortion. If the third order products dominate, they increase or decrease the P/AR value, depending upon the sign of the added products.

8.08 GAIN SLOPE

Gain slope (sometimes referred to as attenuation distortion) measurements are similar to a level/frequency measurement except the level measurement is made at several different frequencies in order to determine the loss (or gain) on the line at different frequencies. The AM-48 SEND 3TONE will repeatedly send 5 second intervals each of 404 Hz, 1004 Hz, and 2804 Hz; the AM-48E SEND SLOPE will repeatedly send 5 second intervals each of 404 Hz, 1004 Hz, 2004 Hz and 3004 Hz.

Because it is desirable to express the difference in loss at different frequencies, this measurement is usually done on a relative level basis. The two (2) methods that can be used with the AM-48 to measure gain slope are outlined below:

Gain Slope Using <ABS> Measure.

1. Set Switch 2 of near end AM-48 to <ABS>.
2. Read the level at the near end of the line while the far end AM-48 is in SEND 3TONE (SLOPE for AM-48E).
3. Note the least loss and most loss readings.
4. Calculate the difference between the least loss and most loss readings. This is the gain slope of the line.

Gain Slope Using <REL> Measure.

1. Start with Switch 2 of near end AM-48 set to <ABS>.
2. Read the level at the near end of the line while the far end AM-48 is in SEND 3TONE (SLOPE for AM-48E).
3. Note the lowest absolute reading.
4. Set Switch 2 to <REL> when the the display shows the lowest absolute reading.
5. The display will initially read zero and all subsequent readings will be in DB REL, relative to the lowest absolute reading.

8.09 IDLE CHANNEL IMPULSE NOISE (Fig. 8-2)

This is a timed study which counts the number of noise pulses that exceed each of three levels (thresholds). No Holding Tone is used for this test. The constraints of the test are first set up and then the test is run.

Information concerning the idle channel impulse noise test:

1. Three (3) noise thresholds are established: low, middle, and high levels, with an equal interval between them called the delta.
2. The time over which the run is to be made is set, called the duration.
3. The run is started and a running count is kept of the number of noise pulses that exceed each threshold.
4. The run will automatically stop when the duration time is reached, or the test can be manually stopped at any previous time.
5. A blanking interval is set during which time the noise pulse counter does not count.

Blanking Interval. The blanking interval for a threshold is started when a pulse exceeds the threshold for the first time. The noise pulse counter does not count during the blanking interval. The purpose of the blanking interval is to minimize the effect of ringing on the count. Without the blanking interval, several counts could be made immediately after the first pulse, due to secondary pulses caused by ringing. The blanking interval allows time for the ringing to die down.

Fig. 8-2 illustrates example parameters and showns how the blanking intervals are initiated.

See the table next to the displays in Fig. 7-6 for information on the ranges of the parameters. A typical duration time for the study is 15 minutes, although a study of up to 33 hours could be made. Note that only values for the low level and the delta are set, which determine all three (3) levels.

8.10 PHASE JITTER

This measurement requires a 1004 Hz nominal Holding Tone. This test measures the peak-to-peak phase variation of the modulation of the holding tone. The bandpass (range of frequencies) is selected, over which the phase jitter is to be measured. A phase-locked-loop generator locks on the Holding Tone and an average peak-to-peak phase jitter is measured in degrees.

The bandpass (bandwidth) can be set to either:

1. 4 Hz to 300 Hz or
2. 20 Hz to 300 Hz.

The exact frequency of the Holding Tone is known because it is the same as the displayed phase-locked-loop frequency.

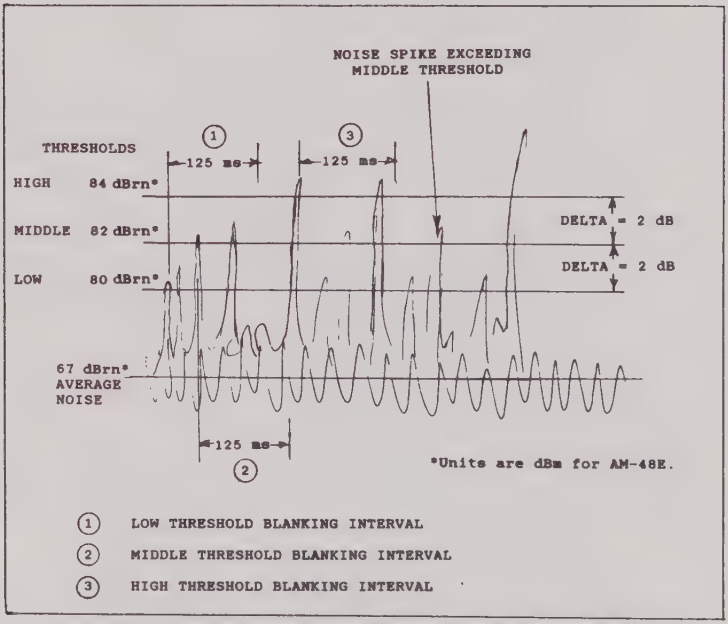

Figure 8-2. Impulse Noise Thresholds and Blanking Intervals

8.11 AMPLITUDE JITTER

The test setup for amplitude jitter is the same as the phase jitter measurement (Para. 8.10) except instead of measuring the variation of the phase, the variation of the amplitude of the modulation is measured. The unit of measurement for the amplitude jitter is average percent peak-to-peak variation.

Being that this is an amplitude measurement, the phase-locked-loop frequency is not of interest.

8.12 NOTCHED IMPULSE NOISE

This test is the same as the Idle Channel Impulse Noise Test, Para. 8.09, except that it is made over an active line with a holding tone which is notched out before the measurements are performed.

8.13 PHASE HITS

A phase hit is a sudden change in the phase of the modulation of a Holding Tone. A threshold of from 5 to 45 degrees is set and the number of phase hits that exceed that threshold during the timed study is counted.

8.14 GAIN HITS

A gain hit is a sudden change in the amplitude of the modulation of a Holding Tone. A threshold of 2, 3, 4, or 6 dB is set and the number of gain hits that exceed that threshold during the timed study is counted.

8.15 DROPOUTS

A dropout is the loss of Holding Tone. The number of losses of Holding Tone during a timed study is counted. A "loss" of Holding Tone occurs if the Holding Tone level and/or frequency go out of the acceptable range for valid transient measurements.

9. CIRCUIT DIAGRAMS

9.01 INTRODUCTION

This section contains a block diagram of the AM-48 and a schematic diagram of the Impedance Adaptor.

9.02 AM-48 SIMPLIFIED BLOCK DIAGRAM (Fig. 9-1)

Fig. 9-1 is a simplified block diagram of the AM-48. Note that continuous lines connecting the blocks indicate signal paths, and broken lines indicate control paths. The definitions of the abbreviations in the block diagram are listed below.

AMP	AMPlifier
AUTO	AUTOmatic
AV	AVerage detector
BP	1 KHz Band Pass filter
CMSG	C-message noise-weighting filter
DET	DETector
FILT	FILTer
FWR	Full Wave Rectifier
HOLD	HOLDing circuit
4 HZ	4 Hz high pass filter
20 HZ	20 Hz high pass filter
300 HZ	300 Hz low pass filter
IMPLS	IMPuLSe
MIC	MICrophone
MUX	MUltipleXor
NTCH	1010 Hz NoTCH filter
PAR	Peak-to-Average Ratio filter (1300 Hz bandpass)
PK	PeaK detector
P/P	Peak-to-Peak detector
PROG	PROGram noise-weighting filter
QUIET	QUIET termination
R	Ring
RCV	ReCeiVe
RMS	RMS (Root Mean Square) detector (for noise)
SKR	SpeaKeR
SND	SeND
SW	SWitch
T	Tip
V/F	Voltage-to-Frequency converter
2W	2-Wire
4W	4-Wire

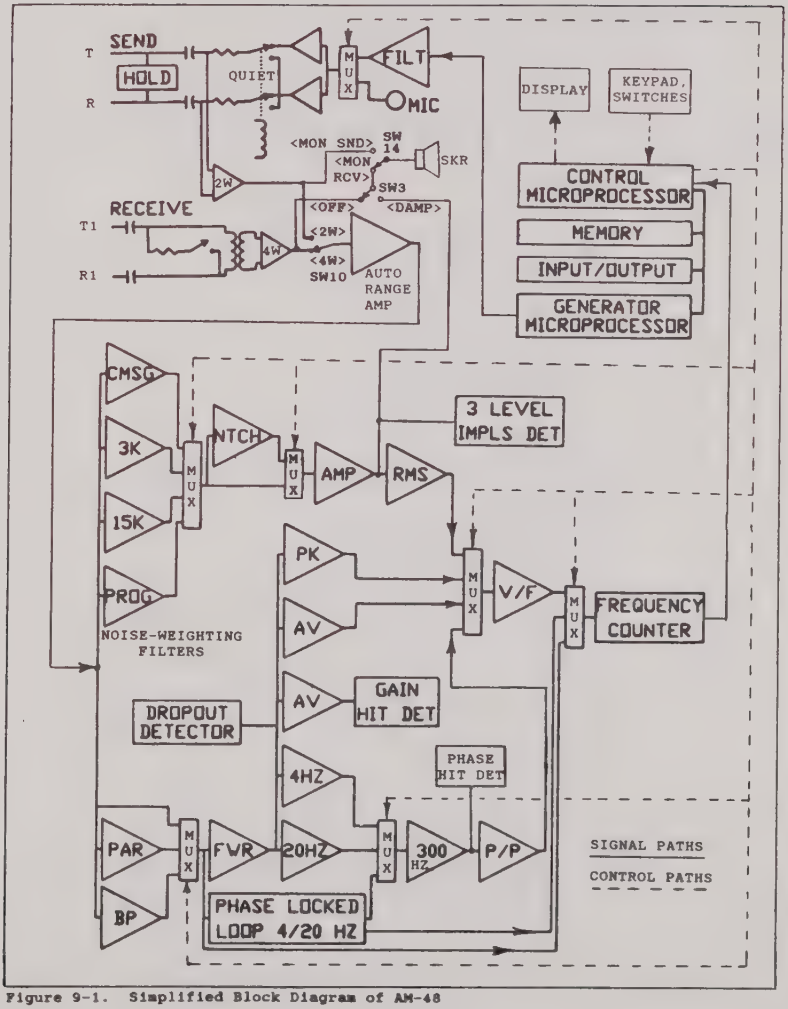

Figure 9-1. Simplified Block Diagram of AM-48

9.03 IMPEDANCE ADAPTOR SCHEMATIC (Fig. 9-2)

Figure 9-2 is a schematic diagram of the Impedance Adaptor, Model Number 24-0005.

See Fig. 3-9 for an illustration of the Impedance Adaptor. See also Para. 3-10, Para. 6.05 and Para. 7.41 concerning the Impedance Adaptor.

Note the following in the schematic of Fig. 9-2:

1. The upper circuitry (2W or 4W Send) is identical to the lower circuitry (4W Receive).
2. Switch S1 is controlled by the upper knob of the Impedance Adaptor, Switch S2 is controlled by the lower knob.
3. Impedance Adaptor switch positions (THRU, 1200, 900, 150, 135, 75) are indicated on the upper poles of S1 and S2.
4. The internal impedance of the AM-48 is set for 600 Ohms. Therefore, for impedances greater than 600 Ohms, the Impedance Adaptor adds resistance in series to give the correct impedance. For impedances less than 600 Ohms, the Impedance Adaptor connects an appropriate resistance in parallel to give the correct impedance.

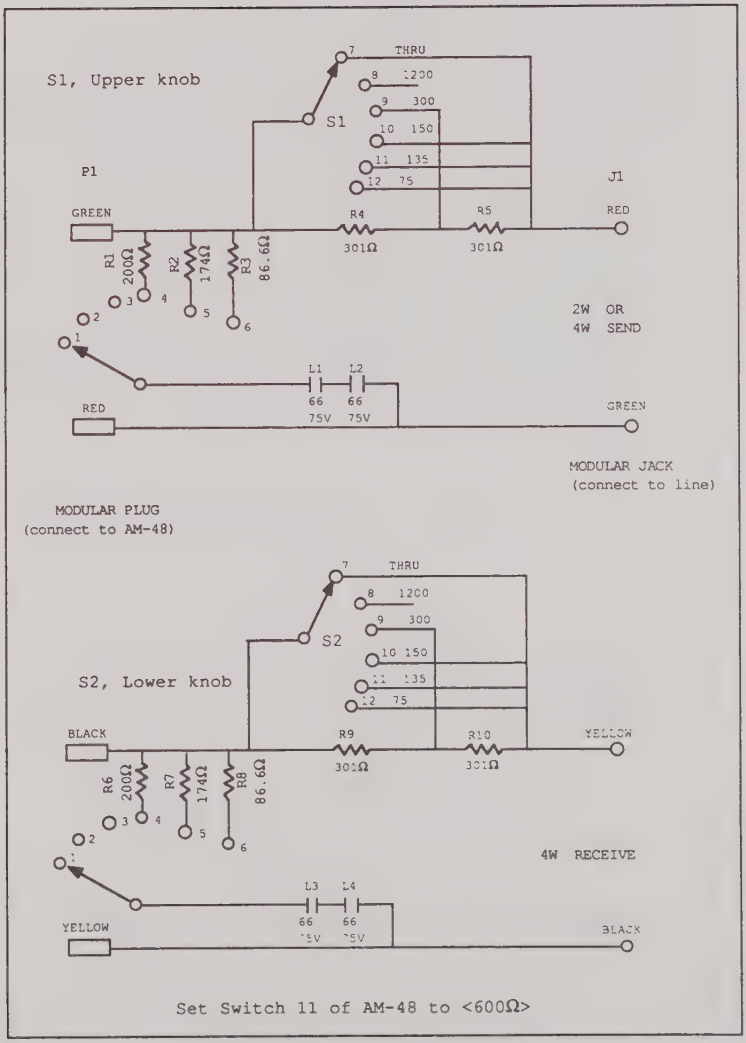

Figure 9-2. Schematic Diagram of Impedance Adaptor

10. WARRANTY AND SERVICE POLICY

10.01 WARRANTY

AMERITEC Corporation warrants that its electronic instrument products are manufactured to the highest commercial standards and are free from any defects in material or workmanship. For a period of one (1) year from shipment, AMERITEC will repair without charge to the original purchaser any unit which upon inspection by AMERITEC proves to be defective.

This warranty is the sole warranty offered by AMERITEC and is in lieu of all other obligations or liabilities, including claims of consequential damage; however, an **EXTENDED WARRANTY PLAN** may be purchased.

A description of the Extended Warranty Plan for AMERITEC products and an order form will be found on the next pages of this manual.

10.02 SERVICE POLICY

AMERITEC products are designed with plug-in printed circuit boards and modular assemblies. Once a problem is localized , service is accomplished by PC board (or module) replacement and can normally be accomplished in five (5) minutes, or less.

10.03 RETURN OF UNIT

In the event of a malfunction, call or write to the AMERITEC factory and obtain a return authorization number. Return the unit to AMERITEC, freight prepaid,with a note (in-warranty repair) or a Purchase Order for the repair (out-of-warranty repair) listing the following information:

- Return authorization number from AMERITEC.
- Return shipment address of purchaser
- Name and telephone number of person at purchaser's location familiar with the problem.
- Brief description of problem. (Include any printouts that may have a bearing on the problem, if possible.)
- Terms of payment of repair costs (out-of-warranty unit).

The unit will be repaired and returned freight-prepaid for units in warranty and freight-collect for out-of-warranty units. As stated above, a Purchase Order to cover the cost of repair must accompany any out-of-warranty return of the unit to AMERITEC.

AMERITEC CORPORATION
760 Arrow Grand Circle
Covina, California, 91722
U.S.A

Telephone: (818) 915-5441
FAX: (818) 915-7181

EXTENDED WARRANTY PLAN
ORDER FORM

Extended warranty coverage of most Ameritec products is now available. The Plan can be purchased at any time, however it is most economical at the time of unit purchase. Although certain limitations exist, the Plan provides for the repair of hardware found to be defective while the Plan is kept in force. All repairs will be made at Ameritec's facilities by trained technicians. Ameritec personnel will assist each customer in diagnosing hardware problems. Unlimited telephone support is available as a part of the Plan.

The Extended Warranty Plan is available on a one year basis and is fully renewable. Ameritec will notify you of the Plan's availability approximately 60 days in advance of any warranty expiration. Ameritec has introduced two different Plans for each product. The Plans are defined as followed:

Plan 1: Ordered prior to the product being shipped, or during standard warranty or Plan coverage.
Plan 2: Standard new product warranty or previous Plan coverage has expired.

Subscription to the Plan is simple. **Complete each side of the following form and either mail or FAX it to Ameritec or your Ameritec representative.** You will be promptly notified of the start of coverage.

PRODUCT	PLAN 1 P/N	QTY	PRICE	EXT	PLAN 2 P/N	QTY	PRICE	EXT
AM 1 or AM 1E(not ISDN)	EW-0101	___	$1,100	$ ____	EW-0201	___	$1,800	$ ____
AM 1-ISDN or AM 1E-ISDN	EW-0102	___	$1,700	$ ____	EW-0202	___	$2,800	$ ____
AM 42 or AM 44	EW-0103	___	$450	$ ____	EW-0203	___	$700	$ ____
AM 48	EW-0104	___	$500	$ ____	EW-0204	___	$800	$ ____
AM 5 or AM 5XT-BASIC	EW-0105	___	$550	$ ____	EW-0205	___	$900	$ ____
AM 5XT	EW-0106	___	$700	$ ____	EW-0206	___	$1,100	$ ____
AM 7	EW-0107	___	$1,200	$ ____	EW-0207	___	$1,950	$ ____
AM 8	EW-0108	___	$800	$ ____	EW-0208	___	$1,200	$ ____

Prices: Subject to change without prior notice. **Terms:** Payable upon subscription.

	UNIT 1	UNIT 2	UNIT 3	UNIT 4
Model Type: (e.g.,AM1PLUS-11, AM 48, etc.)				
Serial Numbers:				
Options: (include separatly ordered line cards such as: 28-0055 for AM 7)				

USER AUTHORIZATION

Company: _____

Address: _____

Telephone: _____

FAX: _____

Name (print) : _____

Signature: _____

Title: _____

Date: _____

AMERITEC ACCEPTANCE

Signature: _____

Title: _____

Date: _____

GLOSSARY

Nomenclature. This manual uses consistent nomenclature to refer to the cursor settings, switches, jacks, keys, and displays. The writing of the reference is exactly the same as it appears on the AM-48. The different components are distinguished by underlining, or enclosing in angular brackets, square brackets, or quotation marks. The table below gives examples of each type of notation:

COMPONENTS	EXAMPLE NOTATIONS
Cursor Settings	QUIET, L/F, PROG, IMPLS
Switches and Jacks	<ABS>, <ON HK>, <EAR>, <RCV>
Keys	[7], [ETR/NEXT], [#], [START]
Displays	"LEVL", "-10.0 DBM", "400 HZ"

The balance of this GLOSSARY is an alphabetical listing of the terms and abbreviations used in this manual along with their definitions.

<ABS> Switch position to give ABSolute measurement readings.
AC Alternating Current
AM AMeritec Corporation
AMJTR AMplitude JiTteR

"BLANC" Blanking interval, used in timed tests.
<BRDG> Switch position to BRiDGe the line connections.
"Butt Set" Portable piece of telephone test equipment with capability of dialing, talking and listening.

[CANCEL] OOPS! This key is used to clear an undesired parameter value from the display. Display reverts to previous value.
CCITT International Telegraph and Telephone Consultative Committee
C-MSG C-MeSsaGe noise-weighting filter
CO Central (telephone) Office
CPU Central Processing Unit

D Depth
<DAMP> This switch setting slows down the display update to 2 times per second (instead of 4 times per second for <OFF> setting).
dB DeciBell; unit of signal intensity.
dBm Unit of level or noise referenced to 1 milliWatt of power.
dBrn Unit of noise referenced to -90 dBm.
DC Direct Current
<DC 9V> Plug for AC Adaptor.
"DROP" Number of DROPouts.
DTE Data Terminal Equipment
DTMF Dual Tone Multi-Frequency; a type of dialing.
"DUR" DURation for timed tests.

GLOSSARY

<EAR> EARphone jack
EIA Electronics Industries Association (USA)
[ETR/NEXT] EnTeR/NEXT display. This key is used to either EnTeR a value into memory or to go to the NEXT display.
[ETR/PREV] EnTeR/PREVious display. This key is used to either EnTeR a value into memory or to go to the PREVious display.

FX Foreign eXchange

"GHIT" Gain HIT count
"GTHLD" Gain hit THreshoLD

H Height
Holding Tone (HT) A 1004 Hz tone used to simulate a signal on the line. The Holding Tone is notched out by a filter to allow measurement of associated noise.
HT Holding Tone
Hz Hertz, i.e. cycles per second; unit for frequency.

"IDELTA" Impulse DELTA, i.e. difference between thresholds.
IHI HIgh Impulse noise count
"ILO" LOw Impulse noise count
"IMID" MIDdle Impulse noise count
IMPLS IMPuLSe Noise (timed test)
"ITHLD" Impulse THreshoLD

Jack Female connector
"JITR" Jitter
Δ JTR Amplitude Jitter
Ø JTR Phase Jitter

3K 3 kHz noise-weighting filter
15K 15 kHz noise-weighting filter
kHz Kilo-Hertz, 1000 Hz

LED Light-Emitting Diode
"LEVL" Level
L/F Level/Frequency

MF Multi-Frequency. A type of dialing.
<MIC> Microphone
MIN MINute
mm Millimeter (.001 meter)
MODEM MODulator/DEMoldulator
<MON RCV> MONitor ReCeiVe pair (with the speaker)
<MON SND> MONitor SeND pair (with the speaker)
ms Milliseconds
MW Milliwatt, i.e. a source @ 0 dBm and 1004 Hz.

NiCad Nickel Cadmium. A type of battery.
NN Notched Noise
<NOR> Normal. Switch position to allow generation of all frequencies.

GLOSSARY

Notch Filter A filter which greatly attenuates a signal at a certain frequency called the notch frequency, e.g. 1010 Hz, used for notched noise measurements.
NZ NoiZe, i.e. idle channel noise.

<OFF> This is the normal switch setting to give a display update of 4 times per second.
<ON HK> Switch position for ON HooK.
"OVER" Level is OVER maximum measurable level.

PAR Peak-to-Average Ratio
PHJTR PHase JiTteR
"PLL" Phase-Locked Loop frequency
Plug Male connector
P/P Peak-to-Peak
PPS Pulses Per Second
<PRINT> Print. Switch position to give printed copy of setup and measurements.
PROG PROGram noise-weighting filter. This term comes from radio broadcasting where a PROGram filter was developed to simulate the effect of transmitting a radio PROGram to a remote transmission tower.
<PRT> Printer port jack
PSHO PSopHOmetric noise-weighting filter
"PTHLD" Phase hit THreshoLD
<PULSE> Switch position for PULSE dialing.

QUIET Quiet termination

R, R1 Ring; the connection at the ring of e.g. a Bantam connector.
"RANGE" Frequency bandwidth RANGE for jitter measurements.
<RCL/STO> ReCaLl/STOre. Switch position to store/recall information from non-volatile memory.
<RCV> ReCeiVe jack
Ref Reference
<REL> Switch position to give RELative measurement readings.
RJ11 6-wide modular connector.
RS232 Standard EIA interface using 25-pin D connector.

<SEL> SELect
<SEND> Switch position to monitor SEND signal on display.
<SF SKP> Signaling Frequency SKiP. Switch position to prevent generation of tones in signaling band.
<SHIFT> Switch position to enable auxiliary keyboard functions.
SLOPE For AM-48E only, pre-programmed set of tones (304 Hz, 1004 Hz, 2004 Hz, 3004 Hz) which are sent in a cycle for 5 second intervals. See 3TONE for AM-48.
S/N Signal-to-Noise ratio
<SND> SeND jack
S/S Starting and Stopping of a timed test.
[START] Key used to start a timed test.
[STOP] Key used to stop a timed test.
"STUC" Stuck. Display indication that sweep is programmed for only one frequency.

GLOSSARY

SWEEP A programmable series of frequencies are sent in steps.
SWTD Sound-WeighTeD noise-weighting filter

T,T1 Tip. The connection at the tip of e.g. a Bantam connector.
<TALK> "Push-to-TALK" switch
<TERM> TERMinate; switch position to terminate line connections.
THLD THreshoLD
"THLD 2 HI" Display indication that upper THreshoLD is too HIgh (in impulse noise timed test).
TIE TIE line of a telephone network.
"TIME" Elapsed time for timed tests.
"TMOFF" TiMe OFF. Time after which AM-48 will automatically turn itself off when unit is left unattended.
3TONE For AM-48 only, pre-programmed set of tones (404 Hz, 1004 Hz, 2804 Hz) which are sent in a cycle for 5 second intervals. See SLOPE for AM-48E.
TRAN TRANsient test
TRANS TRANSient test, i.e. a timed test measuring impulse noise, gain hits, phase hits, drop outs
"TTLEV" Touch Tone LEVel

"UNDR" Level is UNDeR minimum measurable level.

V Volts dc
VAR Variable (level and frequency) tone
<VOL> VOLume control -- controls level of speaker volume

W Width
WECO Western Electric COmpany
2W 2-wire
4W 4-wire
<4W REV> Switch position to frog 4-wire connections, i.e. to switch the receive and send pair connections.

XMIT Transmit
<X TONE> Auxiliary Tone, 2713 Hz.

[△], [▽] These keys are used to increase or decrease the value of a user-programmable parameter.
[+/-] Designates a positive (indicated by blank space on display) or negative (-) value for the variable level being set with the number keys.
Ω Ohm. Unit of electrical resistance.
> Greater than
< Less than
" Inches
% Percent
***** Calls attention to a footnote.

INDEX

A

Absolute Measurements 3-5, 7-16, 7-17, 7-37, 7-38, 8-3, 8-6
AC Adaptor 1-9, 2-1, 3-3, 3-4, 3-14, 3-16, 4-1, 4-3, 6-1, 6-2, 6-4
Accessories 2-1, 2-2
Accuracy of Measurements 6-1, 6-6, 7-16, 8-3
Amplitude Jitter 1-7, 3-13, 5-4, 5-5, 7-18, 7-25, 7-26, 7-38, 8-8
Auto Calibrate 7-4, 7-42, 7-43
Auto Power Shutoff 1-9, 3-5, 4-4, 7-6, 7-7, 7-10, 7-11, 7-40
Auto Study Result Save 1-4, 7-19, 7-40
Auxiliary Keyboard Functions 3-7, 3-10, 7-2, 7-4, 7-5, 7-8
Auxiliary Tone (2713 Hz) 1-6, 3-7, 6-9, 7-9, 7-12

B

Batteries 1-9, 2-1, 3-14, 3-15, 4-1, 4-2, 4-3, 7-2, 7-11, 7-16
Battery Compartment 4-1, 4-2, 4-3
Battery Selection Switch 4-1, 4-2
Blanking Interval 1-8, 7-7, 7-10, 7-11, 7-21, 7-22, 7-27, 7-38, 8-7
Block Diagram, AM-48 9-1, 9-2
Bridging 1-9, 3-9, 6-6
"Butt-Set" 1-2, 7-32

C

Cables 2-2, 3-3, 3-4, 3-14, 3-15, 5-1, 6-1, 6-2, 6-3, 6-4
[Cancel] Key 3-10, 3-11, 5-10, 7-8, 7-42, 7-43
C-Message Noise-Weighting Filter 1-2, 1-7, 1-8, 3-12, 3-13, 7-17, 7-22, 7-24, 7-28, 7-35, 8-3, 9-2
Color Coding 3-1, 3-12, 7-2, 7-17
Component Location 3-1, 3-2, 3-3, 3-16, 3-17
Configurations 1-3, 6-7, 6-8, 6-9, 6-10
Connections 1-9, 3-3, 3-8, 5-1, 6-1, 6-2, 6-3, 6-4, 6-5, 6-8
Connectors 3-2, 3-3, 3-14, 3-15, 3-16, 6-1, 6-3, 9-4
Corrections to Measurements (Impedance Adaptor) 7-16, 7-40, 7-41, 7-42
Cursors 3-12, 5-2, 5-3, 7-2, 7-3, 7-4, 7-6, 7-10, 7-13, 7-14, 7-15, 7-20, 7-22, 7-23, 7-24, 7-25, 7-27, 7-28, 7-32, 7-43

D

Damping, Display 1-9, 3-7, 7-4
Dialing 1-4, 3-7, 3-8, 3-10, 5-6, 5-7, 7-2, 7-5, 7-11, 7-30, 7-31, 7-32
Dimensions 1-9, 3-1, 3-15

INDEX

Display 3-2, 3-5, 3-7, 3-12, 4-3, 4-4, 5-4, 7-2, 7-3, 7-10, 7-11, 7-12, 7-13, 7-14, 7-15, 7-16, 7-20, 7-22, 7-23, 7-24, 7-25, 7-27, 7-28, 7-40, 7-41, 7-43, 9-2
Display Character Code 7-3, 7-10, 7-13, 7-14, 7-15, 7-25
Distortion 1-6, 8-5, 8-6
Dropouts 1-8, 7-18, 7-28, 7-29, 7-38, 7-40, 8-9, 9-2
"Dry" Circuits 6-1
DTMF Dialing 1-4, 3-7, 3-8, 3-10, 5-7, 6-9, 7-2, 7-5, 7-30, 7-31, 7-32
DTMF Level -- see "Touch Tone Level"
Duration (timed tests) 1-8, 1-9, 7-19, 7-21, 7-22, 7-26, 7-27, 7-29, 7-30, 7-38, 8-7

E

Earphone 2-1, 3-3, 3-4, 3-9, 3-14, 6-2, 7-4, 7-32
Elapsed Time (Timed Tests) 7-19, 7-21, 7-22, 7-26, 7-27, 7-29, 7-30, 7-38, 7-40
End-to-End Testing 1-3, 6-7, 6-8
[ETR/NEXT]/[ETR/PREV] Keys 3-10, 3-11, 5-8, 5-10, 7-8, 7-42, 7-43

F

Filters -- see "Noise-Weighting Filters"
Frequency Measurement 1-6, 9-2 -- also see "Level/Frequency Measurement"
Frequency Setting, Send 7-10, 7-11, 7-13
Functional Overview 1-2

G

Gain Hits 1-8, 7-18, 7-28, 7-29, 7-38, 7-40, 8-9, 9-2

H

Hand-held Printer 1-4, 2-1, 3-3, 3-14, 3-15, 3-16, 3-17, 4-3, 6-2, 6-4, 7-33, 7-34, 7-35
Holding Circuit 1-4, 9-2
Holding Tone, 1004 Hz 1-7, 3-12, 3-13, 5-4, 5-5, 6-1, 7-17, 7-18, 7-23, 7-24, 7-25, 7-26, 7-27, 7-28, 7-29, 7-35, 7-37, 7-38, 7-39, 8-2, 8-3, 8-4, 8-7, 8-9

I

Impedance Adaptor 2-1, 3-18, 6-7, 7-16, 7-40, 7-41, 7-42, 9-3, 9-4
Impedance Matching 6-7, 7-16, 9-3, 9-4
Impedances 1-4, 1-9, 3-8, 3-9, 3-18, 6-5, 6-6, 6-7, 7-4, 7-40, 7-42, 9-3, 9-4

INDEX

Impulse Noise, Idle Channel 1-8, 3-11, 3-13, 7-18, 7-21, 7-22, 7-38, 8-7, 8-8, 9-2
Impulse Noise, Notched 1-8, 3-11, 7-18, 7-26, 7-27, 7-38, 7-40, 8-9, 9-2

J

Jitter Bandpass (Range) 7-7, 7-23, 7-25, 7-26, 7-30, 8-7, 9-2
Jitter Measurements -- see "Amplitude Jitter" or "Phase Jitter"

K

Keyboard 3-2, 3-8, 3-10, 5-7, 7-2, 7-4, 7-5

L

Level/Frequency Measurement 1-6, 3-13, 5-3, 5-4, 5-5, 7-19, 7-20, 7-35, 7-37, 7-39, 7-40, 7-42, 8-3, 8-6
Level Setting 7-6, 7-7, 7-9, 7-10, 7-13, 7-14, 7-15, 7-30
Line Connections 6-2, 6-3, 6-5, 6-7
Loopback Testing 5-1, 6-1, 6-7, 6-8, 6-9, 6-10, 7-12, 7-43

M

Measure Modes 1-2, 1-3, 3-7, 3-12, 3-13, 6-1, 7-18, 7-30
  Amplitude Jitter 1-7, 3-13, 5-4, 5-5, 7-18, 7-25, 7-26, 7-38, 8-8
  Impulse Noise, Idle Channel 1-8, 3-11, 3-13, 7-18, 7-21, 7-22, 7-38, 8-7, 8-8
  Level/Frequency 1-6, 3-13, 5-3, 5-4, 5-5, 7-19, 7-20, 7-35, 7-37, 7-39, 7-40, 7-42, 8-3, 8-6
  Noise, Idle Channel 1-7, 3-13, 5-3, 5-4, 5-5, 7-18, 7-19, 7-20, 7-37, 7-39, 7-40, 7-42
  Noise, Notched 1-7, 3-13, 3-14, 5-4, 5-5, 7-4, 7-18, 7-23, 7-24, 7-28, 7-37, 7-39, 8-3
  P/AR 1-7, 3-13, 5-6, 7-18, 7-19, 7-20, 7-38, 7-39, 8-4, 8-5, 8-6, 9-2
  Phase Jitter 1-7, 3-13, 5-4, 5-5, 7-18, 7-23, 7-25, 7-38, 8-7
  Signal-to-Noise (S/N) Ratio 1-7, 3-13, 3-14, 5-4, 5-5, 7-4, 7-18, 7-23, 7-24, 7-38, 7-39, 8-4, 8-5
  Transients 1-8, 3-11, 3-13, 7-18, 7-26, 7-27, 7-38, 8-5
    Dropouts 1-8, 7-18, 7-28, 7-29, 7-38, 7-40, 8-9, 9-2
    Gain Hits 1-8, 7-18, 7-28, 7-29, 7-38, 7-40, 8-9, 9-2
    Impulse Noise, Notched 1-8, 3-11, 7-18, 7-26, 7-27, 7-38, 7-40, 8-9, 9-2
    Phase Hits 1-8, 7-18, 7-26, 7-28, 7-38, 7-40, 8-9, 9-2
Memory 1-4, 7-6, 7-7, 7-8, 7-9, 7-11, 7-12, 7-19, 7-21, 7-26, 7-29, 7-30, 7-40, 9-2
Menus 3-12, 3-13, 7-2, 7-3, 7-9, 7-10, 7-11, 7-12, 7-13, 7-14, 7-15, 7-17, 7-20, 7-22, 7-24, 7-25, 7-27, 7-29, 7-43

INDEX

MF Dialing 1-4, 3-7, 3-8, 3-10, 5-6, 5-7, 7-2, 7-5, 7-30, 7-31, 7-32
MF Level -- see "Touch Tone Level"
Microphone 3-2, 3-14, 7-31, 7-32, 9-2

N

Noise Measurements, General 1-10, 4-1, 5-5, 6-1, 7-16, 7-35, 8-2
Noise, Idle Channel 1-7, 3-13, 5-3, 5-4, 5-5, 7-18, 7-19, 7-20, 7-37. 7-39, 7-40, 7-42
Noise, Notched 1-7, 3-13, 3-14, 5-4, 5-5, 7-4, 7-18, 7-23, 7-24, 7-28, 7-37, 7-39, 8-3
Noise-Weighting Filters (C-Message/Psophometric, 3K, 15K, Program/Sound-Weighted) 1-2, 1-7, 1-8, 1-10, 3-7, 3-12, 3-13, 6-1, 7-4, 7-17, 7-18, 7-21, 7-22, 7-23, 7-24, 7-28, 7-30, 7-35, 7-37, 7-38, 7-39, 8-3, 9-2
Non-Volatile Memory 1-4, 7-6, 7-7, 7-11, 7-12, 7-19, 7-21, 7-26, 7-29, 7-30, 7-40

O

Off-Hook 3-8, 7-4, 7-16, 7-31, 7-32
On-Hook 3-8, 7-4, 7-16, 7-31, 7-32, 7-43

P

Paper Roll (for Hand-held Printer) 2-1, 3-14, 3-15, 3-17, 7-33
P/AR Measurement 1-7, 3-13, 5-6, 7-18, 7-19, 7-20, 7-38, 7-39, 8-4, 8-5, 8-6, 9-2
P/AR Waveform, Send 1-5, 3-13, 5-6, 6-1, 7-9, 7-12, 7-14, 7-17, 7-18, 7-19, 7-36
Parameter Values, Setting 3-11, 5-8, 5-10, 7-2, 7-3, 7-5, 7-6, 7-8, 7-12
Part Numbers 2-1, 2-2
Phase Hits 1-8, 7-18, 7-26, 7-28, 7-38, 7-40, 8-9, 9-2
Phase Jitter 1-7, 3-13, 5-4, 5-5, 7-18, 7-23, 7-25, 7-38, 8-7
Phase Locked Loop (PLL) Frequency 7-23, 7-25, 7-28, 7-38, 8-7, 8-8, 9-2
Physical Features 1-2, 1-9, 3-1, 3-2, 3-3, 3-4, 3-15, 3-16, 3-17, 3-18, 4-1, 4-2
Polarity (of Connections) 6-5
Power 1-1, 1-9, 3-5, 3-14, 3-15, 4-1, 4-2, 4-3, 4-4, 5-10, 6-4, 7-6
Power Switch 1-9, 3-5, 4-4, 7-4
Printer -- see "Hand-held Printer"
Printing 3-7, 7-4
Printouts 7-19, 7-35, 7-36, 7-37, 7-38, 7-39
Program Filter 1-2, 1-7, 1-8, 3-12, 3-13, 7-17, 7-22, 7-24, 7-28, 7-35, 8-3, 9-2
Psophometric Filter (PSHO) 1-2, 1-10, 3-12, 3-13, 5-2, 7-17, 7-22, 7-24, 7-35, 8-3
Pulse Dialing 3-8, 3-10, 5-7, 7-5, 7-30, 7-32

INDEX

Q

Quiet Termination 1-6, 3-8, 3-13, 5-3, 6-6, 6-10, 7-4, 7-9, 7-10, 7-11, 7-16, 7-31, 7-32, 7-36, 7-42, 8-3, 9-2

R

Range -- see "Jitter Bandpass (Range)"
Recall -- see "Store/Recall"
Receiving and Unpacking 2-1, 2-2
Relative Measurements 3-5, 7-16, 7-17, 7-35, 7-39, 8-2, 8-3, 8-6
Responders 6-1, 6-7, 6-9, 6-10, 7-31
Ribbon Cartridge (for Hand-held Printer) 2-1, 3-14,3-15,3-17,7-34

S

Schematic, Impedance Adaptor 9-3, 9-4
Self-Test 1-1, 5-1 thru 5-10, 7-2, 7-33 (Hand-held Printer)
Send Modes 1-2, 3-7, 3-12, 3-13, 6-1, 7-9, 7-30
  Auxiliary Tone (2713 Hz) 1-6, 3-7, 6-9, 7-9, 7-12
  P/AR Waveform 1-5, 3-13, 5-6, 6-1, 7-9, 7-12, 7-14, 7-18, 7-19, 7-36
  Quiet Termination 1-6, 3-8, 3-13, 5-3, 6-6, 6-10, 7-4, 7-9, 7-10, 7-11, 7-16, 7-31, 7-32, 7-36, 7-42, 8-3, 9-2
  Slope, Send (Fixed Tones) 1-5, 3-13, 7-9, 7-12, 7-14, 7-36, 8-6
  Variable Sweep 1-5, 3-7, 3-13, 5-8, 5-9, 5-10, 7-7, 7-12, 7-15, 7-30, 7-36
  Variable Tone, Continuous 1-5, 3-7, 3-13, 7-7, 7-9, 7-12, 7-13, 7-30, 7-36
  Variable Tones, Momentary (10 Frequencies) 3-10, 7-4, 7-5, 7-7, 7-9, 7-10, 7-11
  1004 Hz 1-5, 3-13, 5-4, 5-5, 6-9, 7-9, 7-12, 7-13, 7-17, 7-19, 7-36, 8-3
Service Policy 10-1
SF (Signal Frequency) Skip 1-6, 1-10, 3-7, 7-4, 7-9, 7-15
Signal-to-Noise (S/N) Ratio 1-7, 3-13, 3-14, 5-4, 5-5, 7-4, 7-18, 7-23, 7-24, 7-38, 7-39, 8-4, 8-5
Slope, Send (Fixed Tones) 1-5, 3-13, 7-9, 7-12, 7-14, 7-36, 8-6
Sound-Weighted Filter 1-2, 1-10, 3-12, 3-13, 7-17, 7-35, 8-3
Speaker 1-9, 3-2, 3-5, 3-7, 3-9, 3-14, 5-4, 5-7, 5-8, 6-2, 7-4, 7-31, 9-2
Specifications, Technical 1-3 thru 1-10, 3-15
[Start]/[Stop] Keys 3-10, 3-11, 7-5, 7-18, 7-19, 7-21, 7-22, 7-26, 7-27, 7-28, 7-29, 7-40
Store/Recall 1-4, 3-7, 7-4, 7-6, 7-7, 7-12, 7-30, 7-31, 7-40
Sweep, Variable (Send) 1-5, 3-7, 3-13, 5-8, 5-9, 5-10, 7-7, 7-12, 7-15, 7-30, 7-36
Switches 3-2, 3-5, 3-6, 3-7, 3-8, 3-9, 4-4, 5-2, 7-3, 7-4, 7-9, 7-10, 7-11, 7-12, 7-13, 7-14, 7-15, 7-20, 7-22, 7-23, 7-24, 7-25, 7-27, 7-28, 7-36, 7-37, 7-43, 9-2

INDEX

T

Talking 1-4, 3-9, 3-14, 7-31, 7-32
Technical Specifications 1-3 thru 1-10, 3-15
Termination of Lines 1-9, 3-8, 3-9, 6-5, 6-6, 7-43, 8-2
Theory of Measurements 8-1 thru 8-9
Thresholds 1-8, 7-18, 7-21, 7-22, 7-27, 7-28, 7-29, 7-30, 7-38, 7-40, 8-7, 8-8, 8-9
Time -- see "Duration" and "Elapsed Time"
Timed Tests 3-11, 7-7, 7-18, 7-19, 7-21, 7-35, 7-40, 8-7, 8-9
Time-Off Timer (for Power Shutoff) -- see "Auto Power Shutoff"
Tone, Variable (Continuous) 1-5, 3-7, 3-13, 7-7, 7-9, 7-12, 7-13, 7-30, 7-36
Tones, Variable (10 Momentary Frequencies) 3-10, 7-4, 7-5, 7-7, 7-9, 7-10, 7-11
Touch Tone (DTMF and MF) Level 7-6, 7-7, 7-10, 7-11
Transients 1-8, 3-11, 3-13, 7-18, 7-26, 7-27, 7-38, 8-5

U

Units of Measurement 1-10, 3-12, 8-1, 8-2

V

Variable Parameters -- see "Parameter Values, Setting"
Volatile Memory 7-6, 7-7, 7-9, 7-11
Volume Control 3-2, 3-5, 3-9, 5-4, 5-6, 5-8

W

Warnings 3-9, 4-1
Warranty 4-3, 10-1
Weight 1-9, 3-1, 3-15
2-Wire Connections 3-8, 6-2, 6-5, 6-7, 6-8, 6-9, 6-10, 7-4, 7-16, 9-3
4-Wire Connections 3-8, 6-2, 6-3, 6-5, 6-7, 6-8, 6-9, 6-10, 7-4, 7-43, 9-3

MISC.

1004 Hz, Send 1-5, 3-13, 5-4, 5-5, 6-9, 7-9, 7-12, 7-13, 7-17, 7-19, 7-36, 8-3
3 kHz/15 kHz Noise-Weighting Filters 1-2, 1-7, 1-8, 3-12, 3-13, 7-17, 7-22, 7-24, 7-28, 7-35, 8-3, 9-2
[+/-] Key 3-10, 3-11, 5-8, 7-8
[△]/[▽] Keys 3-10, 3-11, 5-10, 7-5, 7-8, 7-18


FOLDOUT

INDEX

T

Talking 1-4, 3-9, 3-14, 7-31, 7-32
Technical Specifications 1-3 thru 1-10, 3-15
Termination of Lines 1-9, 3-8, 3-9, 6-5, 6-6, 7-43, 8-2
Theory of Measurements 8-1 thru 8-9
Thresholds 1-8, 7-18, 7-21, 7-22, 7-27, 7-28, 7-29, 7-30, 7-38, 7-40, 8-7, 8-8, 8-9
Time -- see "Duration" and "Elapsed Time"
Timed Tests 3-11, 7-7, 7-18, 7-19, 7-21, 7-35, 7-40, 8-7, 8-9
Time-Off Timer (for Power Shutoff) -- see "Auto Power Shutoff"
Tone, Variable (Continuous) 1-5, 3-7, 3-13, 7-7, 7-9, 7-12, 7-13, 7-30, 7-36
Tones, Variable (10 Momentary Frequencies) 3-10, 7-4, 7-5, 7-7, 7-9, 7-10, 7-11
Touch Tone (DTMF and MF) Level 7-6, 7-7, 7-10, 7-11
Transients 1-8, 3-11, 3-13, 7-18, 7-26, 7-27, 7-38, 8-5

U

Units of Measurement 1-10, 3-12, 8-1, 8-2

V

Variable Parameters -- see "Parameter Values, Setting"
Volatile Memory 7-6, 7-7, 7-9, 7-11
Volume Control 3-2, 3-5, 3-9, 5-4, 5-6, 5-8

W

Warnings 3-9, 4-1
Warranty 4-3, 10-1
Weight 1-9, 3-1, 3-15
2-Wire Connections 3-8, 6-2, 6-5, 6-7, 6-8, 6-9, 6-10, 7-4, 7-16, 9-3
4-Wire Connections 3-8, 6-2, 6-3, 6-5, 6-7, 6-8, 6-9, 6-10, 7-4, 7-43, 9-3

MISC.

1004 Hz, Send 1-5, 3-13, 5-4, 5-5, 6-9, 7-9, 7-12, 7-13, 7-17, 7-19, 7-36, 8-3
3 kHz/15 kHz Noise-Weighting Filters 1-2, 1-7, 1-8, 3-12, 3-13, 7-17, 7-22, 7-24, 7-28, 7-35, 8-3, 9-2
[+/-] Key 3-10, 3-11, 5-8, 7-8
[△]/[▽] Keys 3-10, 3-11, 5-10, 7-5, 7-8, 7-18

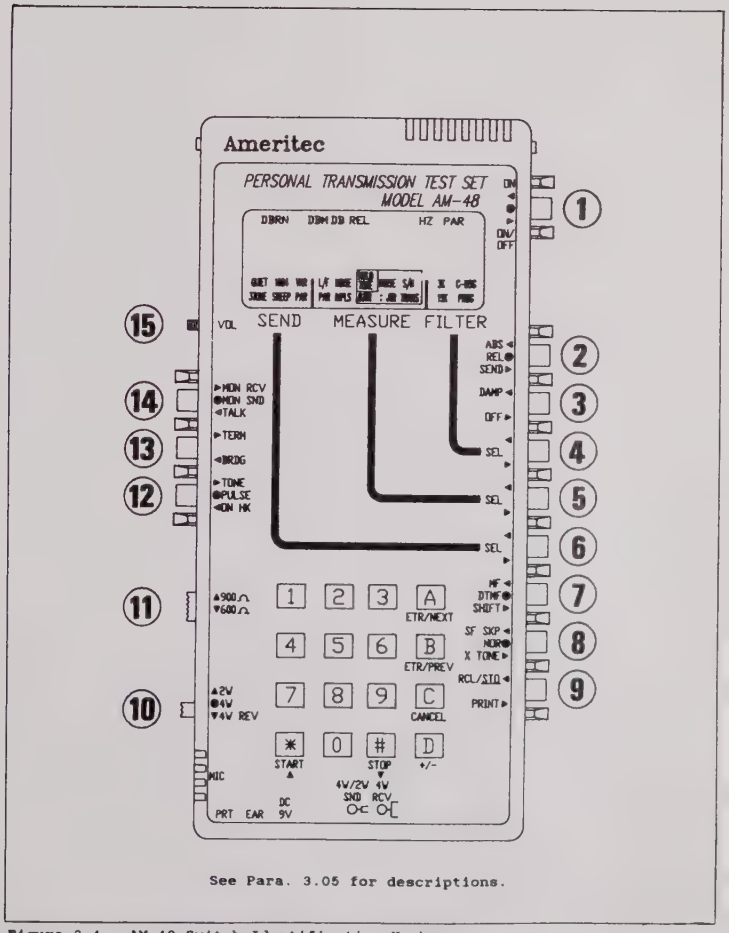

See Para. 3.05 for descriptions.

Figure 3-4. AM-48 Switch Identification Numbers


FOLDOUT

Option 25-0087-A Changes

This Addendum describes the changes to the operation of a unit that has been equipped with the 25-0087-A option. Also included in this Addendum is a general notice concerning a change to the 48-0062 test cable.

1. 50 Hz Send and Measure Accuracy

The AM48 circuits wre originally designed for a lower frequency limit of 200 Hz. At 50 Hz, measurement, the send and measure losses are higher. The tables on pages 1-5 and 1-6 are changed as follows.

(Pg. 1-5) GENERATOR ACCURACY

	50 Hz	200 Hz	15 KHz	20 KHz
+10 dBm	± 0.5	± 0.2	± 0.3	
–40 dBm	± 0.8	± 0.3	± 0.5	
–50 dBm				

(Pg. 1-6) RECEIVER ACCURACY

	50 Hz	200 Hz	15 KHz	20 KHz
+10 dBm	± 0.5	± 0.2	± 0.5	
–40 dBm	± 0.8	± 0.4	± 0.8	
–65 dBm				

2. 13 dBm Send Capability

The unit must be set at 600 Ω impedance in order to transmit a level higher than 10 dBm.

The accuracy of the sending level after being extended from 10 to 13 dBm is ± 0.1 dB.

The measure display is not changed; as is the case with units without this option, the display will read "OVER" for received levels over 10 dBm.

3. 0 dBrn Noise Measurements

The unit must be set at 600 Ω impedance and C-MSG filter. It also must use battery supply; the AC Adaptor can introduce about 6dBrn even at quiet mode.

IMPORTANT NOTICE: The tip and ring colors for the optional 48-0062 cables manufactured after 5/7/92 are GREEN = tip (or A), and RED = ring (or B). This is opposite to what is shown in Figure 3-3, which applies to cables manufactured before 5/7/92. There is a label at the minigator end of the later cables which calls out the color codes. ("T/GRN, R/RED, S/BLK").

AMERITEC CORPORATION
760 Arrow Grand Circle
Covina, California 91722
USA

Telephone (818) 915-5441